



PEREL WC214 Digital Alarm Clock With Mirror Display User Manual

[Home](#) » [PEREL](#) » PEREL WC214 Digital Alarm Clock With Mirror Display User Manual 

PEREL WC214 Digital Alarm Clock With Mirror Display User Manual



Contents

- 1 Introduction
- 2 Symbols
- 3 Safety Instructions
- 4 General Guidelines
- 5 Installation
- 6 Operation
- 7 Maintenance
- 8 Specifications
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

Introduction

To all residents of the European Union Important environmental information about this product



■ This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling. This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules. If in doubt, contact your local waste disposal authorities. Thank you for choosing Perel! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.

Symbols

1. CE marking
2. Read and understand this manual and all safety signs before using this appliance

Safety Instructions

- This device can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.
- Never immerse the clock in water.
- Do not subject to shocks or strong fluctuations of temperature and humidity.
- Do not open the clock and modify the internal circuit.
- Remove the batteries if storing the clock for a long period.

General Guidelines

- Refer to the Velleman® Service and Quality Warranty on www.velleman.eu.
- Protect this device from shocks and abuse. Avoid brute force when operating the device.
- Familiarise yourself with the functions of the device before actually using it.
- All modifications of the device are forbidden for safety reasons. Damage caused by user modifications to the

device is not covered by the warranty.

- Only use the device for its intended purpose. Using the device in an unauthorised way will void the warranty.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.
- Keep this manual for future reference.

Installation

- The clock requires three AAA/R03 batteries as back-up power in case of power interruption. Open the battery compartment of the clock. Insert the batteries observing the correct polarity and re-insert the battery door.
- Connect the clock to a powered USB port using the included USB cable.
- Install the clock in a dry and shady spot, away from direct sunlight or rain.

Operation

Time Setting

- Hold MODE pressed for 2 seconds to enter the setting mode. The digits will flash.
- Set the time with UP/DOWN and confirm with MODE. The setting sequence is:

Alarm Setting

- Hold ALARM pressed for 2 seconds to enter the setting mode. The digits will flash.
- Set the alarm with UP/DOWN and confirm with ALARM. The setting sequence is: hour → minute → snooze time (5-60 min.)
- When the alarm goes off, press SNZ/LIGHT to activate the snooze function, or press any other button to stop the alarm.

Night Mode

- Press MODE twice to enter the night setting mode. The digits will flash.
- Activate/deactivate the night mode with MODE.
- Hold MODE pressed to set the night mode time.
- Set the night time with MODE. The setting sequence is: start hour → start minute → stop hour → stop minute

Display Brightness

- Press UP to select the display brightness level. The setting sequence is: low → high

Temperature/Time Display

- Press MODE until the temperature is displayed.
- Select the temperature unit with DOWN.
- Hold MODE pressed until you hear a beep. The display sequence is: temperature → time → repeat

- Hold MODE pressed again to return to the time display mode.

Maintenance

- Occasionally wipe with a damp cloth to keep it looking new. Do not use harsh chemicals, cleaning solvents or strong detergents.

Specifications

power supply 5 VDC, 1 A

batteries 3 x LR03 (not incl.)

dimensions 82 x 82 x 35 mm


weight 88 g

Use this device with original accessories only. Velleman nv cannot be held responsible in the event of damage or injury resulting from (incorrect) use of this device. For more info concerning this product and the latest version of this manual, please visit our website www.perel.eu. The information in this manual is subject to change without prior notice.

COPYRIGHT NOTICE

The copyright to this manual is owned by Velleman nv. All worldwide rights reserved. No part of this manual may be copied, reproduced, translated or reduced to any electronic medium or otherwise without the prior written consent of the copyright holder

Documents / Resources

	<p>PEREL WC214 Digital Alarm Clock With Mirror Display [pdf] User Manual WC214 Digital Alarm Clock With Mirror Display, WC214, Digital Alarm Clock With Mirror Display, With Mirror Display, Mirror Display</p>
-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [🌐 Details â€œ Own brands â€œ Velleman â€œ Wholesaler and developer of electronics](#)
- [📄 Velleman â€œ Wholesaler and developer of electronics](#)