

Contents [[hide](#)]

- [1 Pergolux PX140 Handheld Wireless Transmitter](#)
- [2 Features](#)
- [3 Parameters](#)
- [4 Installation](#)
- [5 Opetations](#)
- [6 Troubleshooting](#)
- [7 FCC](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Pergolux

Pergolux PX140 Handheld Wireless Transmitter



Features

1. stylish and elegant appearance can be applied to different decoration styles.

2. surface baking piano paint treatment, unique noble.
3. remote control button, high sensitivity, strong anti-interference ability.
4. ultra-thin body, showing simple fashion.
5. high hardness acrylic panel to ensure a flawless appearance.
6. ultra-low power design.
7. universal CR2450 button battery, more convenient to install and purchase.
8. wall type fixed seat, more reliable installation.

Parameters

 
 
Number of channels	RF transmit frequency	RF remote control distance	Transmit power	Transmit current	Standby current	Battery	Working Temp.	Size
PX140-01/02/06/16	433.92MHz	≥50m	≤10mW	≤20mA	≤1uA	CR2450(3V)	-20°C ~ +55°C	130x45x9mm

Installation


1. The minimum distance between the transmitter and ground is 1 -5m.
2. The minimum distance between the receiver and the transmitter is 1m.
3. Do not install on a metal object, or the transmit distance will be affected.
4. Do not install it in a damp and sun exposed place, otherwise the service life will be affected.

Cautions

1. Please observe the following regulations while complying with the effective electricity standards:
2. Transmit range: within 50 meters in open space Avoid static interference, which may damage the electronic components.

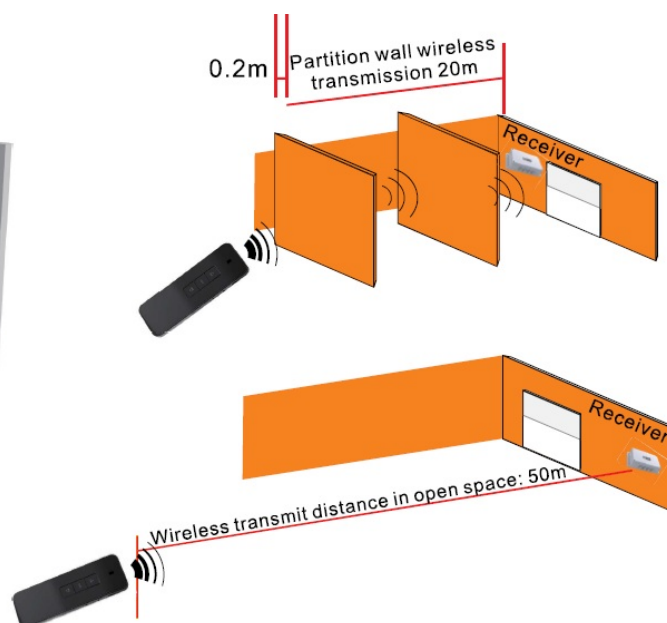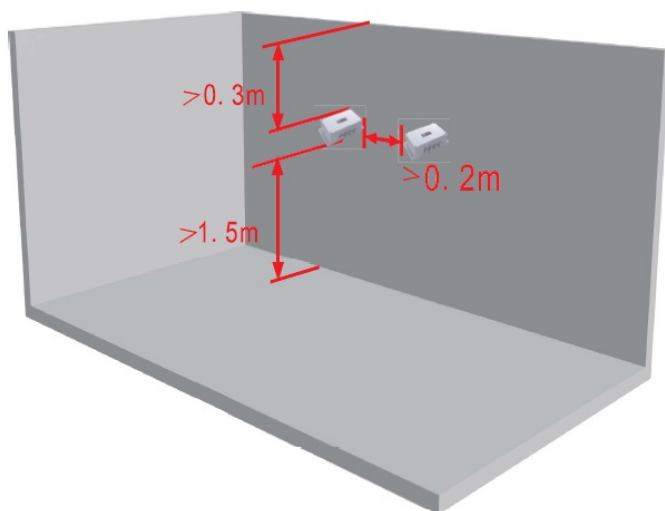

Operations

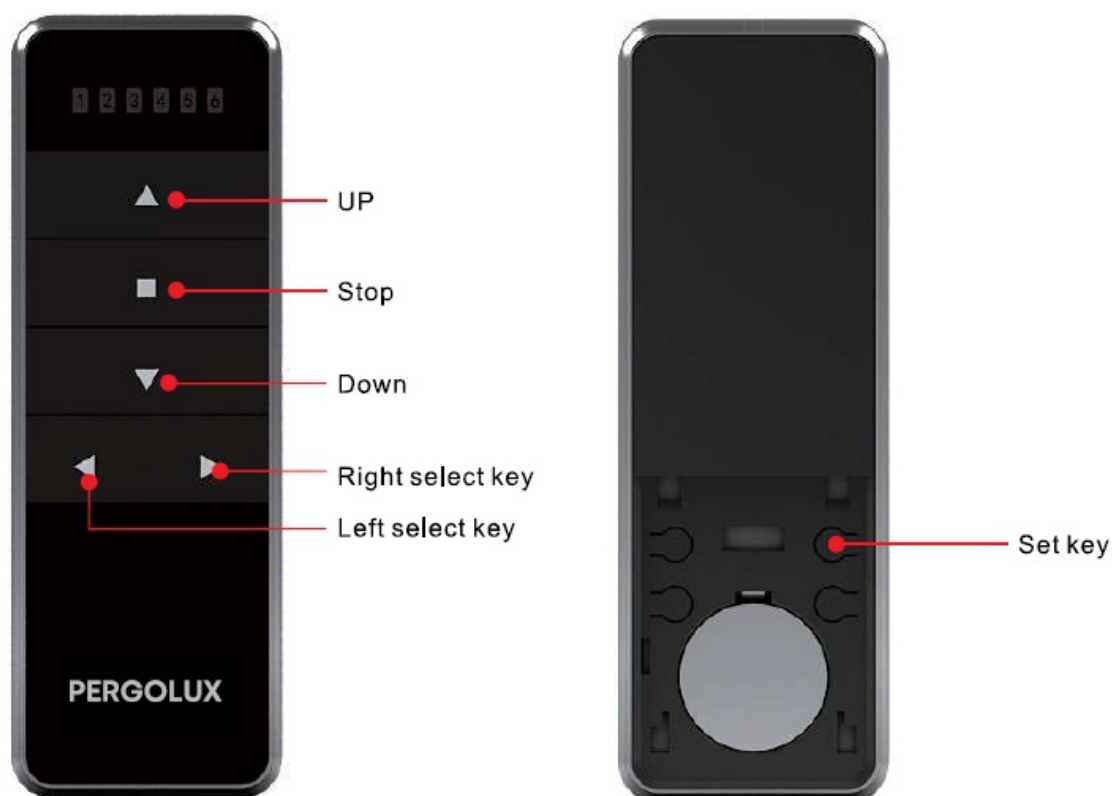 

1. Control

- Make curtain up
- Make curtain stop
- Make curtain down

2. Channel selection

- Right select key: Channel increment
- Left Select key: Channel decrement

3. Frequency locking

- Frequency lock: press the “Stop key” + any “frequency select key” until the indicator lights up (about 1 second) to lock the frequency of the current channel, after locking the current channel is the maximum number of channels of the transmitter, the channel after the current channel will not be available.

Unlock the frequency: under any channel, press the “Stop button” + any “frequency selection key” again until the indicator light is on (about 1 second) to unlock the channel.

Troubleshooting

Problems	Analysis	Solutions
When operating the transmitter, the receiver no act	1.The receiver is not working properly 2.The battery of transmitter is out of power	A.The receiver works normally B.Replace a new battery of transmitter
The receiver is not working properly	The battery of transmitter is out of power	Replace a new battery of transmitter

Cautions

- The statement “Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children.
- Do NOT dispose of batteries in household trash or incinerate.
- The statement “Even used batteries may cause severe injury or death.
- The statement “Call a local poison control center for treatment information.
- A statement indicating the compatible battery type (e.g., LR44, CR2032).
- A statement indicating the nominal battery voltage.
- The statement “Non-rechargeable batteries are not to be recharged.
- The statement “Do not force discharge, recharge, disassemble, heat above (manufacturer’s specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- The statement “Ensure the batteries are installed correctly according to polarity (+ and
- The statement “Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- The statement “Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

- The statement “Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

FCC

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development (ISED) Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

The device has been evaluated to meet general RF exposure requirement.

Documents / Resources

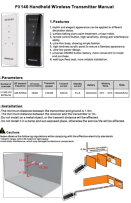	<p>Pergolux PX140 Handheld Wireless Transmitter [pdf] User Manual</p> <p>PX140, 2BEZT-PX140, 2BEZTPX140, PX140 Handheld Wireless Transmitter, PX140, Handheld Wireless Transmitter, Wireless Transmitter, Transmitter</p>
---	---

References

- [User Manual](#)

PERGOLUX

2BEZT-PX140, 2BEZTPX140, Handheld Wireless Transmitter, PERGOLUX, PX140, PX140 Handheld Wireless Transmitter, Transmitter, Wireless Transmitter



Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.