

perixx PÉRIBOARD-213 Wired Compact Scissor Switch Keyboard



perixx PÉRIBOARD-213 Wired Compact Scissor Switch Keyboard User Manual

[Home](#) » [Perixx](#) » perixx PÉRIBOARD-213 Wired Compact Scissor Switch Keyboard User Manual 

Contents

 
 
 
- [1 perixx PÉRIBOARD-213 Wired Compact Scissor Switch Keyboard](#)
- [2 Product Illustration](#)
- [3 FCC Statement](#)
- [4 Important Safety Instructions](#)
- [5 Specification](#)
- [6 Multimedia keys](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



perixx PÉRIBOARD-213 Wired Compact Scissor Switch Keyboard



Product Illustration

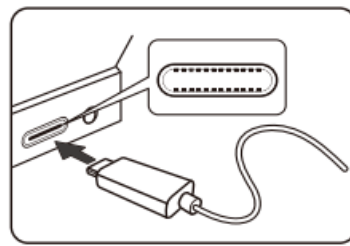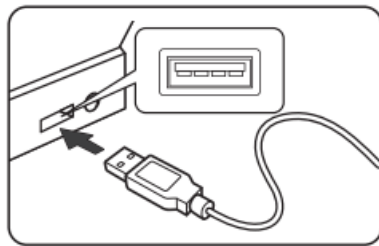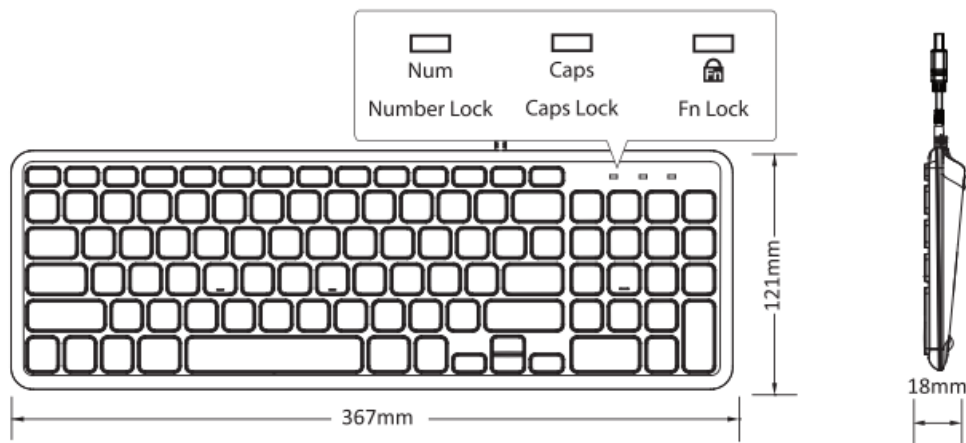

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2:

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Caution

- The manufacturer and re-resellers are not responsible for any technical malfunctions, damage, or personal injury incurred by:
- Any attempt to dismantle, change or modify the product in any manner
- Malfunction or damage is due to misuse or improper alteration or repair.
- Malfunctions or damage caused by external influences such as falling
- Malfunctions or damage is caused by fire, salt, gas, earthquake, lightning, wind, water, or other natural calamities, or abnormal voltage.
- Malfunctions or damage is caused by other devices connected to the products.
- Malfunction or damage is caused by high temperature, humid, greasy, dusty, and hazardous environments.
- You are cautioned that changes or modifications not expressly approved by Perixx Computer GmbH could void your authority to operate the equipment.
- All brand names, trademarks, and logos are the properties of their respective owners.

Please Note: Long-term repetitive use of any keyboard and mouse could cause injury to the user. Perixx recommends users avoid excessive use of this or any keyboard and mouse.

Important Safety Instructions


- Avoid dropping.
- Do not disassemble.
- This product is suitable for moderate climates only.
- The maximum ambient temperature during use of this product must not exceed 40 degrees
- Open flame sources, such as candles, must not be placed on this product.
- Only use a dry cloth or brush to clean this product.

Perixx offers a one-year limited warranty with an optional one-year extension.

Specification


- Interface USB 2.0
- Size 367*121*18mm
- Cable length 1800mm or 1500mm
- Weight 335g
- Material ABS
- Operating system requirements Win 7 or later
- Number of keys 96 keys (US layout)
 - 96 keys (EU layout)
- Type of keyboard Scissor-switch
- Actuation distance 1.8\$0.3mm
- Total travel distance 2.0\$0.3mm
- Durability 3 million key presses

Multimedia keys

 
Please press “Fn + Fn Lock” before using multimedia keys. 

Fn


+

Esc 












→



Fn Lock




Fn Lock is on


F1 	Play/Pause	F5 	Volume Down	F9 	My Favorite
F2 	Previous Track	F6 	Mute	F10 	E-mail
F3 	Next Track	F7 	Home Page	Fn + F11 	Keyboard Lock
F4 	Volume Up	F8 	Search	F12 Prt Scr	Print Screen

Fn


+

Esc 

 →




Fn Lock



Fn Lock is off

Documents / Resources

	perixx PÉRIBOARD-213 Wired Compact Scissor Switch Keyboard [pdf] User Manual P RIBOARD-213 Wired Compact Scissor Switch Keyboard, P RIBOARD-213, Wired Compact S cissor Switch Keyboard, Compact Scissor Switch Keyboard, Scissor Switch Keyboard, Switch K eyboard
---	--

References

- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.