

perixx PERIBOARD-213 Wired Scissor Key Keyboard User Manual

Home » **Perixx** » perixx PERIBOARD-213 Wired Scissor Key Keyboard User Manual



PERIBOARD-213






Contents [hide

- 1 Product Illustration
- 2 Specification
- 3 Documents /

Resources

4 Related Posts

Product Illustration

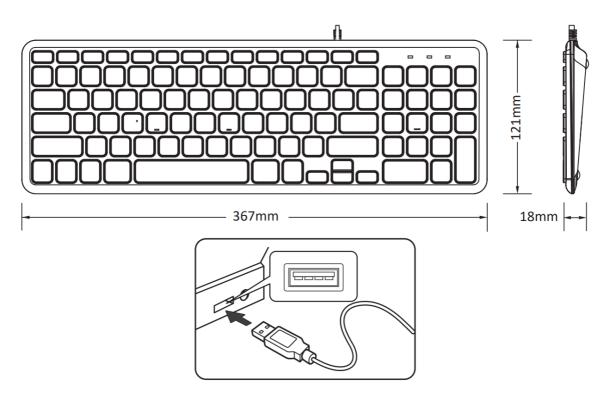

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2:

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Caution

- The manufacturer and re-resellers are not responsible for any technical malfunctions, damage, or personal injury incurred by:
 - ► Any attempt to dismantle, change or modify the product in any manner
 - ► Malfunction or damage due to misuse or improper alteration or repair.
 - Malfunction or damage caused by external influence such as falling
 - ► Malfunction or damage is caused by fire, salt, gas, earthquake, lightning, wind, water, or other natural calamities, or abnormal voltage.
 - ▶ Malfunction or damage is caused by other devices connected to the products.
 - ► Malfunction or damage is caused by high temperature, humid, greasy, dusty, and hazardous environment.
- You are cautioned that changes or modifications not expressly approved by Perixx Computer GmbH could void your authority to operate the equipment.
- All brand names, trademarks, and logos are the properties of their respective owners.

Please Note: Long-term repetitive use of any keyboard and mouse could cause injury to the user. Perixx recommends users avoid excessive use of this or any keyboard and mouse.

Important Safety Instructions

• Avoid Dropping. • Do not disassemble. • Do not exposure to liquids. • This product is suitable for moderate climates only. • The maximum ambient temperature during the use of this product must not exceed 40 degrees. • Open flame sources, such as candles, must not be placed on this product. • Only use a dry cloth or brush to clean this product.

Specification

Interface	USB 2.0	Key number	91
Size	367*121*18mm	Кеу Туре	Membrane
Cable Length	1800mm	Actuation distance	1.80±0.3mm
Weight	335g	Total travel distance	2.0±0.3mm
Material	ABS	Durability	3 million keypresses
OS requirement	Win 7/above		

Fn + ESC > Fn Lock Fn + F1 > Play/Pause Fn + F2 > Previous Track Fn + F3 > Next Track	Fn + F5 > Volume Down	Fn + F9 > Favorite	Fn + F11 > Keyboard Loc k Fn + F12 > My computer
--	-----------------------	--------------------	--

Documents / Resources



perixx PERIBOARD-213 Wired Scissor Key Keyboard [pdf] User Manual perixx, PERIBOARD-213, Wired, Scissor Key, Keyboard

Manuals+, home privacy