

perixx
PERIBOARD725
Wireless Mini
Scissor switch
Touchpad
Keyboard



perixx PERIBOARD725 Wireless Mini Scissor switch Touchpad Keyboard User Manual

[Home](#) » [Perixx](#) » perixx PERIBOARD725 Wireless Mini Scissor switch Touchpad Keyboard User Manual 

Contents

- [1 perixx PERIBOARD725 Wireless Mini Scissor switch Touchpad Keyboard](#)
- [2 Product Overview](#)
- [3 Package Contents](#)
- [4 Specifications](#)
- [5 Installation Instructions](#)
- [6 Troubleshooting](#)
- [7 How do you connect PERIBOARD-725?](#)
- [8 Multimedia keys](#)
- [9 FCC STATEMENT](#)
- [10 FAQ](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)



 
perixx PERIBOARD725 Wireless Mini Scissor switch Touchpad Keyboard



Product Overview

The Periboard-712 is a wireless keyboard designed for efficient and comfortable typing. It features a compact design and is compatible with various devices.

Product Illustration

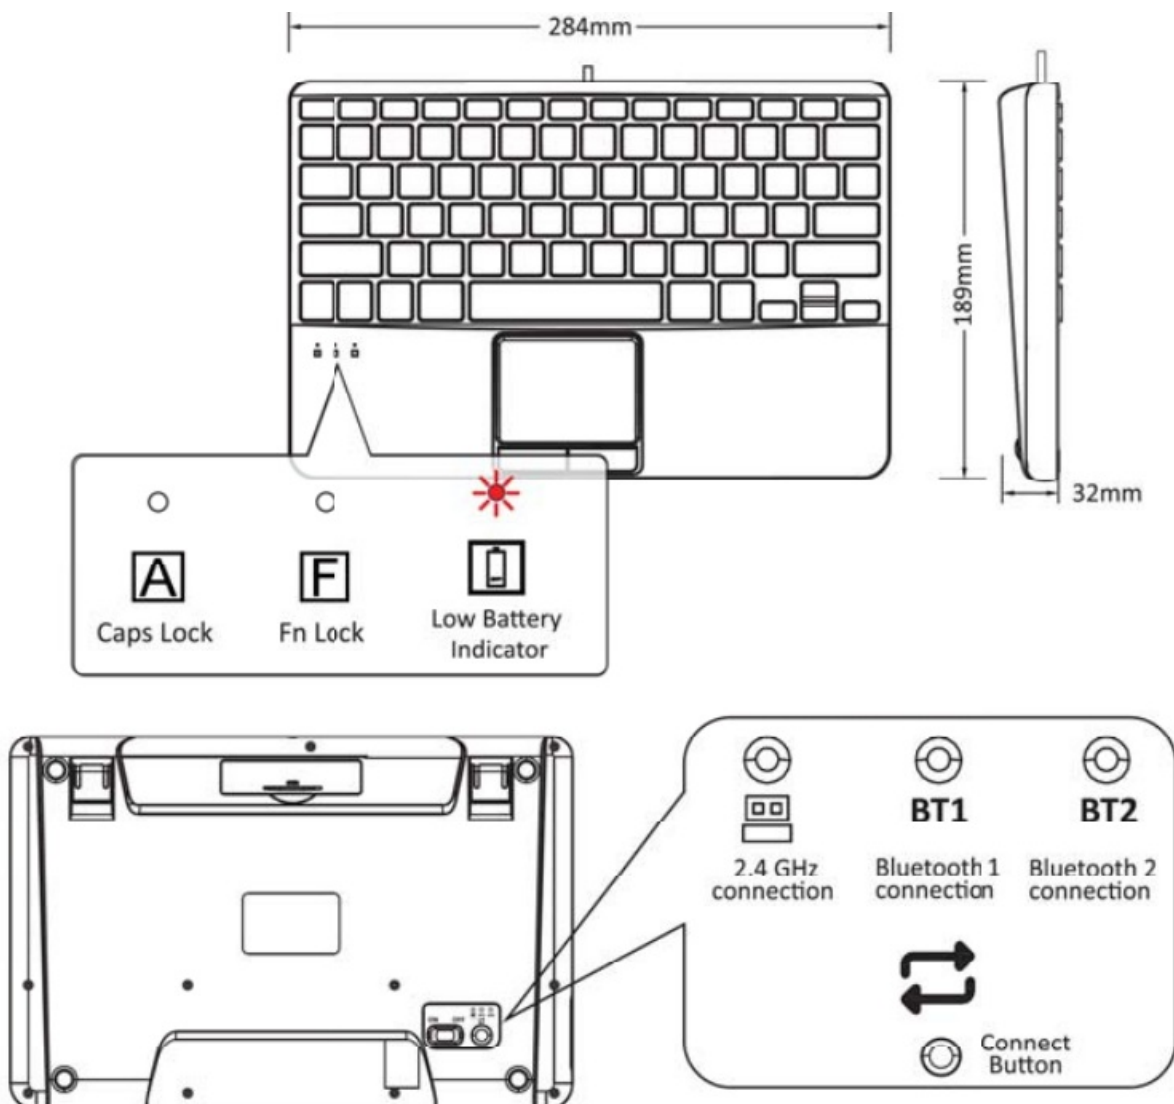

Package Contents

- Periboard-712 Wireless Keyboard
- USB Receiver
- 2 AAA Batteries
- User Manual

Specifications

Specification	Details
Interface	2.4GHz / BT 5.0
Size	284 × 189 × 32 mm
Weight	48410 g
Input Current	3V / 15mA
Battery Required	AAA batteries (2 pcs)
Material	ABS
Operating System Requirements	Windows 7 or later
Number of Keys	78 keys (US layout)
Type of Keyboard	Scissor-Switch
Actuation Distance	1.35 ± 0.1 mm
Total Travel Distance	2.00 +0.30 / -0.2 mm
Durability	3 million keypresses
Operating Temperature	-5°C ~ 45°C
Storage Temperature	-20°C ~ 60°C

Installation Instructions

1. Insert the USB receiver into a USB port on your computer.
2. Insert the 2 AAA batteries into the keyboard.
3. Turn on the keyboard using the power switch located on the bottom.
4. Your computer should automatically recognize the keyboard.

Troubleshooting

- If the keyboard is not responding, ensure the USB receiver is properly connected.
- Check the battery orientation and replace the batteries if necessary.
- Ensure the keyboard is within range of the USB receiver.

Safety Information

Read all instructions before using the keyboard. Do not expose the keyboard to moisture or extreme temperatures.

 
Keep the keyboard out of reach of small children.

Warranty


This product comes with a one-year limited warranty. Please retain your receipt as proof of purchase.

How do you connect PERIBOARD-725?

2.4GHz connection

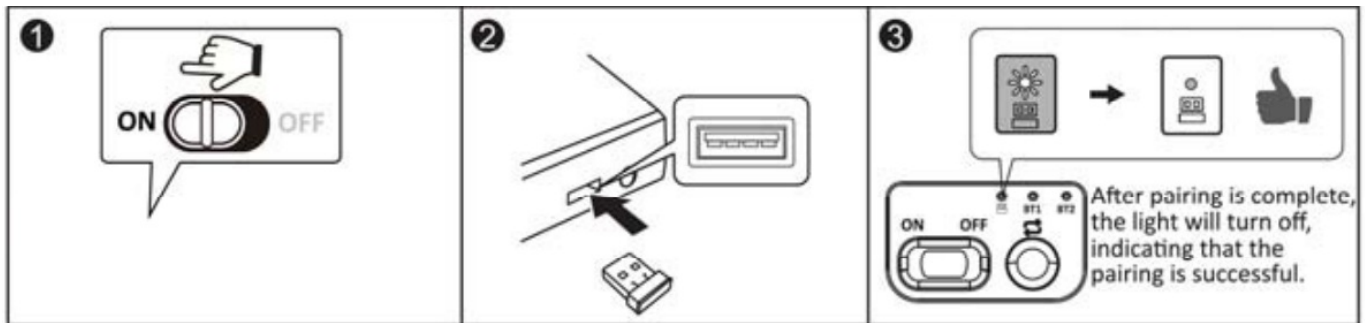

Windows Bluetooth

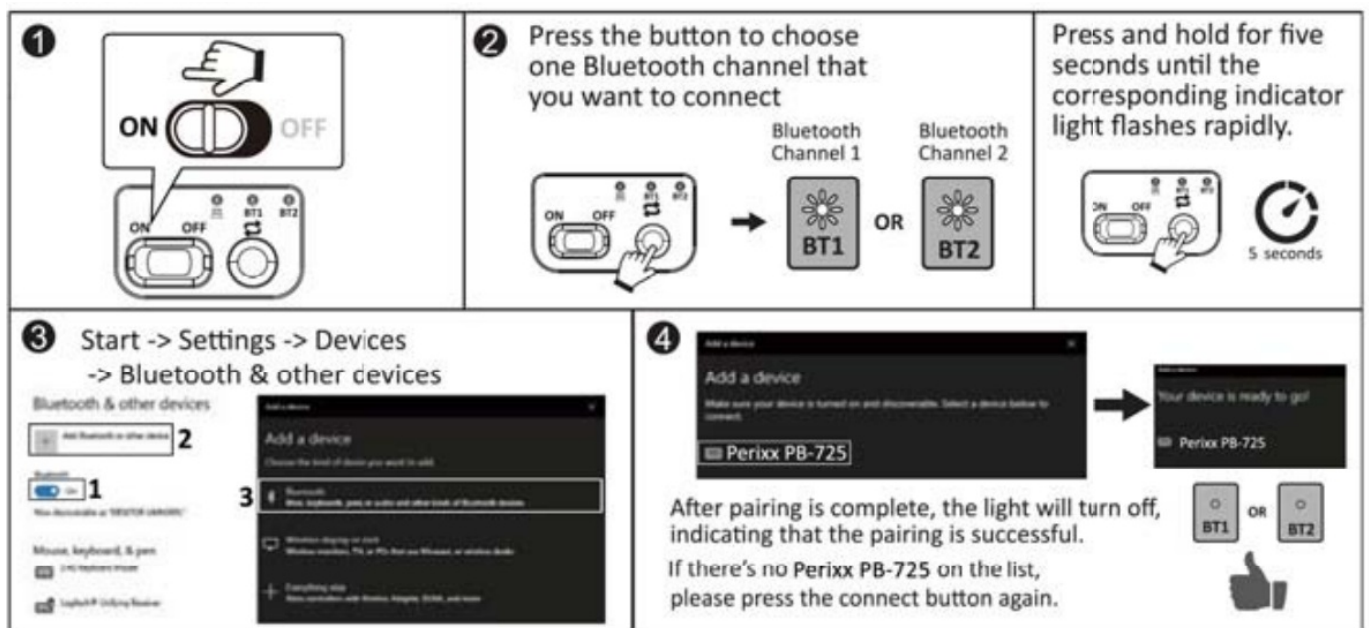 

If the Bluetooth pairing fails, please remove Perixx PB-725 from the list of paired devices and redo it from Step 1.

Caution

The manufacturer and re-resellers are not responsible for any technical malfunctions, damage, or personal injury incurred by:

- Any attempt to dismantle, change or modify the product in any manner
- Malfunction or damage is due to misuse or improper alteration or repair.
- Malfunctions or damage caused by external influences such as falling
- Malfunctions or damage is caused by fire, salt, gas, earthquake, lightning, wind, water, or other natural calamities, or abnormal voltage.
- Malfunctions or damage is caused by other devices connected to the products.
- Malfunction or damage is caused by high temperature, humid, greasy, dusty, and hazardous environments.

- You are cautioned that changes or modifications not expressly approved by Perixx Computer GmbH could void your authority to operate the equipment.
- All brand names, trademarks, and logos are the properties of their respective owners.

Please Note: Long-term repetitive use of any keyboard and mouse could cause injury to the user. Perixx recommends users avoid excessive use of this or any keyboard and mouse.

 
Important Safety Instructions

- Avoid dropping.
- Do not disassemble.
- This product is suitable for moderate climates only.
- The maximum ambient temperature during use of this product must not exceed 40 degree
- Open flame sources, such as candles, must not be placed on this product.
- Only use a dry cloth or brush to clean this product.


Perix offers a one-year limited warranty with an optional one-year extension.

Multimedia keys





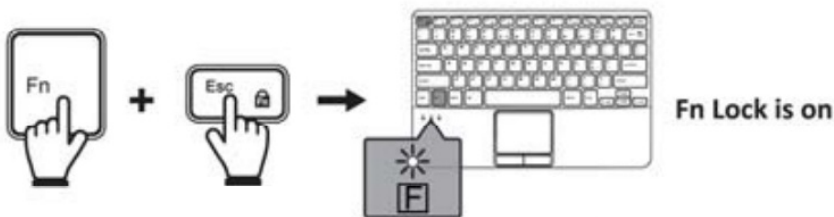


 
Please press “Fn + Fn Lock” before using multimedia keys Fn

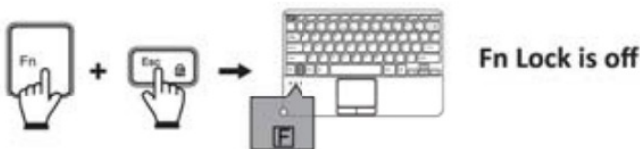

F1 ←	Volume up	F5 ▶	Play/Pause	F10 Scroll Lk	Scroll Lock
F2 ←-	Volume down	F6 ▶▶	Next Track	F11 Pause	Pause
F3 ◀	Mute	F7 🖱	Touchpad on/off	F12 Insert	Insert
F4 ◀◀	Previous Track	F8 Print Sc	Print Screen		

   

Gesture functionality

	Single-finger tap and move: Move the cursor		Three-finger swipe up simultaneously: Open the Mission Control window
	Two-finger swipe outward or inward: Zoom in/out		Three-finger swipe left/ right simultaneously: Switch between active windows
	Two-finger swipe up and down/left and right simultaneously: Scrollbar moves vertically/horizontally		Three-finger double tap quickly: Search
	Three-finger swipe down simultaneously: Back to desktop		Four-finger double tap quickly: Open the active center

FCC STATEMENT

Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2:

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCCID: Z2G-PERIBOARD725

CE Caution

hereby declares that this Product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

- The full text of the EU Declaration of conformity is available at the internet address:
<https://perixx.com/pages/download-user-manual>
- This product is intended for sale and application in a business environment.
- RED Article 10 2-This product can be used across EU member states
- RED Article 10 10-The product is a class 1 product, No restrictions

Ensure that the product has undergone SAR testing at the appropriate distance and complies with the requirements of EN 62479:2010.

- **Frequency Range:** 2405-2474MHz
- **Max.RF Output Power:** 3.11dBm (EIRP)

<https://eu.perixx.com/>

Perixx Computer GmbH

- Heerdter Landstrasse 189e, 40549 Düsseldorf, Germany
- +49-211-569488-00
- **Manufacturer:** Perix Technology (ShenZhen) Co., Ltd.
- **Address:** HA509-510 JuChuang/inGu Building, Xinguang Road 43, Xili Street, Nanshan District, Shenzhen City, China
- **Customer Service:** shop@perixx.com

FAQ

How do I connect the keyboard to my computer?

Insert the USB receiver into your computer and turn on the keyboard.


What should I do if the keyboard is not working?

Check the USB connection, replace the batteries, and ensure the keyboard is within range.

Is the keyboard compatible with Mac OS?

Yes, the keyboard is compatible with both Windows and Mac OS.

Documents / Resources

	<p>perixx PERIBOARD725 Wireless Mini Scissor switch Touchpad Keyboard [pdf] User Manual</p> <p>Z2G-PERIBOARD725, Z2GPERIBOARD725, periboard725, PERIBOARD-525 Wireless Mini Scissor switch Touchpad Keyboard, PERIBOARD-525, Wireless Mini Scissor switch Touchpad Keyboard, Mini Scissor switch Touchpad Keyboard, Scissor switch Touchpad Keyboard, switch Touchpad Keyboard, Touchpad Keyboard, Keyboard</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.