 


PETKIT CT-W3 Eversweet Max Wireless Cat Drinking Fountain

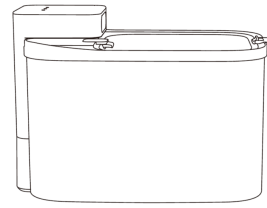

PETKIT CT-W3 Eversweet Max Wireless Cat Drinking Fountain User Manual

 
[Home](#) » [PETKIT](#) » PETKIT CT-W3 Eversweet Max Wireless Cat Drinking Fountain User Manual 

Contents

- [1 PETKIT CT-W3 Eversweet Max Wireless Cat Drinking Fountain](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions \(FAQ\)](#)
- [5 PRODUCT LIST](#)
- [6 PRODUCT DESCRIPTION](#)
- [7 PRODUCT INSTALLATION](#)
- [8 HOW TO USE](#)
 - [8.1 Usage Modes](#)
- [9 FUNCTION DESCRIPTION](#)
 - [9.1 Power Supply Options](#)
- [10 CLEANING AND MAINTENANCE](#)
- [11 VIDEO GUIDE](#)
- [12 BASIC SPECIFICATIONS](#)
- [13 Disposal](#)
- [14 A MESSAGE TO OUR VALUED CUSTOMERS](#)
- [15 USER SAFETY GUIDE](#)
- [16 FCC warning](#)
- [17 Documents / Resources](#)
 - [17.1 References](#)
- [18 Related Posts](#)

PETKIT™

PETKIT CT-W3 Eversweet Max Wireless Cat Drinking Fountain

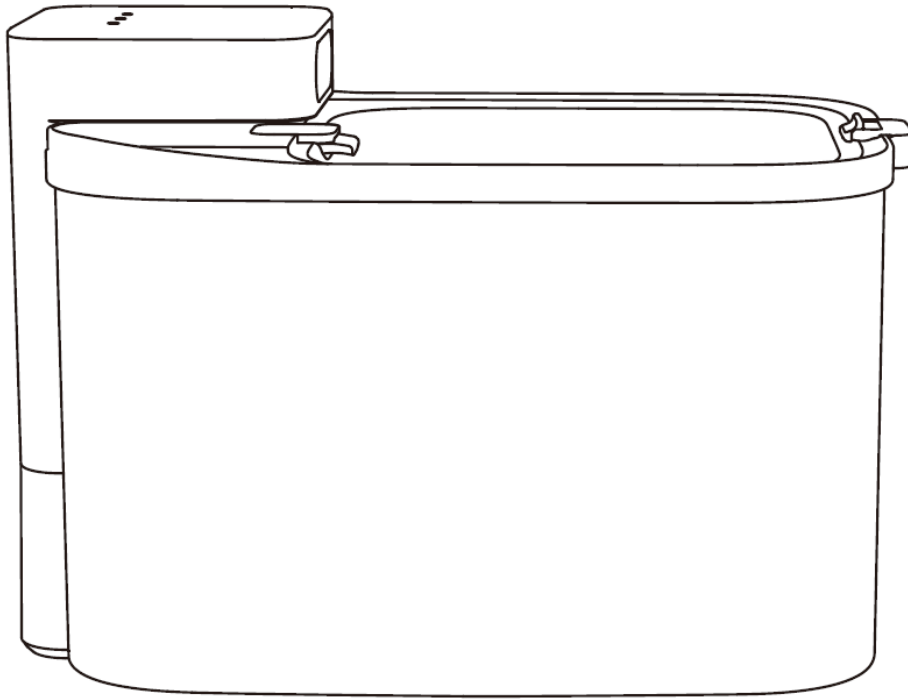

Product Information

Specifications

- Main Unit
- Outlet Pipe
- Filter
- Wireless Water Pump
- 2 in 1 Cleaning Brush
- Power Cord
- User Manual

Product Usage Instructions

Product Installation

1. Take out the control module vertically upwards.
2. Unlock the latch and take out the stainless steel water tray.
3. Take out the lid and filter holder.
4. Put the water pump into the groove in the water tank, and then insert the outlet pipe into the water outlet above the wireless water pump. Make sure the outlet pipe is installed to the end.
5. Put the lid, place filter holder as shown in the picture, and put the filter in its holder. Before using the filter, please read the instructions on the filter package carefully.
6. Add water to the water tank up to the position of the MAX line.
7. Insert point A of the water tray under the outlet, and pull the latch outward to secure the other side of the water tray.
8. Insert the control module vertically into the base, and the installation is complete.

How to Use

1. This product offers two power supply options. You can choose between plug-in mode or cordless mode.

2. Plug-in Mode:

- Remove the control module, open the silicone plug, and insert the power cord into the power input at the bottom of the control module.
- Vertically insert the control module back to its base and plug in.
- Press the button to switch between normal mode (solid blue for continuous flow) and intermittent mode (solid green for intermittent flow).

Frequently Asked Questions (FAQ)

• How often should I replace the water pump?

 
The service life of the water pump may vary depending on usage and maintenance. Replace the water pump with a new one if necessary.

• Can I rinse or soak the components inside the wireless base and control module?

No, do not rinse or soak these components as it may damage them.

PRODUCT LIST

* Please ensure that all accessories are present before installation and use.

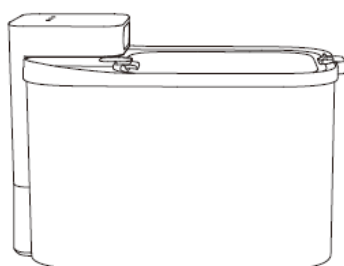


Main Unit



Outlet Pipe



 Filter

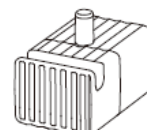


Wireless Water Pump ①



2 in 1
Cleaning Brush



 Power Cord




User Manual



Note:

- The water pump works continuously in normal mode. The service life of the water pump may vary depending on different usage and maintenance. Replace the water pump with a new one if necessary.
- **Note:** In order to enhance the user experience, periodic product improvements may be implemented. The product images shown are for illustrative purposes only. The actual product may vary from the image displayed on the packaging. For any inconsistencies, please refer to the actual product.

 PRODUCT DESCRIPTION

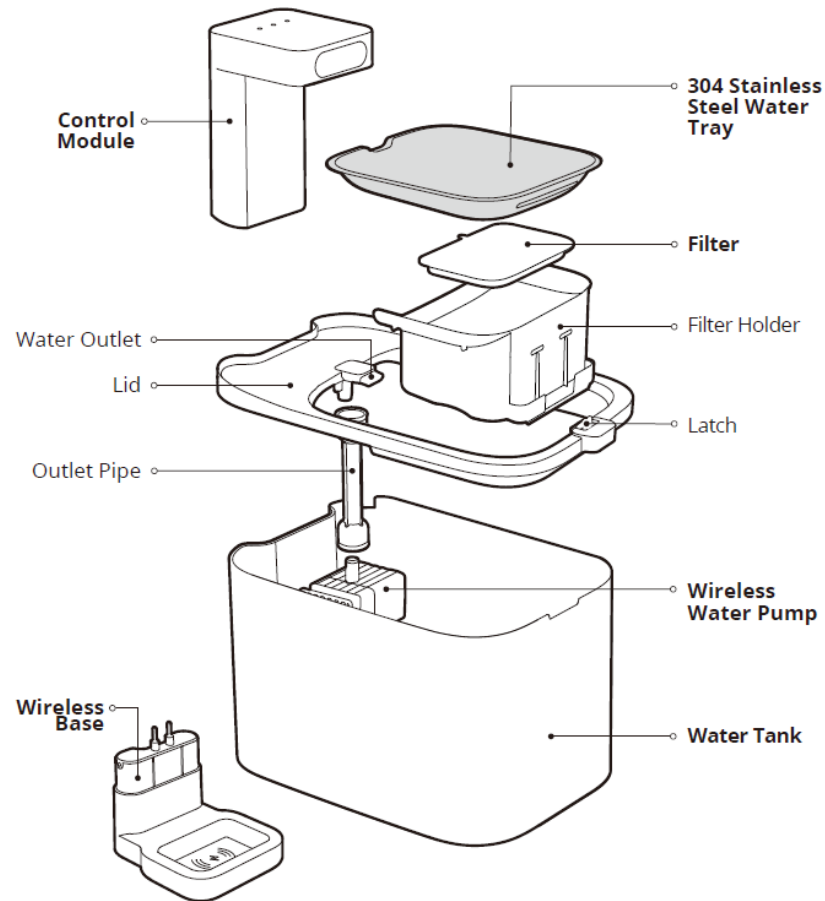


  Caution: There are components inside the wireless base and control module. Do not rinse or soak them.

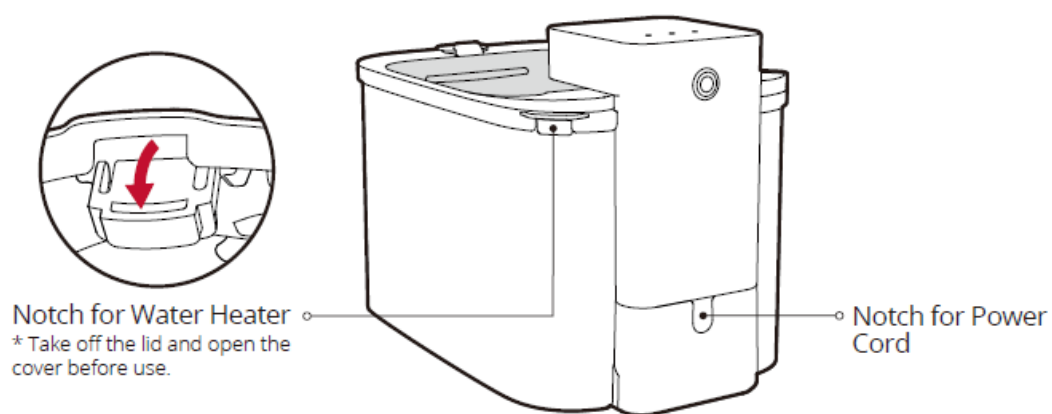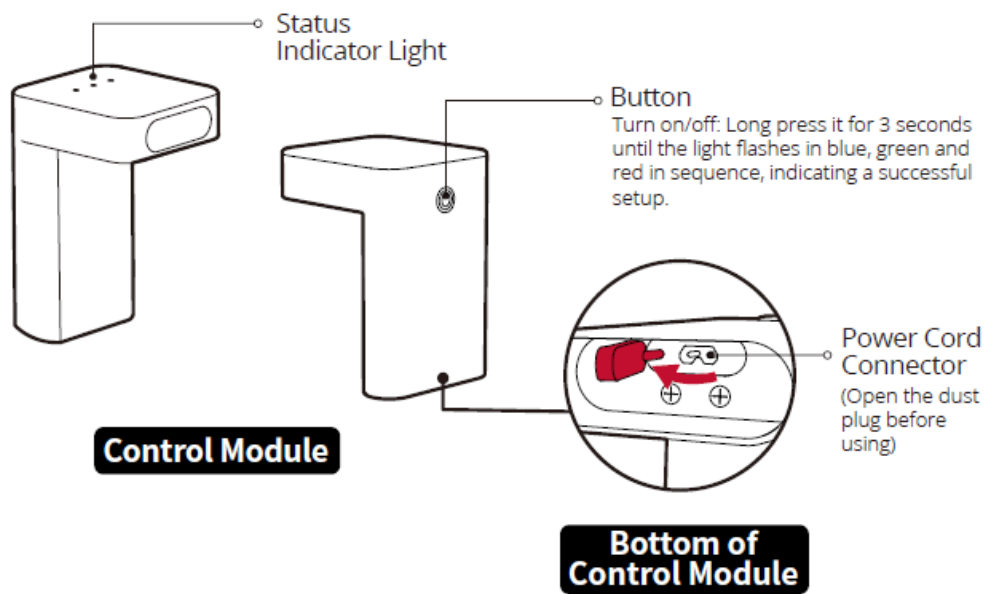


PRODUCT INSTALLATION

 1. Take out the control module vertically upwards.
2. Unlock the latch and take out the stainless steel water tray.

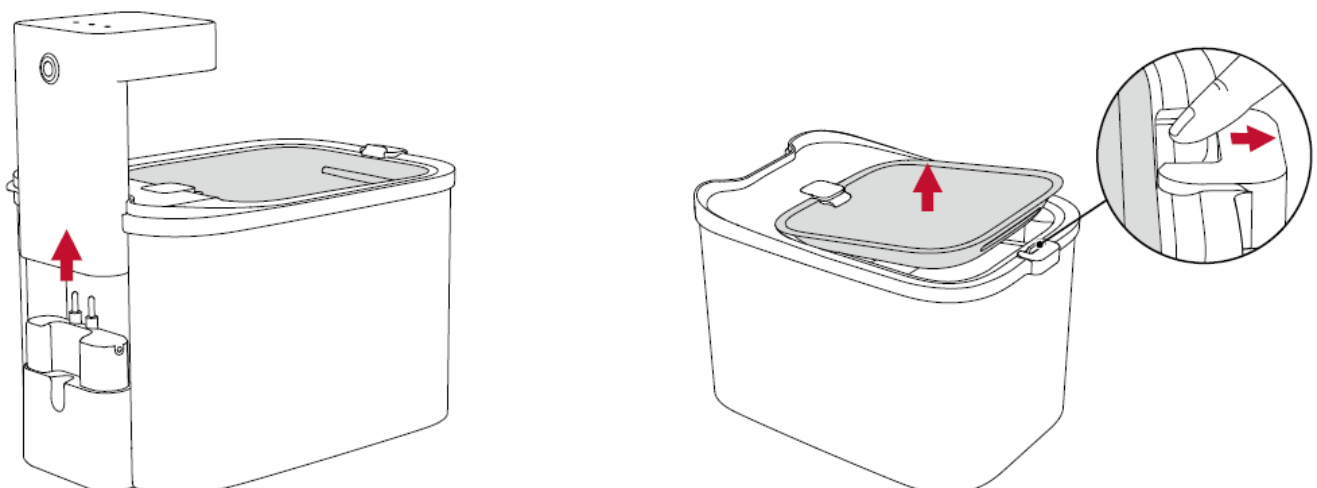


 3. Take out the lid and filter holder.
4. Put the water pump into the groove in the water tank, and then insert the outlet pipe into the water outlet above the wireless water pump.


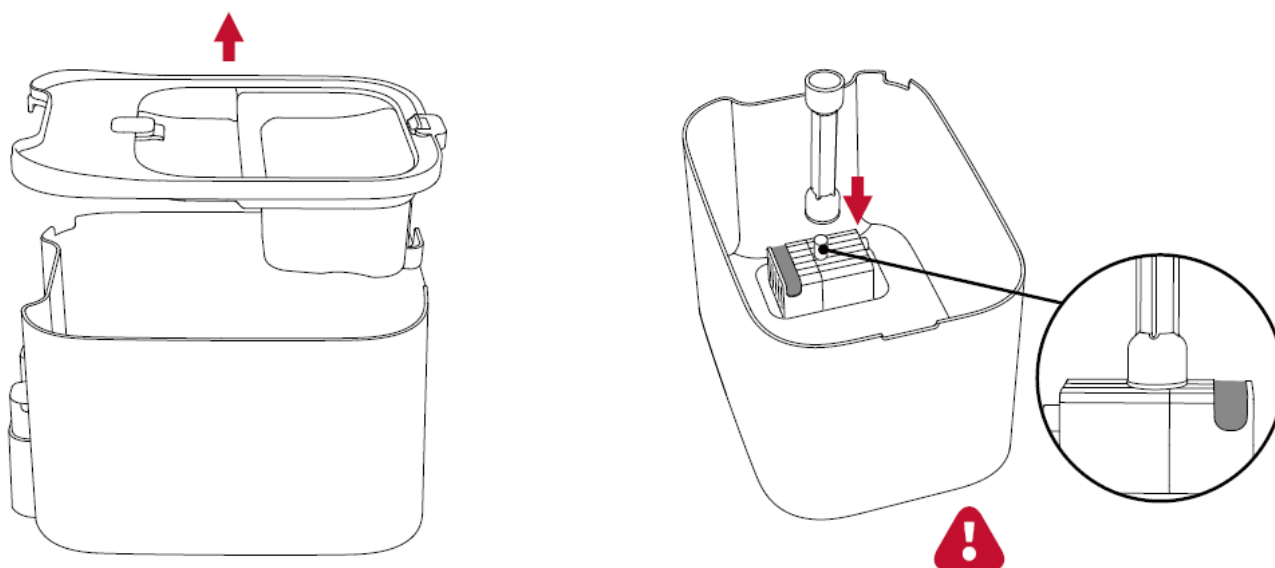


Note: Make sure the outlet pipe is installed to the end.

 5. Put the lid, place filter holder as shown in the picture, and put the filter in its holder.
(* Before using the filter, please read the instructions on the filter package carefully.)
6. Add water to the water tank up to the position of the MAX line.

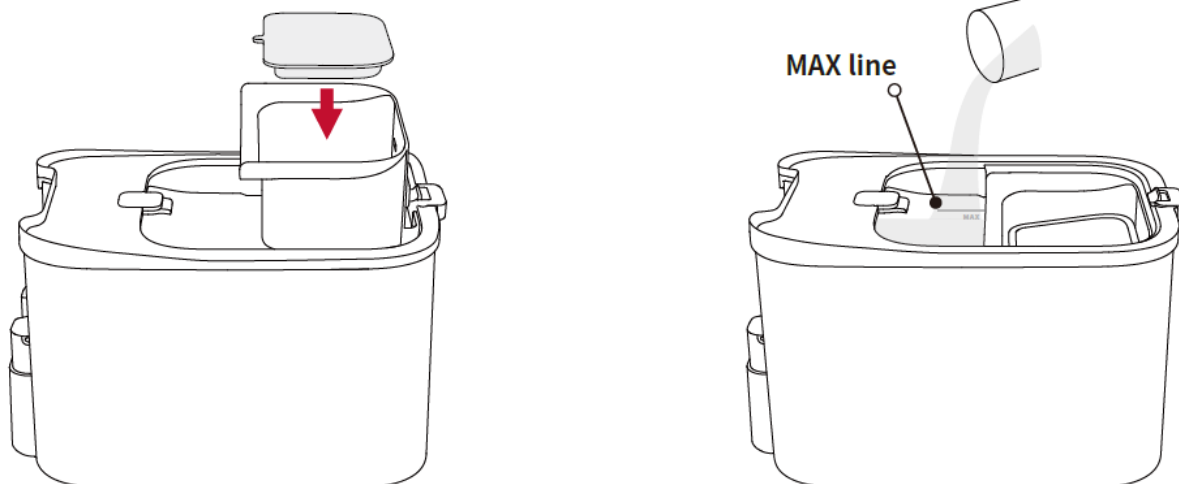

  7. Insert point A of the water tray under the outlet, and pull the latch outward to secure the other side of the water tray.
8. Insert the control module vertically into the base, and the installation is complete.

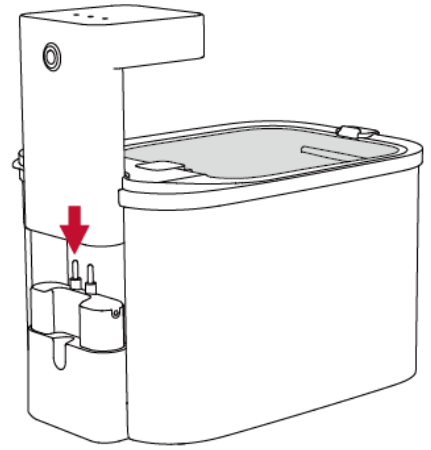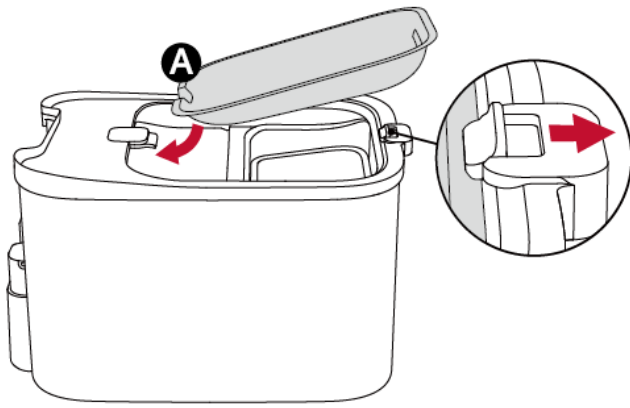



HOW TO USE

Usage Modes


This product offers two power supply options, and you can choose according to your needs.

Plug it in

  1. Remove the control module, open the silicone plug, and insert the power cord into the power input at the bottom of the control module.
2. Vertically insert the control module back to its base and plug in.

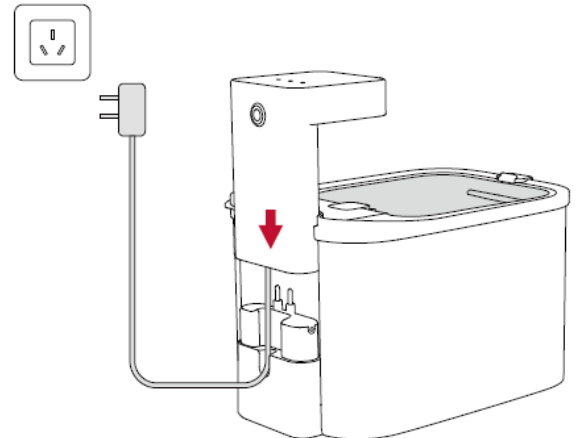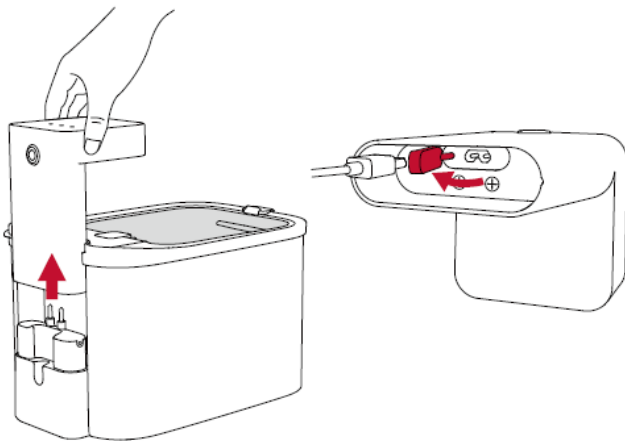

 3. Press the button to switch water dispensing modes.

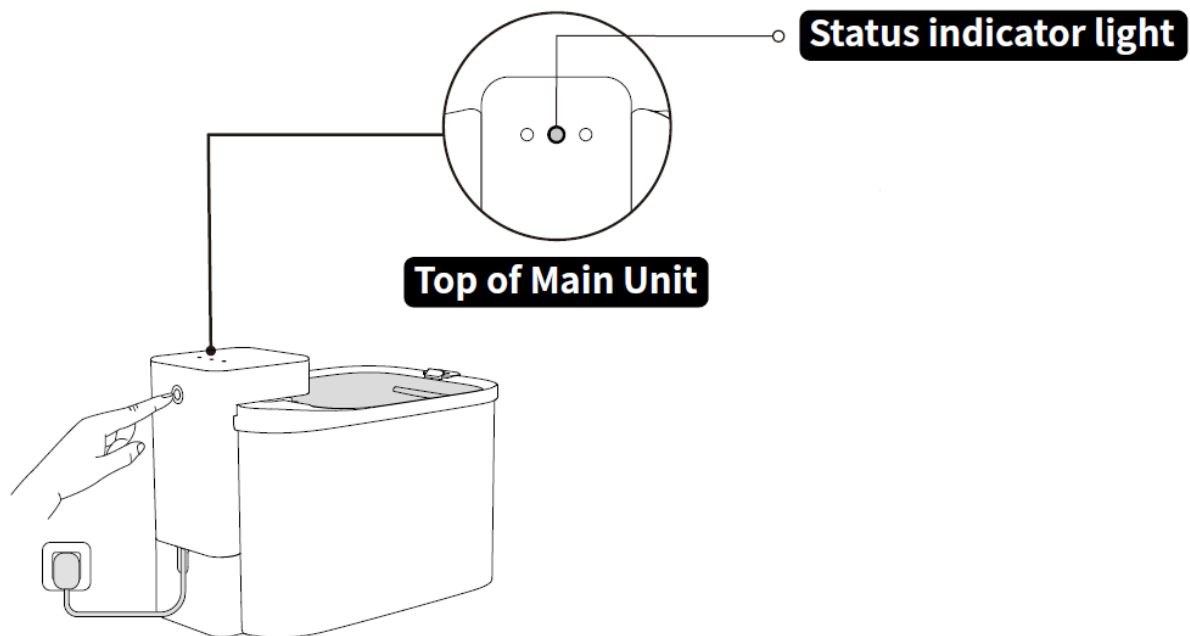

1. Normal Mode

Solid blue: Continuous flow

 
2. Intermittent Mode

Solid green: Intermittent flow

(Customize water dispensing frequency in the App. The default setting is to dispense water for 3 minutes and stop for 3 minutes.)

Unplug (powered by built-in battery)

1. Remove the control module, and plug the power cord into its connector to charge the control module.
2. The solid blue or green light indicates full charging. Unplug it, cover the silicone plug, and insert the control module into the base vertically.

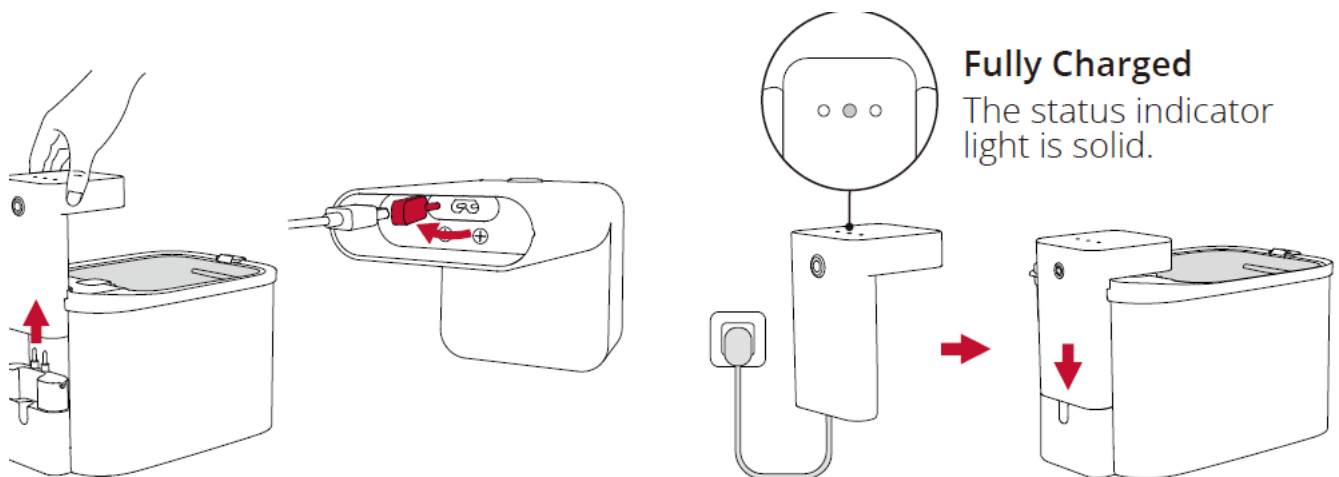


3. Switching water dispensing mode is not available in battery mode.


(To preserve the battery's service life, the water is pumped for 25 seconds per hour by default.) dispense frequency can be set by clicking

"Energy management" in the PETKIT App. Please note that high frequency of pumping water will shorten the battery life. To provide you with the best possible user experience, unscheduled optimization will be performed on software and its functions. Please refer to the real features in the App.

 4. The case that the status indicator light flashes in red shows low battery power. Please plug in to charge the control module.

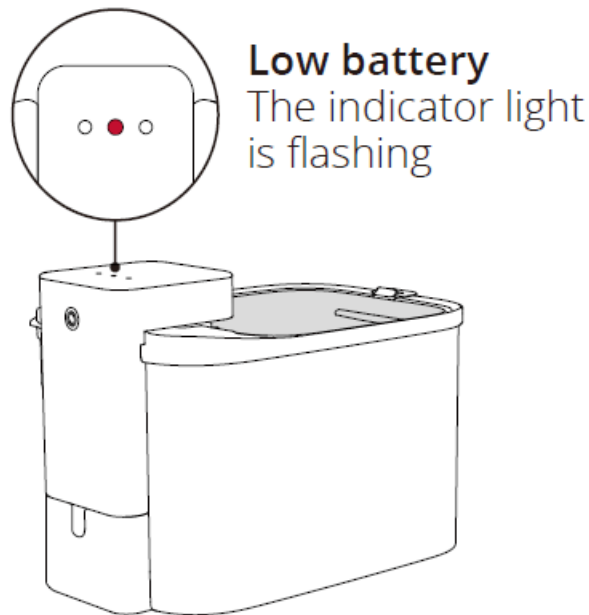

Indicator Description

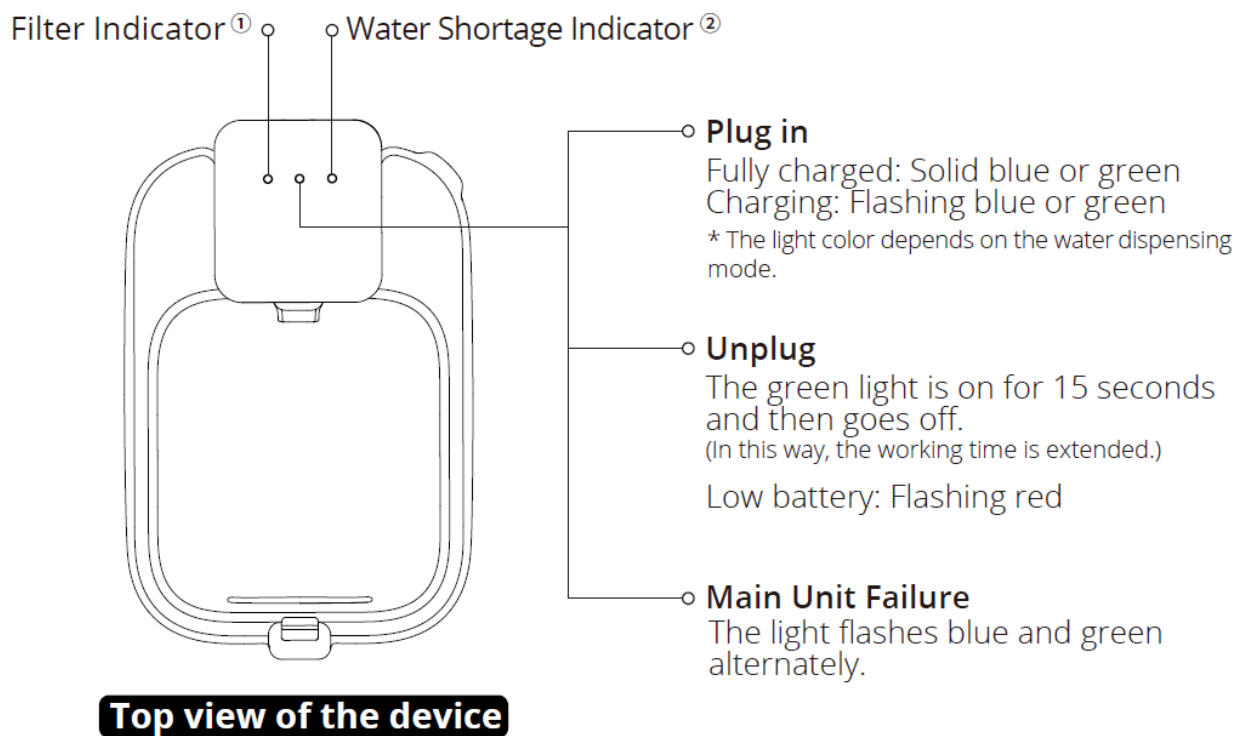 


1. Flashing red means that the filter needs to be replaced. Please reset in the App after replacement, then the indicator will go off. (Water fountain in normal operation)
2. Flashing red means water shortage. The indicator will go off after refilling water. (Water fountain in normal operation) Filter Indicator ① Water Shortage Indicator ②

* When the control module is removed, indicator lights of filter and water shortage are solid red. When the control module is reassembled, the two lights will go off.

Device Binding

 1. Download and Install PETKIT App:

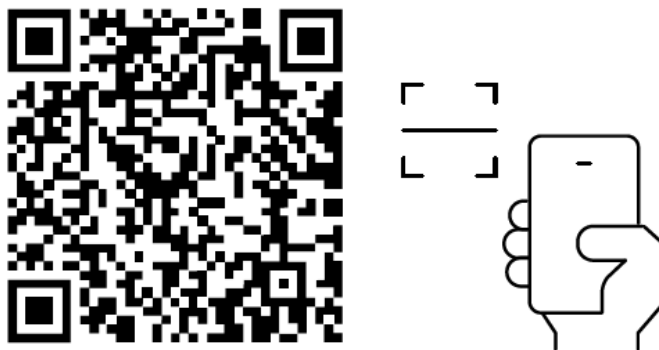

Download the PETKIT App in the App Store or Google Play

2. Add the device

 
Open the PETKIT App and click “+” in the top right corner to add “PETKIT EVERSWEET MAX (CORDLESS)”.



Note: To enhance user experience, product firmware will be upgraded periodically. Please update the firmware timely in the App. The actual App interface prevails.

3. Connection

The App will start to connect to the device. Please wait until the connection is successful.

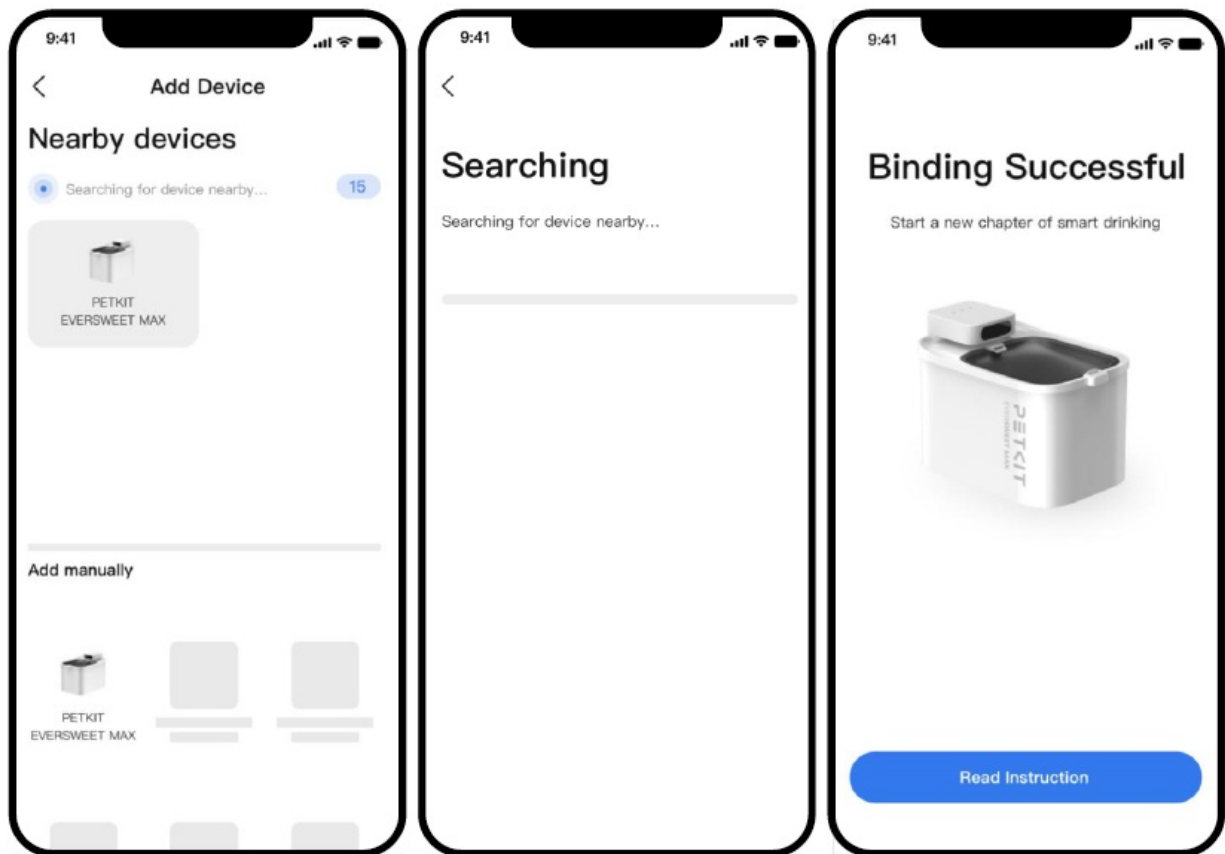

Note: To enhance user experience, product firmware will be upgraded periodically. Please update the firmware timely in the App. The actual App interface prevails.

FUNCTION DESCRIPTION

Power Supply Options

This device has two power supply options.

- **Plug it in:** Continuous flow and intermittent flow are optional.
- **Unplug (battery-powered):** Switching water outlet modes is not available.

Plug it in

After connecting the device via Bluetooth, you can switch between the two modes according to your needs. You can also pause water dispensing on the App.

Note: The device will automatically resume work after a 10-minute pause to ensure water is always available for your pets.

-  **Standard Mode**

 
The device dispenses water continuously. (This mode is only supported when plugging in)



- Intermittent Mode

The device dispenses water intermittently.


The water dispensing frequency can be modified through energy management. (This mode is only supported when plugging in)

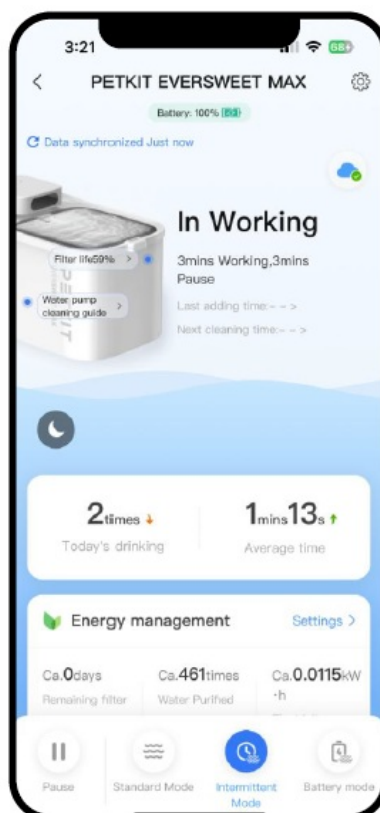

Unplug (battery-powered)


Once unplugged, the device will be powered by the built-in battery. The default setting is to dispense water for 25s and stop for one hour, and you can modify the frequency in energy management as needed. The battery life will be

 affected by the frequency of water dispensing.

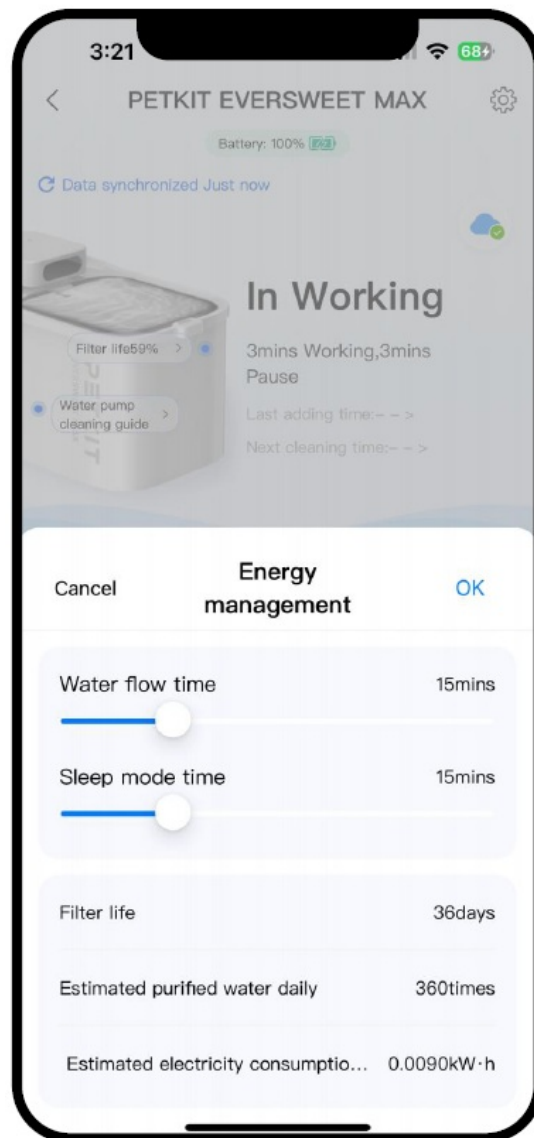

Homepage of Device

 On the homepage, you can view the number of times and average duration of drinking that day, as well as online status of device, filter life, energy management, etc.


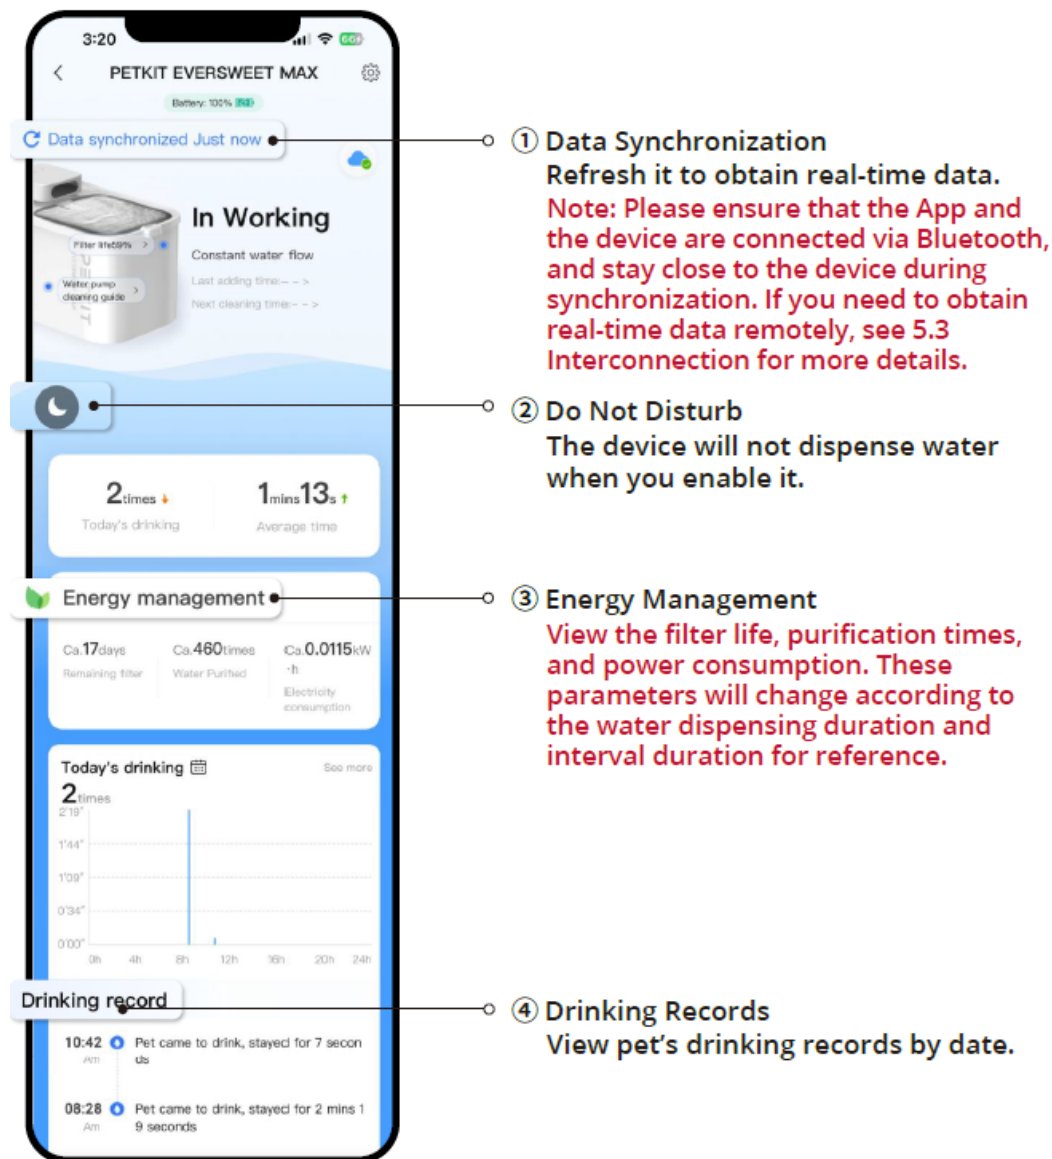


Interconnection

Through the interconnection, you can remotely control the device, receive water shortage notification, etc, so that you can know the working status of the device at any time.

How to interconnect

  
- This device can be connected to a master device via Bluetooth. When connecting, make sure that the distance between the device and the master device is within 8 meters and no obstacles are blocking the signal. Additionally, the master device must be updated to the latest version.
- The master device that supports interconnection: PETKIT self-cleaning cat litter box series and PETKIT smart feeder series.
- The master device that doesn't support interconnection: PETKIT FRESH ELEMENT smart pet feeder (model is P512), PETKIT FRESH ELEMENT Mini smart pet feeder (model is P530).

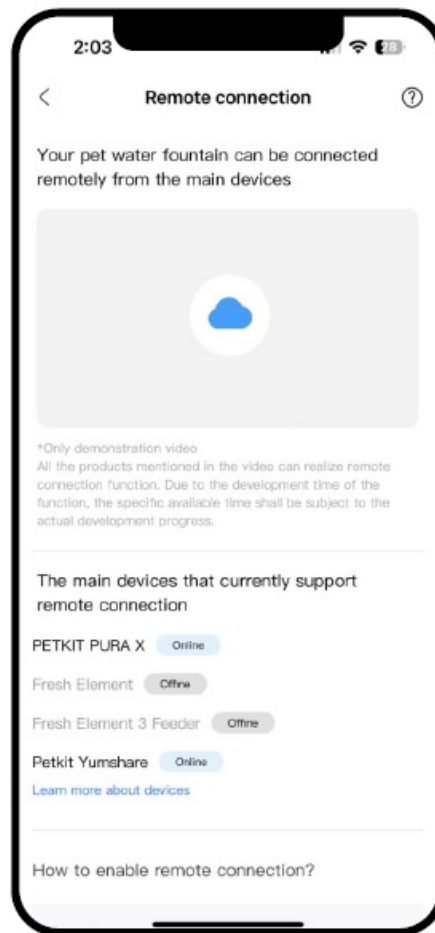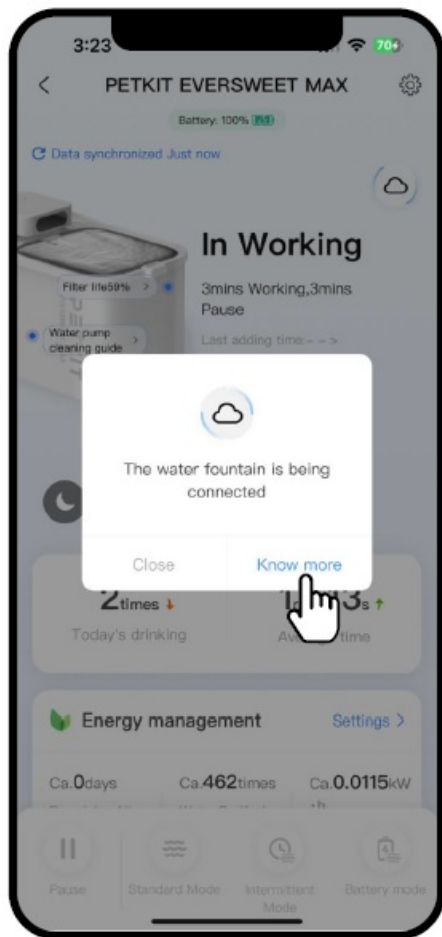


CLEANING AND MAINTENANCE

The cleaning frequency is based on pet's habits and water quality. To ensure healthy drinking water for pets, it is recommended to clean the water tank at least once a week and clean thoroughly once a month. (View 06 for the video about cleaning and maintenance)

 1. Remove the control module and the wireless base, and wipe them with a dry cloth or slightly damp cloth.
Please do not immerse them in water.

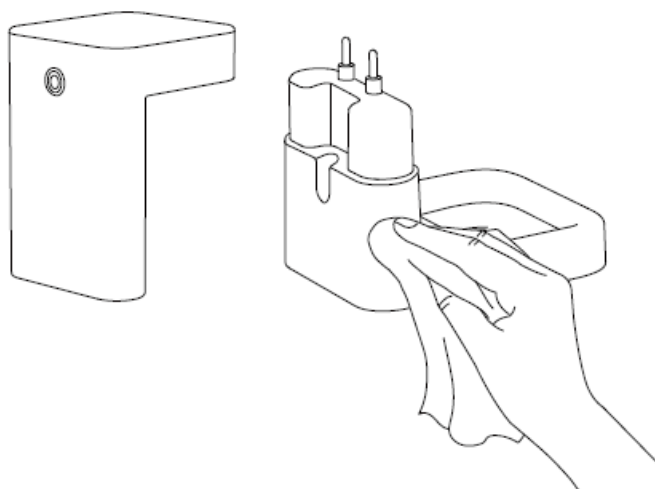

 2. Clean the lid, water tray, filter holder, water tank, outlet pipe, and wireless water pump.

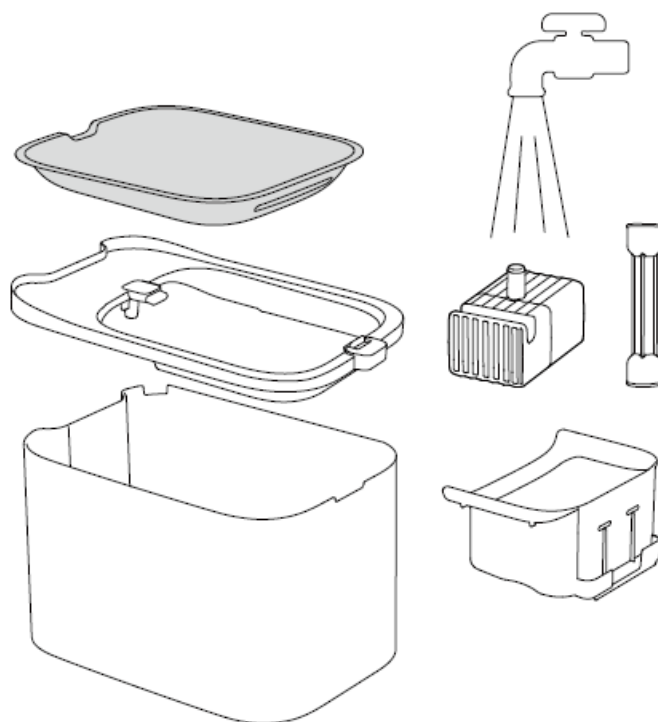

VIDEO GUIDE

1. Installation & Usage Video

Please copy the video URL and open it in your browser to watch the video. https://youtu.be/hV9a_9ug4eE

2. Maintenance & Cleaning Video

Please copy the video URL and open it in your browser to watch the video. <https://youtu.be/IGwNxiT1qQg>

BASIC SPECIFICATIONS

Name	PETKIT EVERSWEET MAX (CORDLESS)	
Model	P4115	
Material	ABS, 304 Stainless Steel	
Dimensions	265*171*191mm (10.4*6.7*7.5in)	
Capacity	3L (101oz)	
Weight	About 1.2kg (2.6lb)	
Rated Input	5V 1A	
Connection	Bluetooth	
Scope of Application	Cats and small-breed dogs	

Disposal

The European directive 2012 / 19 / CE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on

the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

A MESSAGE TO OUR VALUED CUSTOMERS

- Thank you for choosing the PETKIT EVERSWEET MAX (CORDLESS).
- It is important to read and follow the User Manual before using the product.
- Once installed or used, it means that you have carefully read and accepted the following safety instructions.
- PETKIT is not liable for any accidents or injuries resulting from improper use of the product.
- PETKIT reserves the rights of interpretation and revision.

USER SAFETY GUIDE

* Failure to follow the safety guides outlined below can result in product malfunction or other unforeseen mishaps.

- Please install and use the product as instructed in the User Manual.
- Pets under three months of age are not recommended to use this product.
- The product is for indoor use only. Avoid direct sunlight exposure and keep it away from open flames.
- Use only the original adapter to avoid device damage or safety hazards.
- Place the device on a level surface. Do not knock over the device, otherwise it will not work properly or spill water.
- Do not rinse or soak the base and the control module.
- Avoid damage to the pump during daily cleaning and maintenance. The case that you drop it accidentally may cause the internal ceramic shaft to break, resulting in product damage.
- Please note that this product operates on safe low voltage, but pets chewing on the wires may still pose a risk of electrical leakage. We recommend taking measures to prevent this, such as securing and hiding the power cord when using the product. If you find your pets chewing the cord, please stop them promptly.
- Please handle it with care, otherwise it may cause damage to the product.
- If you are not using or moving the product for an extended period, it is recommended to unplug the power cord.
- Children should use this product under the supervision and guidance of adults.
- Repairs should only be performed by professionals to avoid safety hazards.
- Before leaving for an extended period, ensure that there is sufficient water in the water tank.
- If you encounter any issues with the product, please contact our customer service for assistance.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. this device must accept any interference received, including interference that may cause undesired operation.

FCC warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

IC warning


This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Service center and distribution

- Reedog, sro
- Sedmidomky 459/8 101
- 00 Prague 10
- **Phone:** +1 646 980 4569
- **Email:** info@electric-collars.eu

Documents / Resources

	<p>PETKIT CT-W3 Eversweet Max Wireless Cat Drinking Fountain [pdf] User Manual CT-W3, 15691, CT-W3 Eversweet Max Wireless Cat Drinking Fountain, CT-W3, Eversweet Max Wireless Cat Drinking Fountain, Wireless Cat Drinking Fountain, Cat Drinking Fountain, Drinkin g Fountain</p>
---	--

References

- [🐾...🐾 † Electronic training collars for dogs †... - Electric-Collars.com](#)
- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.