

PETKIT D4H Automatic Pet Feeder with Camera



PETKIT D4H Automatic Pet Feeder with Camera User Guide

[Home](#) » [PETKIT](#) » PETKIT D4H Automatic Pet Feeder with Camera User Guide 

Contents

- [1 PETKIT D4H Automatic Pet Feeder with Camera](#)
- [2 Product Information](#)
- [3 PRODUCT DESCRIPTION](#)
- [4 PRODUCT INSTALLATION](#)
- [5 Installing the Desiccant](#)
- [6 HOW TO USE](#)
- [7 CLEANING AND MAINTENANCE](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

PETKIT

 
PETKIT D4H Automatic Pet Feeder with Camera



Product Information

PETKIT YUMSHARE SOLO WITH CAMERA SMART PET FEEDER


Please read the User Manual carefully before using the product and keep it properly.

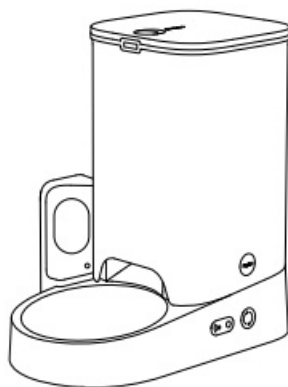


PRODUCT LIST

*Please confirm that the following accessories are complete before installation and use. (Batteries or screwdrivers are not equipped and need to be purchased separately)

 
- Main Unit
- Food Bowl
- Hopper
- Adapter
- Desiccant
- User Manual

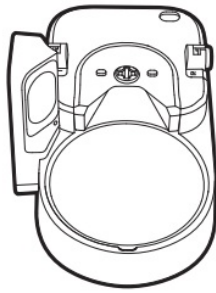


Main Unit

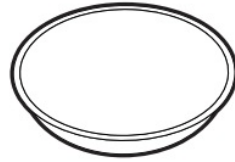 


Food Bowl

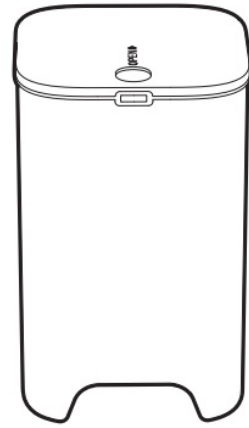 

Hopper

 

Adapter

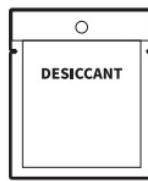 


Desiccant





User Manual

***Note:** In order to provide a better user experience, we will be implementing periodic product enhancements. Product images shown for illustration purpose only. Actual product may vary from the image shown on the box. For any discrepancies, please refer to the actual product.

 PRODUCT DESCRIPTION

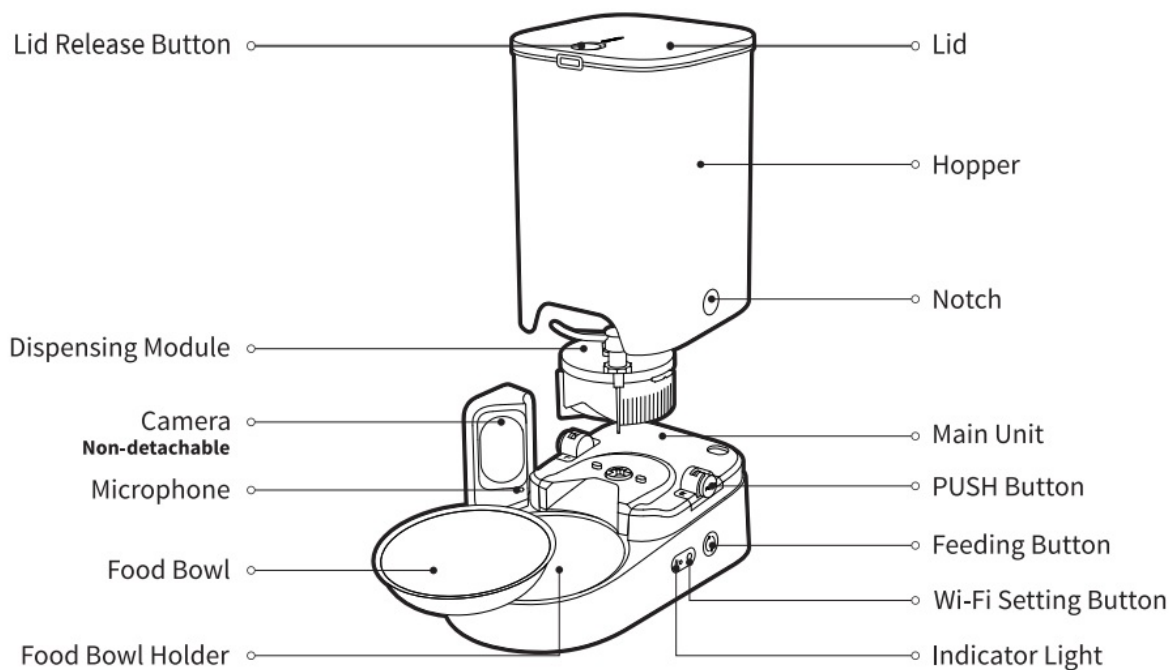

Back of the main unit

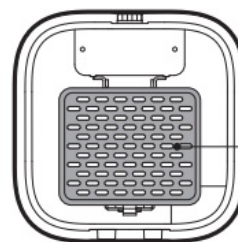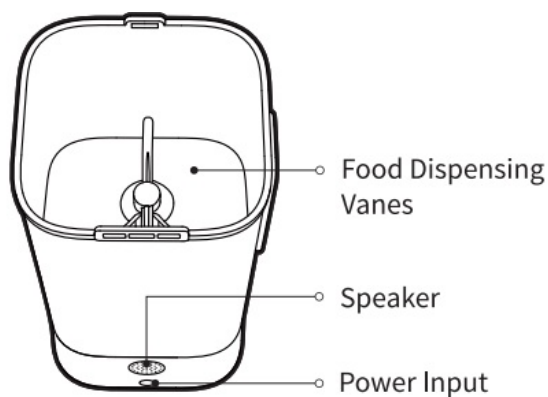  



Desiccant Compartment

Interior of the lid

PRODUCT INSTALLATION


Installing the Main Unit

1. Place the main unit on the level ground or desk.
2. Lift the hopper, align the notches on both sides with the PUSH button on the main unit, and place it vertically downwards.
3. Press and hold the PUSH buttons until they are fully stuck into the notches.
4. Place the food bowl in the food bowl holder.

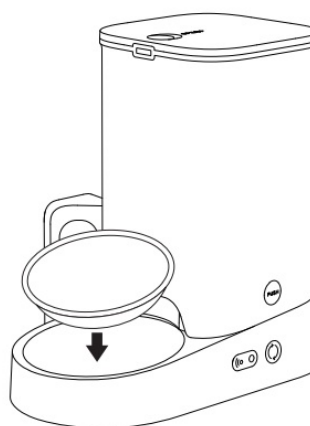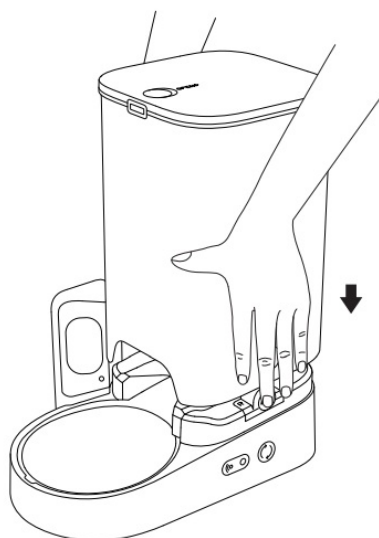

Connecting the Power Supply

Take out the power adapter cord and attach it to the power input on the back.

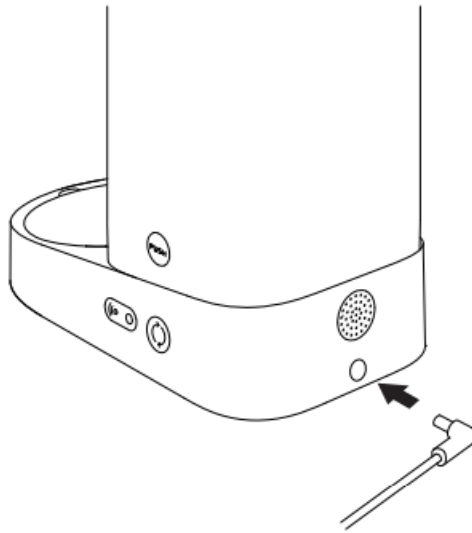


Installing the Backup Batteries

1. Take out the screw and remove the battery cover.
2. Take 5 AAA batteries and place them in the battery compartment. (Pay attention to the orientation of the positive and negative ends)
3. Put the battery cover back on and tighten down the screw.


Choose whether to install batteries based on personal actual usage needs. (Batteries need to be purchased separately, and only alkaline batteries can be used)

 ***Note:** When the battery is low, please replace the batteries in time. Check and replace the batteries before leaving the device unattended for an extended period.

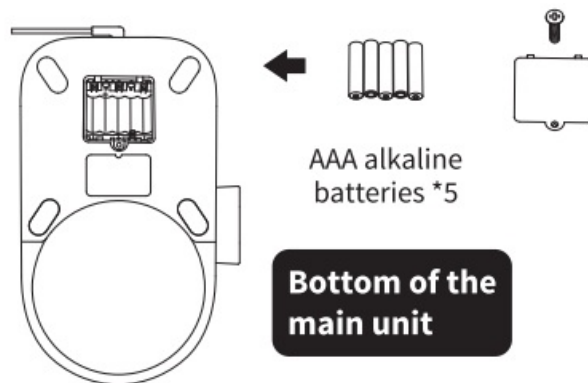


Installing the Desiccant

1. Press the lid release button to the right as shown in the picture, and lift it up to remove the lid.

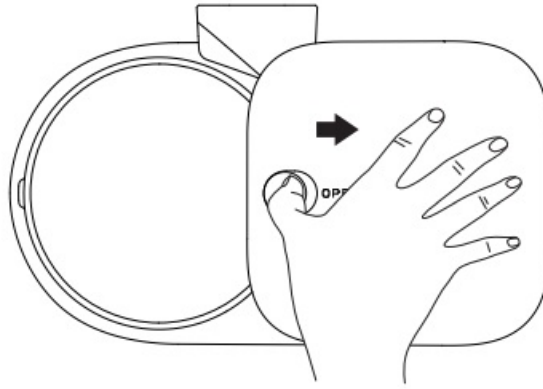

 2. Open the desiccant compartment, put the desiccant in it, and close the desiccant compartment.

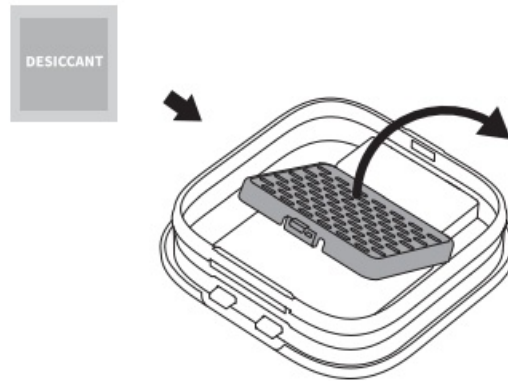


HOW TO USE

Adding Pet Food

1. Open the lid to add pet food, and do not exceed the MAX line.

* Recommended kibble size of dry food $\leq 12\text{mm}$ (0.47in)

Recommended kibble size of freeze-dried food $\leq 9\text{mm}$ (0.35in)

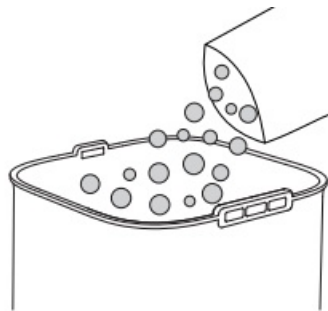


2. **Cover the lid:** Insert the rear side of the lid into the two holes above the hopper.



Indicator Light


The indicator light can be turned on/off in the app. The indicator light is not on in battery mode.

Indicator light	Status
White light is flashing slowly	Device is not connected to Wi-Fi
White light is flashing quickly	Device is connecting to Wi-Fi
White light is constantly on	Device is connected to Wi-Fi (Camera is not working)
Green light is constantly on	Device is connected to Wi-Fi (Camera is working)

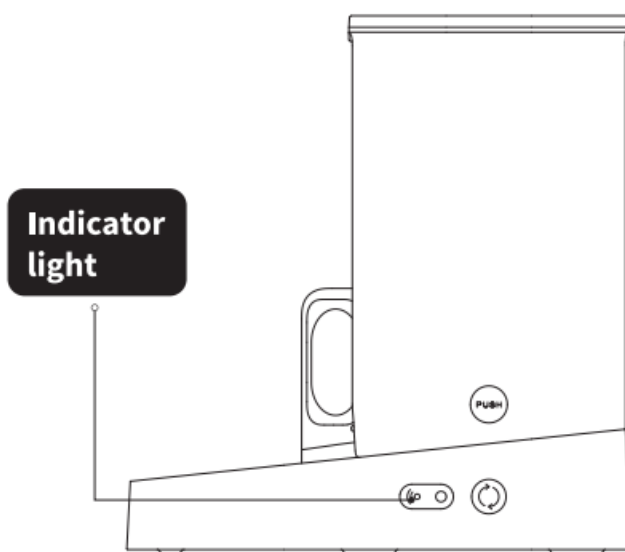

Manual Feeding

Hold the feeding button to dispense food. Release the button to stop dispensing food.

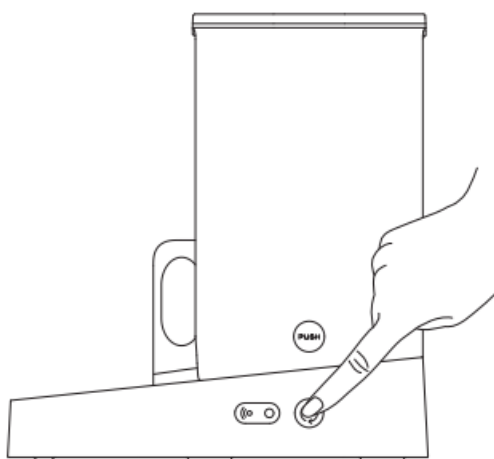

Smart App Control

1. App Download and installation: Download PETKIT App from the App Store or Google Play.
2. Enter the homepage, click "+" to add the corresponding device, and bind the device according to the guides.


Scan the QR code to download PETKIT App




1. Feeding plans can be set in the app, and the feeder will automatically dispense food at set time every day according to the plan. You will receive prompt messages and timely notice the food dispense and feeding status.
2. The app support real-time viewing of monitor and voice interaction. At the same time, you can also share and review the monitor images. (More exciting features can be experienced in the app)

CLEANING AND MAINTENANCE




1. Open the lid to remove the desiccant, and then remove the food bowl.

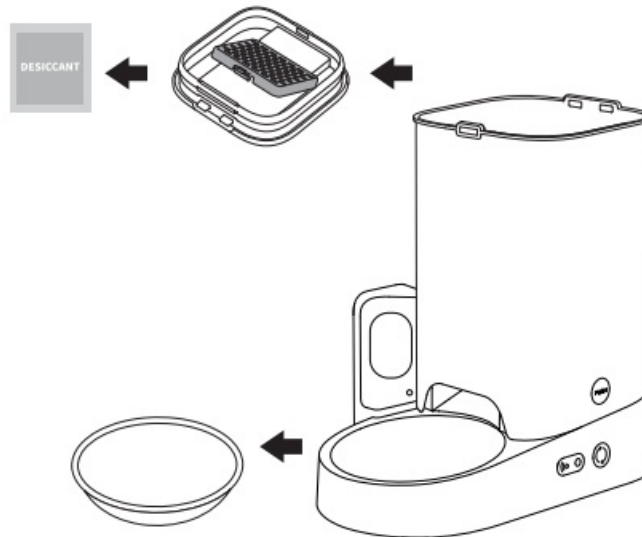

2. Hold the PUSH buttons on both sides of the main unit with middle fingers, and lift it up at the same time to remove the hopper.

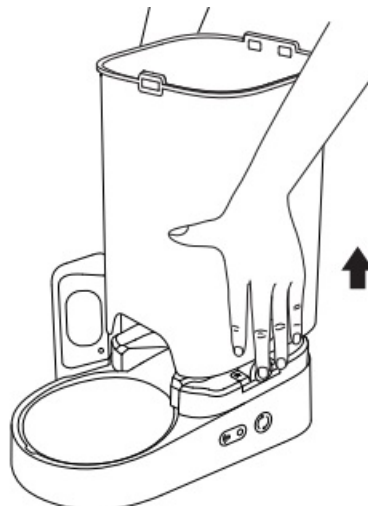

   3. Pull out the food dispensing vanes in the hopper. Rotate clockwise to remove the Impeller cover and take out the impeller.

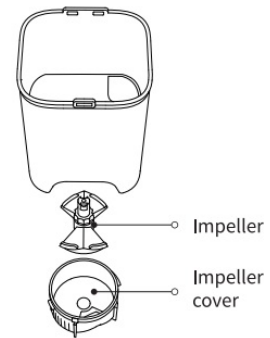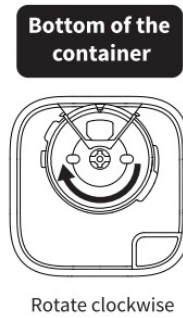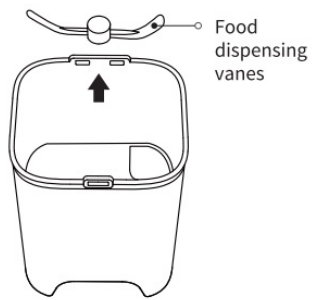

Documents / Resources

	<p>PETKIT D4H Automatic Pet Feeder with Camera [pdf] User Guide</p> <p>D4H Automatic Pet Feeder with Camera, D4H, Automatic Pet Feeder with Camera, Pet Feeder with Camera, Feeder with Camera, Camera</p>
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.