

 


PHEANOO D5 Soundbar with Subwoofer Installation Guide

[Home](#) » [PHEANOO](#) » PHEANOO D5 Soundbar with Subwoofer Installation Guide 



SETUP GUIDE
Model: D5

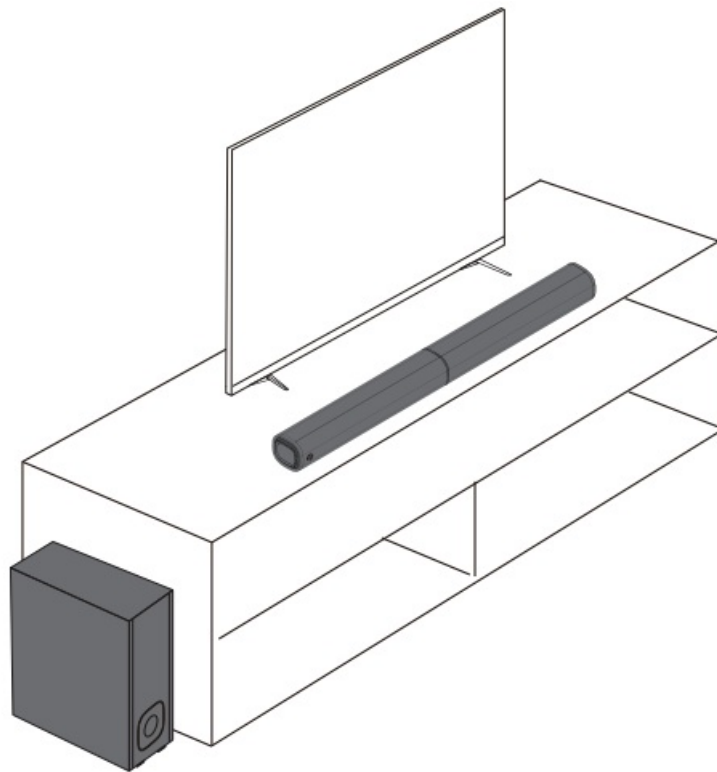

Please read this guide carefully before connecting and using your soundbar and keep it for future reference.

Contents

- 1 Soundbar & accessoriesSoundbar assemble details
- 2 HDMI(ARC) Cable Connection
- 3 Power on the Soundbar
- 4 Turning on the Soundbar
- 5 Soundbar Sound Input Setting
- 6 Turning on the TV
- 7 TV Sound/Audio Output Setting
- 8 Notice
- 9 Other Connection Methods
- 10 AUDIO SETTINGS
- 11 Documents / Resources
- 12 Related Posts

Soundbar & accessories



Soundbar x 1set



Subwoofer x 1



Remote control x 1



HDMI(ARC) cable x 1



Audio cable x 1



Screw bag x 1



Adapter x 1



Wall brackets x 2




User manual x 1




Setup Guide x 1

Soundbar assemble details

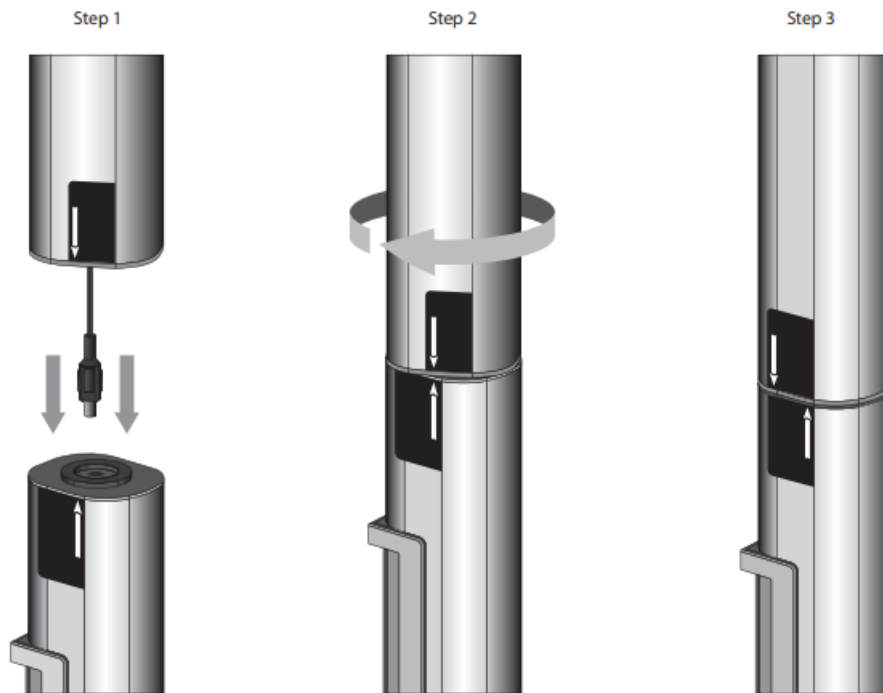


HDMI(ARC) Cable Connection

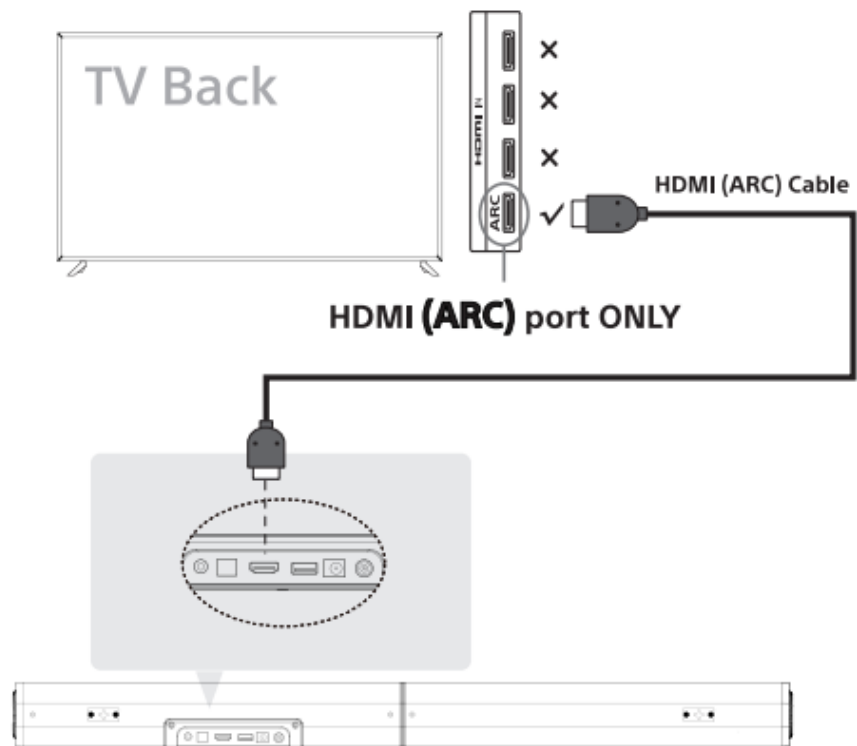


* Please only use Pheanoo's ORIGINAL CABLES in the package.

* Bitte verwenden Sie nur die Pheanoo ORIGINALKABEL die im Lieferumfang enthalten sind.

Power on the Soundbar

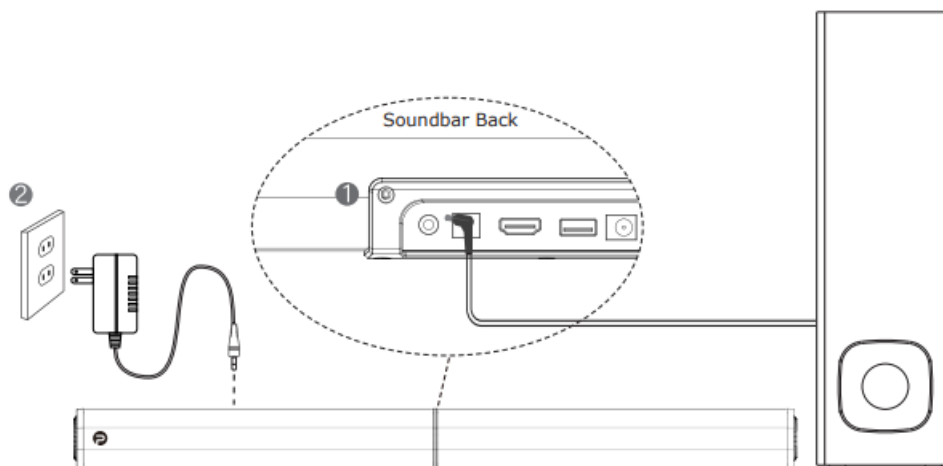


Turning on the Soundbar

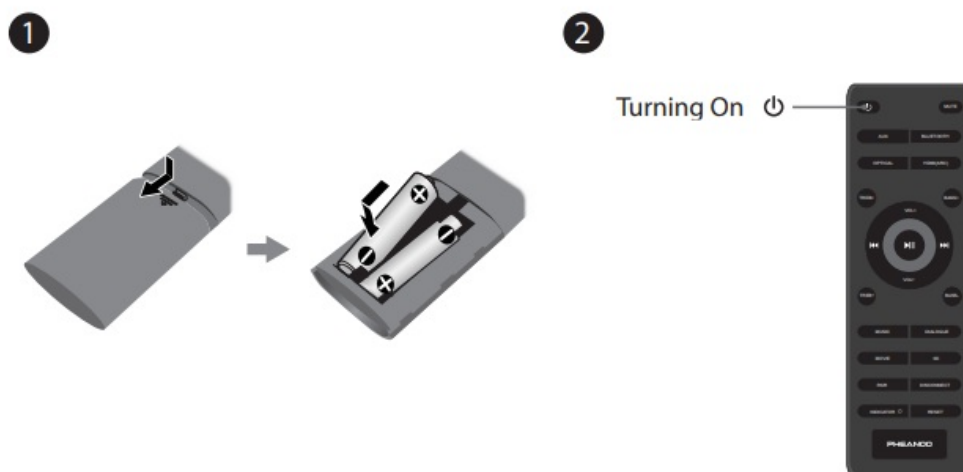

- For shipping safety, the batteries for the remote control are not included. The remote control takes two AAA batteries (triple-A).

Soundbar Sound Input Setting

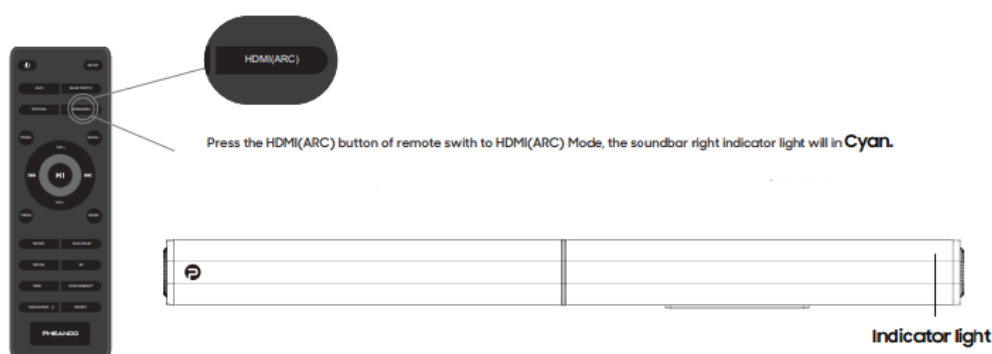

The different indicators represent different modes:


Green indicator = AUX mode

Yellow indicator = Optical mode


Blue indicator = BT mode

✓ **Cyan indicator** = HDMI(ARC) mode

Turning on the TV

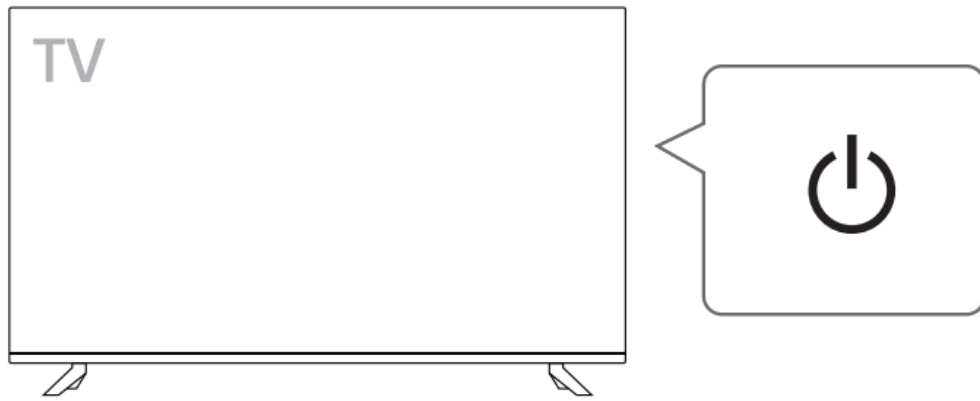

TV Sound/Audio Output Setting

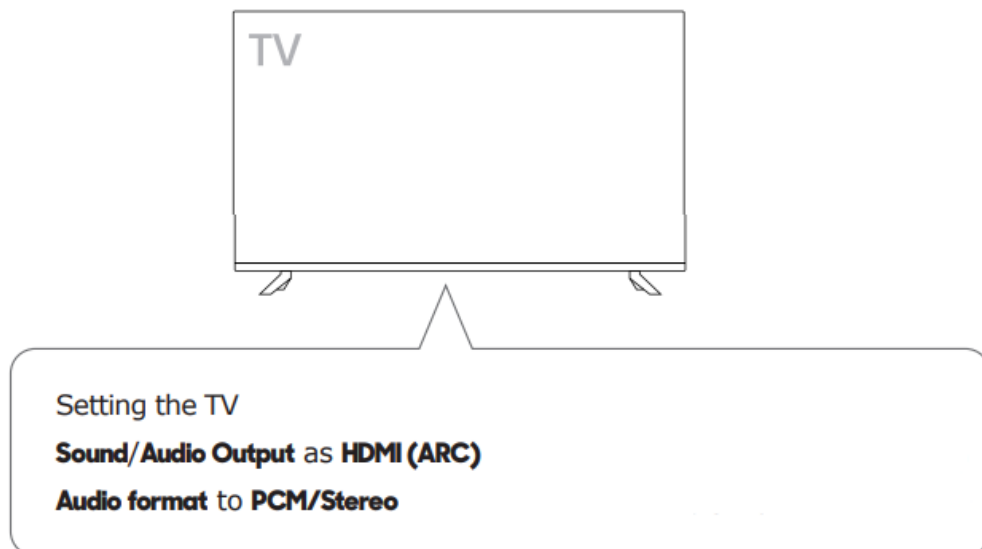

You can also find the related audio settings for the most popular TV brands and streaming devices (like Samsung, TCL, Vizio, Roku, Fire TV, etc) on the back of this page. If you still don't hear any sound from the soundbar, please feel free to contact us at support@pheanoo.com) The sound settings of different brands of TV may be different, please refer to the TV manual

Notice

1. **Make sure** that the TV's Audio output selected is the **same** one selected on the soundbar.

TV Audio Output Settings	to	Soundbar Audio Input Settings
BT Mode		BT Mode
AUX Mode		AUX Mode
HDMI(ARC)Mode		HDMI(ARC)Mode
Optical mode		Optical mode

- When connecting a TV using the HDMI connection modes, most TVs will automatically switch to PCM sound output mode which is compatible with the soundbar. if there is an incompatibility issue, please manually set the TV's audio(sound) to PCM output mode.
- When you use apps such as NETFLIX, HULU, or AMAZON PRIME on your smart TV, please turn off DOLBY and/or DTS function in the app sound settings or choose STEREO output to ensure that the soundbar will be compatible with your TV

NOTE: Please kindly refer to the TV user manual for specific audio settings


- Do not place magnetic objects in, on, or around the soundbar as this may damage your soundbar.

Other Connection Methods

Optical Cable Connection

For other steps refer to the instructions on the previous page.

- The OPTICAL cable is not included in the package
- Bitte verwenden Sie nur die Pheanoo ORIGINALKABEL die im Lieferumfang enthalten sind.

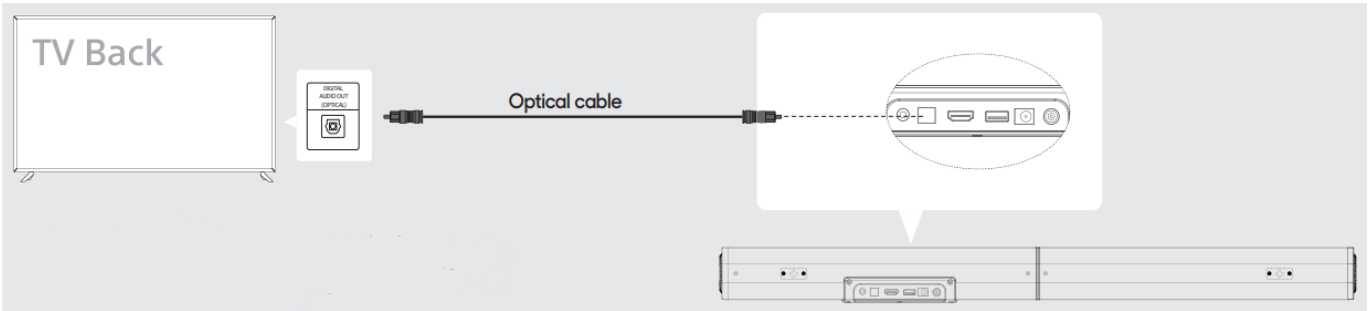


Note:

Sometimes users may hear an echo sound when connecting the soundbar to the TV via optical cable. To eliminate the echo effect, your TV speakers should be disabled. Refer to your TV's audio menu options to make the necessary changes to the speaker settings.

Audio Cable Connecting

For other steps refer to the instructions on the previous page.

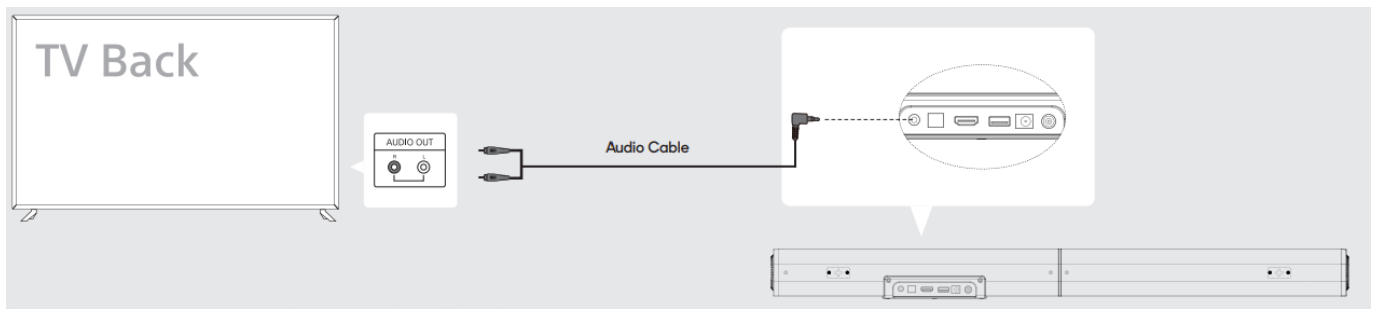

Some TVs have **AUDIO IN** only, can't deliver sound to the soundbar.

***Please only use Pheanoo's ORIGINAL CABLES in the package.**



AUDIO SETTINGS

Fire TV stick

1. Settings >Display & Sounds >DOLBY DIGITAL OUTPUT > Dolby Digital Plus OFF
2. Settings >Display & Sounds >Audio Output> TV Speakers>select OFF

Fire TV Cube

1. Settings >Display & Sounds >Surround sound > PCM
2. Settings >Display & Sounds >Audio Output> TV Speakers>select OFF

Toshiba Fire TV

1. Settings >Display & Sounds >Audio Output> TV Speakers>select OFF
2. Settings > Display & Sounds > Audio Output > Digital Audio Format > select PCM

Insignia Fire TV

1. Settings >Display & Sounds >Audio Output> TV Speakers>select OFF
2. Settings > Display & Sounds > Audio Output > Digital Audio Format > select PCM
3. Settings > Display & Sounds > HDMI CEC Device Control >ON

TCL ROKU TV

1. Settings >Audio >TV Speakers >Select off
2. Settings >Audio>Digital audio format>Select Stereo

Hisense ROKU TV

1. Settings >Audio >TV Speakers >Select Disabled
2. Settings >Audio>Digital Audio out >Select Stereo

ONN ROKU TV

1. Settings >Audio >TV Speakers >Select Disabled
2. Settings >Audio>Digital Audio Format >Select Stereo

Roku TV Stick

1. Settings >Audio>HDMI>Select PCM-Stereo
2. Settings >Audio>Audio Mode>Select Stereo

Samsung TV

1. Settings > Sound > Sound Output > select Receiver (HDMI)
2. Settings > Sound > Sound Output > Expert Settings > HDMI-eARC Mode > Auto
3. Settings > Sound > Sound Output > Expert Settings > Digital Output Audio Format > PCM
4. Settings > Sound > Sound Output > Expert Settings > Digital Output Audio Delay > 0

Vizio TV

1. Settings > Audio
2. Settings > Audio > TV Speakers > Off
3. Settings > Audio > Volume Levelling > Off
4. Settings > Audio >Surround sound>Off
5. Settings > Audio > Analog Audio Out>Fixed
6. Settings > Audio >Advanced Audio > Digital Audio Out > PCM

Sony TV

1. Settings > Display & Sounds > Audio Output > Speakers > Audio System
2. Settings > Display & Sounds > Audio Output > eARC Mode > On
3. Settings > Display & Sounds > Audio Output > Digital Audio Out > PCM
4. Settings > Display & Sounds > Audio Output > Pass Through Mode > OFF

Hisense TV **(Powered by Android)**

1. Settings >Sound >Speakers >select ARC
2. Settings >Sound>Advanced Settings>Digital Audio Out >select PCM

Sharp TV

1. Settings>sound>Advanced audio settings>TV Speaker & ARC>select ARC
2. Settings>sound>Advanced audio settings>Digital Audio Out>select PCM

Sharp TV

(Powered by Android)

1. settings > devices preferences > sound > Digital Output > select PCM
2. settings > devices preferences > sound > Speakers > External audio system


LG TV

1. Settings > Sound > Sound Out > HDMI ARC
2. Settings > Sound > Additional Settings > Digital Sound Out > PCM

Panasonic TV

1. Menu >Audio Settings >Advanced Audio >TV Speakers >select OFF
2. Menu >Audio Settings >Advanced Audio>HDMI>select DIGITAL
3. Menu >Audio Settings >Advanced Audio>Digital Audio Out >select PCM

Documents / Resources

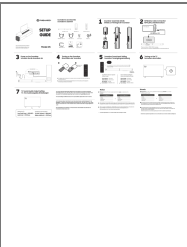	PHEANOO D5 Soundbar with Subwoofer [pdf] Installation Guide D5, Soundbar with Subwoofer, Soundbar, Subwoofer, D5 Soundbar, D5 Subwoofer
	PHEANOO D5 Soundbar with Subwoofer [pdf] User Guide D5, Soundbar with Subwoofer