

Philio PST07 3 in 1 Multi Sensor User Manual

[Home](#) » [Philio](#) » Philio PST07 3 in 1 Multi Sensor User Manual 

3 in 1 Multi Sensor PST07



PST07-A



PST07-B



PST07-C



PST07-D

The multi-sensor PST07 has PIR, temperature, and light sensors function in one, based on Z-Wave™ technology.

The multi-sensor is a Z-Wave™ enabled device that is fully compatible with any Z-Wave™-enabled network. This device is a security-enabled Z-Wave™Plus product that is able to use encrypted Z-Wave Plus messages to

communicate to other security-enabled Z-Wave™ Plus products. Z-Wave™ enabled devices displaying the Z-Wave™ logo can also be used with it regardless of the manufacturer, and ours can also be used in other manufacturers' Z-Wave™ enabled networks.

The product supports the Over The Air(OTA) feature for the product's firmware upgrade.

This product can be included and operated in any Z-Wave™ network with other Z-Wave™ certified devices from other manufacturers and/or other applications. All non-battery-operated nodes within the network will act as repeaters regardless of vendor to increase the reliability of the network.

The device adopts the Z-Wave™ 500 series chip when your Z-Wave™ network system is all made by Z-Wave™500 series devices. The network system will have the advantages as below.

- Concurrent multi-channel support reduces external interference.
- Better RF range, improve about 10 meters in indoor.
- Support 100 Kbps transmit speed, speed up communication.

CAUTION

- replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);
 - disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
 - leaving a battery in an extremely high temperature surrounding an environment that can result in an explosion or the leakage of flammable liquid or gas;
 - a battery subjected to the extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas
- The marking information is located at the bottom of the apparatus.

Contents

1 Specification

2 Function Compare A/B/C/D

3 Troubleshooting

4 overview

5 Power Up Procedure

6 Operation Mode

7 Z-Wave Configuration Settings

8 Z-Wave Supported Command Class

9 FCC Interference Statement

10 Warning

11 Documents / Resources

11.1 References

12 Related Posts

Specification

Rated	DC3V (CR123A)
-------	---------------

RF distance	Min. 40M indoor, 100M outdoor line of sight,
RF Frequency	868.40 MHz, 869.85 MHz(EU) 908.40 MHz, 916.00 MHz(US) 920.9MHz, 921.7MHz, 923.1MHz(TW/SG/Thai/KR)
RF Maximum Power	+5dBm
ALS Sensing Range	0-10000 lux
Dimension	89*83*62
Weight	91.4g (PST07-A), 96.0g (PST07-D)
IP classification	IPX4 (PST07-A or PST07-D)
Location	Indoor or outdoor
Operation temperature	-10 to 40° C
Humidity	85%RH max
FCC ID	RHHPSTO7
Marking	CE/NCC

- Specifications are subject to change and improvement without notice.

Function Compare A/B/C/D

Model	Description
PST07-A	Wall mount
PST07-B	Ceiling mount with Square shape
PST07-C	Ceiling mount with Round shape
PST07-D	Wall mount with lens cover

Troubleshooting


Symptom	Cause of Failure	Recommendation
The device can not join to ZWave [™] network	The device may be in a Z- Wave [™] net work.	Exclude the device then include again.

For Instruction to <http://www.philio-tech.com>



http://tiny.cc/philio_manual_PST07

overview

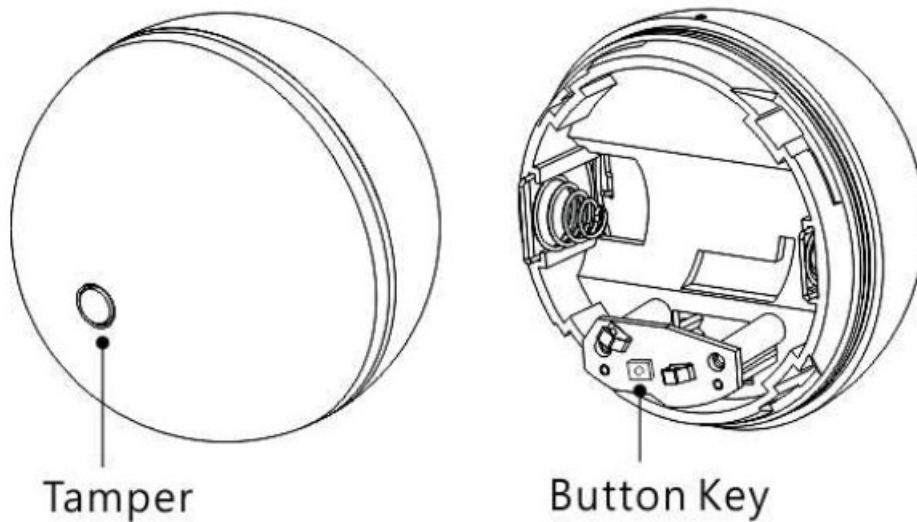

Note: The illuminance may be affected by the angle at which the lens is shaded

Add to/Remove from Z-Wave™ Network

There are two tamper keys in the device, one is on the backside, another is on the front side. Both of them can add, remove, reset, or associate from the Z-Wave™ network.

The table below lists an operation summary of basic Z-Wave™ functions. Please refer

to the instructions for your Z-Wave™ Certificated Primary Controller to access the

Setup function, and to Add/Remove/associate devices

Notice: Including a node ID allocated by Z-Wave™ Controller means “**Add**” or “**Inclusion**”. Excluding a node ID allocated by Z-Wave™ Controller means “**Remove**” or “**Exclusion**”.

Function	Description
Add	<ol style="list-style-type: none"> 1. Have Z-Wave™ Controller entered inclusion mode. 2. Press the tamper key three times within 2 seconds to enter the inclusion mode. 3. After adding successfully, the device will wake to receive the setting command from Z-Wave™ Controller for about 20 seconds.
Remove	<ol style="list-style-type: none"> 1. Have Z-Wave™ Controller entered exclusion mode. 2. Press the tamper key three times within 2 seconds to enter the exclusion mode. <p>Node ID has been excluded.</p>

Reset	<p>Notice: Use this procedure only in the event that the primary controller is lost or otherwise inoperable.</p> <ol style="list-style-type: none"> 1. Press the button four times and keep for about 5 seconds. 2. IDs are excluded and all settings will reset to factory default.
SmartStart	<ol style="list-style-type: none"> 1. Product has a DSK string, you can key in the first five-digit to increment the smart start process, or you can scan a QR code. 2. SmartStart enabled products can be added into a Z-Wave network by scanning the Z-Wave QR Code present on the product with a controller providing SmartStart inclusion. No further action is required and the SmartStart product will be added automatically within 10 minutes of being switched on in the network vicinity. <p>*notice: The QR code can be found on the device or in the box.</p>
Association	<ol style="list-style-type: none"> 3. Have Z-Wave™ Controller entered association mode. 4. Press the tamper key three times within 1.5 seconds to enter the association mode. <p>Note: The device support 2 groups. Group 1 is for receiving the report message, like triggered event, temperature, illumination, etc. Group 2 is for light control, the device will send the “Basic Set” command to this group. Group one supports 1 node maximum and group two supports 5 nodes maximum.</p>
<ul style="list-style-type: none"> • Failed or successful in adding/removing the node ID can be viewed from Z-Wave™ Controller. 	

Notice 1: Always RESET a Z-Wave™ device before trying to add it to a ZWave™ network

Z-Wave™ Notification

After the device adding to the network, it will wake up once per day in default. When it wake-up it will broadcast the “Wake Up Notification” message to the network, and wake up for 10 seconds for receiving the set commands. The wake-up interval minimum setting is 30 minutes, and the maximum setting is 120 hours. And the interval step is 30 minutes. If the user wants to wake up the device immediately, please remove the front cover, and press the tamper key once. The device will wake up in 10 seconds.

Z-Wave™ Message Report

When the PIR is motion-triggered, the device will report the trigger event and also report temperature and illumination level.

- Motion Report: When the PIR motion is detected, the device will unsolicited to send the report to the nodes in

group 1.

Notification Report (V8)
Notification Type: Home Security (0x07) Event: Motion Detection, Unknown Location (0x08)

- **Tamper Report:**

The tamper keys are pressed over 5 seconds. The device will into the alarm state. In that state, if any one of the tamper keys be released, the device will unsolicited to send the report to the nodes in group 1.

Notification Report (V8)
Notification Type: Home Security (0x07) Event: Tampering. Product covering removed (0x03)

- * **Temperature Report:**

When the PIR motion detected state changed, the device will unsolicited to send the “Sensor Multilevel Report” to the nodes in the group 1.

Sensor Type: Temperature (0x01)

*** Temperature differential report ***

This function default is enabled, to disable this function by setting the configuration NO.12 to 0.

In the default, when the temperature is changed to plus or minus one degree Fahrenheit (0.5 degree Celsius), the device will report temperature information to the nodes in group 1.

Caution 1: *Enable this functionality, it will cause the PIR Motion to disable detection when the temperature measurement. In other words, The PIP motion will blind one second in every one minute.*

- * **LightSensor Report:**

When the PIR motion detected state changed, the device will unsolicited to send the “Sensor Multilevel Report” to the nodes in group 1.

Sensor Type: Luminance (0x03)

*** LightSensor differential report ***

This function default is disabled, to enable this function by setting the configuration NO.13 not to zero.

And if the light sensor is changed to plus or minus the value (setting by configuration NO.13), the device will report illumination information to the nodes in group 1.

Caution 1: Enable this functionality, it will cause the PIP Motion to disable detection when the illumination measurement. In other words, The PIP motion will blind one second in every one minute.

* **Timing Report:**

Besides the event triggered could report messages, the device also supports the timing of unsolicited reports of the status.

- Battery level report Every 6 hours report once in default. It could be changed by setting configuration NO. 8.
Low battery report: When the battery level is too low. (Lose battery report when a power-on or PIR trigger.)
light sensor level report Every 6 hours report once in default. It could be changed by setting configuration NO. 9.
Temperature report: Every 6 hours report once in default. It could be changed by setting the configuration NO. 10.

Notice: Configuration NO. 8 could be set to zero to disable the auto report. And configuration NO. 11 could change the tick interval, the default value is 30, if set to 1, that means the minimum auto report interval will be one minute.

Power Up Procedure

* **Battery Power Check**

When the device power-up, the device will detect the power level of the battery immediately. If the power level is too low, the LED will continue to flash for about 5 seconds. Please change to another new battery.

* **Wake**

When the device power on, the device will wake for about 20 seconds. In this duration, the controller can communicate with the device. Normally the device is always sleeping to save battery energy.

Security Network

The device supports the security function. When the device is included with a security controller, the device will auto switch to the security model. In the security mode, the following commands need to use Security CC wrapped to communicate, otherwise, it will not respond.

```
COMMAND_CLASS_VERSION_V3  
COMMAND_CLASS_MANUFACTURER_SPECIFIC_V2  
COMMAND_CLASS_DEVICE_RESET_LOCALLY  
COMMAND_CLASS_ASSOCIATION_V2  
COMMAND_CLASS_ASSOCIATION_GRP_INFO  
COMMAND_CLASS_POWERLEVEL  
COMMAND_CLASS_CONFIGURATION  
COMMAND_CLASS_NOTIFICATION_V8  
COMMAND_CLASS_FIRMWARE_UPDATE_MD_V4  
COMMAND_CLASS_BATTERY  
COMMAND_CLASS_SENSOR_MULTILEVEL_V11  
COMMAND_CLASS_WAKE_UP_V2
```

Operation Mode


There are two modes “Test” and “Normal”. “Test Mode” is for the user to test the sensor function when installation. “Normal Mode” is for the normal operation. Operation Mode can be switched by pressing a button or tamper key two times. LED can indicate which mode it is. Lighting in one second means entering test mode, flashing once means entering normal mode. When the event is triggered, normally the LED won’t indicate, unless the battery is in the low level, the LED will flash once. But in the “Test Mode” the LED also will light ON one second. When the event is triggered, the device will emit the signal to turn ON the lighting equipment, those nodes are in group 2. And delay a while to turn OFF the lighting equipment. The delay time is set by configuration NO. 7. The PIR motion re-detected interval, in the “Test Mode,” is fixed to 10 seconds. In the “Normal Mode”, it is according to the setting of configuration NO. 6.


Choosing a Suitable Location

1. The recommended mounting height is 160cm
2. Don’t let the device face the window or the sunlight.
3. Don’t let the device face the source of heat. For instance theater or the air-conditioning.

Battery Installation

When the device reports a low battery message, users should replace the battery. The battery type is CR123A, 3.0V.

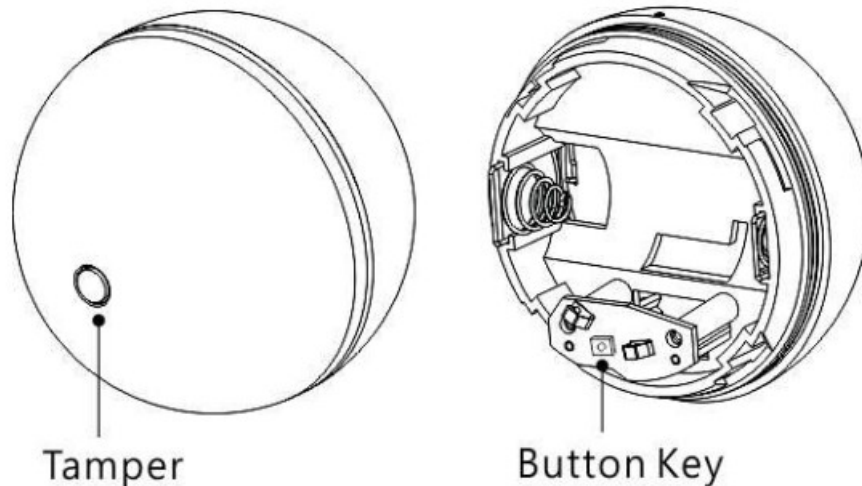

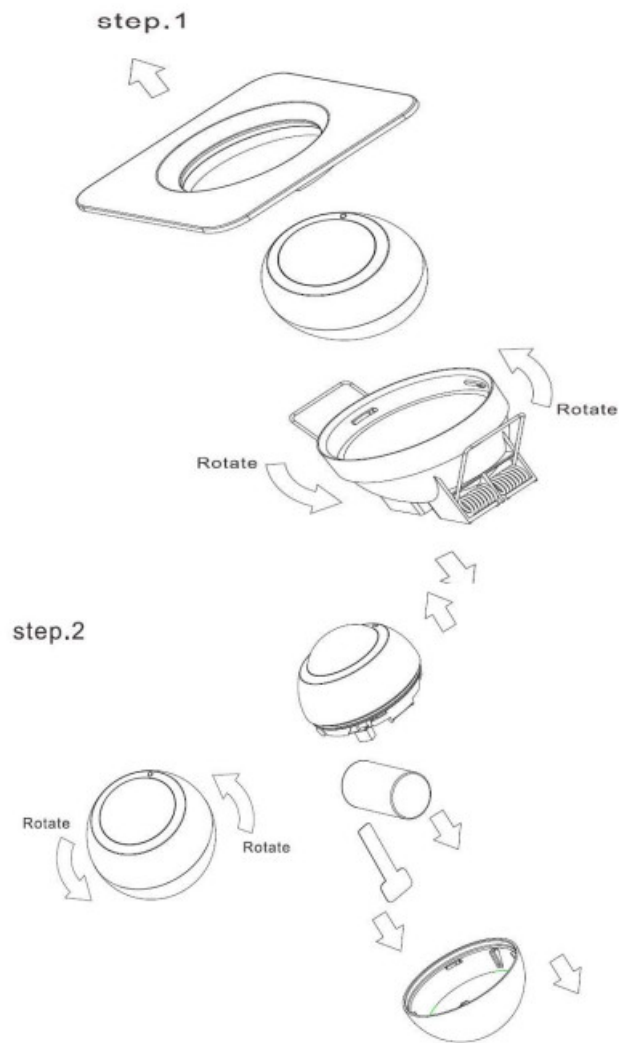

Z-Wave Configuration Settings

NO	Name	Def.	Valid	Description
1	Basic Set Level	99	0 ~99	<p>Setting the BASIC command value to turn on the light. The 0x63 means turn on the light. For dimmer equipment 1 to 99 means the light's strength.</p> <p>0 means turn off the light.</p>

3	PIR Sensitivity	80	0 ~ 99	<p>PIR sensitivity settings.</p> <p>0 means disable the PIR motion.</p> <p>1 means the lowest sensitivity,</p> <p>99 means the highest sensitivity.</p> <p>High sensitivity means can detect long-distance, but if there is more noise signal in the environment, it will re-trigger to frequency.</p>
4	Operation Mode	0x31	All	Operation mode. Using bit to control.
		1		Bit0: Setting the temperature scale. (1: Fahrenheit, 0:Celsius)
		0		Bit1: Reserve.
		0		Bit2: Reserve.
		0		Bit3: Reserve.
		1		<p>Bit4: Disable the illumination report after the event is triggered.</p> <p>(1:Disable, 0:Enable)</p>
		1		<p>Bit5: Disable the temperature report after the event is triggered. (1:Disable, 0:Enable)</p>
		0		Bit6: Reserve.

NO	Name		Valid	Description
		0		Bit7: Reserve.

5	Customer Function	3	All	Customer function switch, using bit control.
		1		Bit0: Tamper On/Off (1:On, 0:Off)
		1		Bit1: Red LED On/Off (1:On, 0:Off)
		0		Bit2: Motion Off.(1:On, 0:Off) Note: Depends on the Bit2, 1: Report Notification CC, Type: 0x07, Event: 0xFE
		0		Bit3: Reserve.
		0		Bit4: Reserve.
		0		Bit5: Reserve.
		0		Bit6: Reserve.
		0		Bit7: Reserve.
6	PIR ReDetect IntervalTime	6	1~60	<p>In the normal mode, after the PIR motion is detected, setting the re-detect time. 10 seconds per tick, default tick is 6 (60 seconds).</p> <p>Setting the suitable value to prevent receiving the trigger signal too frequently. Also can save battery energy.</p> <p>Notice: If this value is bigger than the configuration setting NO. 7 There is a period after the light is turned off and the PIR does not start detecting.</p>

7	Turn Off Light Time	7	1 ~ 60	After turning on the lighting, set the delay time to turn off the lighting when the PIR motion is not detected. 10
---	---------------------	---	--------	--

NO	Name	Def.	Valid	Description
				seconds per tick, default tick is 7 (70 seconds). 0 means never send turn-off light command.
8	Auto Report Battery Time	12	0 ~127	The interval time for auto report the battery level. 0 means turn off the auto-report battery. The default value is 12. The tick time can be set by configuration No.11.
9	Auto Report LightSensor Time	12	0 ~ 127	The interval time for auto report the illumination. 0 means turn off auto report illumination. The default value is 12. The ticking time can be set by configuration No.11.
10	Auto Report Temperature Time	12	0~127	The interval time for auto report the temperature. 0 means turn off auto report temperature. The default value is 12. The ticking time can set by configuration No.11.
11	Auto Report Tick Interval	30	0~ 0xFF	The interval time for auto-report each tick. Setting this configuration will affect configuration No.8, No.9, and No.10. The unit is 1 minute.
12	Temperature Differential Report	10	1100%	The temperature differential to report. 0 means turn off this function. The unit is Fahrenheit. Enable this function the device will detect every minute. And when the temperature is over 140

NO	Name	Def.	Valid	Description
				degree Fahrenheit, it will continue the report. Enable this functionality will cause some issues please see the detail in the "Temperature Report" section.
13	light sensor Differential Report	20	irvi000k	<p>The light sensor is Differential to report. 0 means turn off this function.</p> <p>The unit is a percentage.</p> <p>Enable this function the device will detect every percentage.</p> <p>And when the light sensor is over 20 percent, it will continue to report.</p>
14	PIR Trigger Mode	1	1~3	<p>PIR Trigger Mode:</p> <p>Model: Normal</p> <p>Mode2: DayTime</p> <p>Mode3: AtNight</p>
15	PIR NightLine	2	1~ 10000	<p>PIR nightline Lux conditions:</p> <p>a light sensor determines whether the level is night. (Unit 1Lux)</p>

Z-Wave Supported Command Class

Command Class	Version	Required Security Class
Z-Wave Plus Info	2	None
Version	3	Highest granted Security Class
Manufacturer Specific	2	Highest granted Security Class
Security 2	1	None

Device Reset Locally	1	Highest granted Security Class
Association	2	Highest granted Security Class
Association Group Information	1	Highest granted Security Class
Powerlevel	1	Highest granted Security Class
Basic	1	Highest granted Security Class
Configuration	1	Highest granted Security Class
Notification	8	Highest granted Security Class
Firmware Update Meta Data	4	Highest granted Security Class
Supervision	1	None
Transport Service	2	None
Battery	1	Highest granted Security Class
Sensor multilevel	11	Highest granted Security Class
Wake up	2	Highest granted Security Class

Disposal



This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it

responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Philio Technology Corporation
8F., No.653-2, Zhongzheng Rd., Xinzhuang Dist., New Taipei City
24257, Taiwan(R.O.C)
<http://www.philio-tech.com>

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Warning



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for

disposal at least for free of charge.



Documents / Resources

	<p>Philio PST07 3 in 1 Multi Sensor [pdf] User Manual PST07, PST07-A, PST07-B, PST07-C, PST07-D, 3 in 1 Multi Sensor</p>
	<p>Philio PST07 3-In-1 Multi Sensor [pdf] User Manual PST07, PST07-A, PST07-B, PST07-C, PST07-D, 3-In-1 Multi Sensor</p>

References

- philio-tech.com
- philio-tech.com/