



PHILIPS DDFCUC010 Fan Coil Unit Controller Instruction Manual

[Home](#) » [Philips](#) » PHILIPS DDFCUC010 Fan Coil Unit Controller Instruction Manual 

Contents

- [1 PHILIPS DDFCUC010 Fan Coil Unit Controller](#)
- [2 Installation Instructions](#)
- [3 Installation](#)
- [4 IEC Overvoltage Category III](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)





PHILIPS DDFCUC010 Fan Coil Unit Controller




Installation Instructions

Devices must be installed in an approved enclosure by a qualified electrician in accordance with all national and local electrical and construction codes and regulations

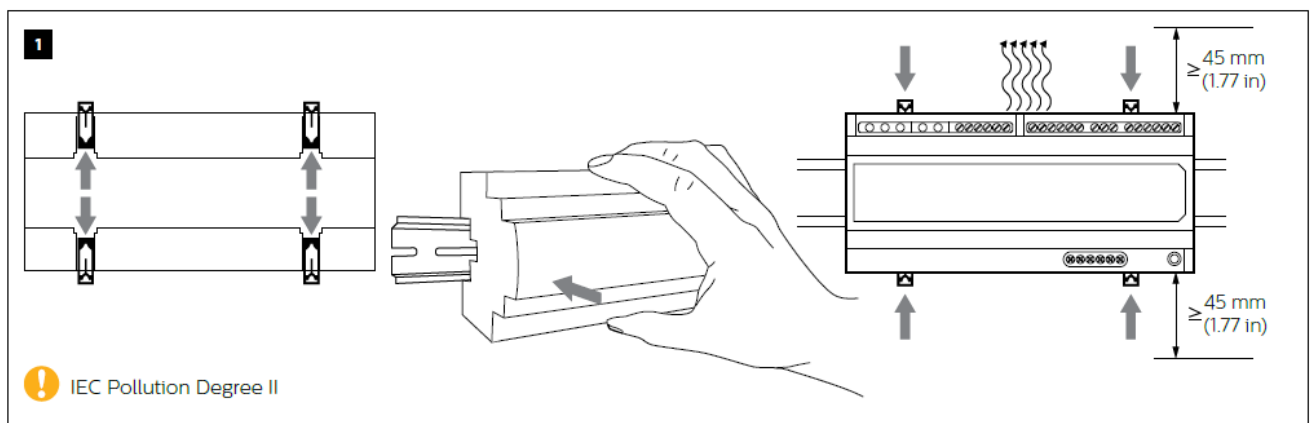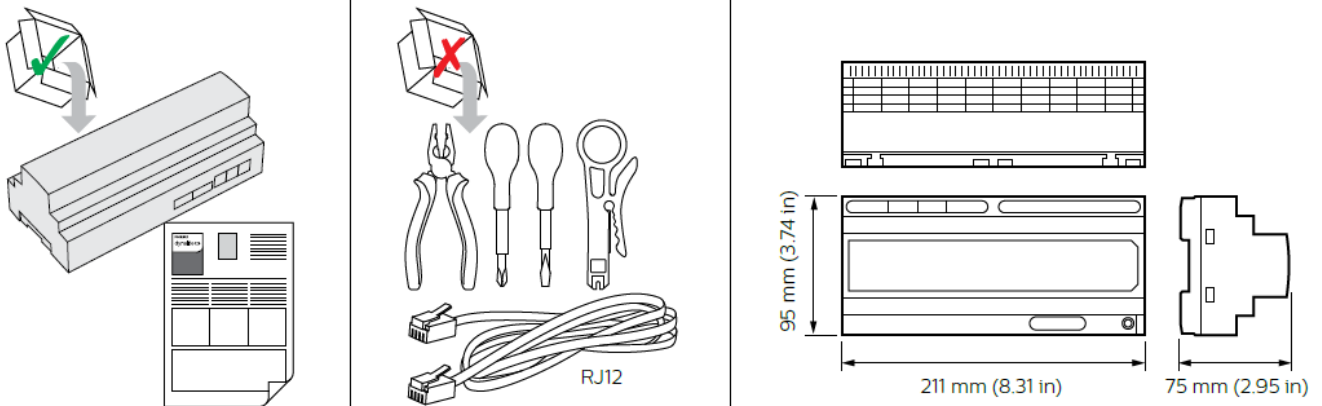

Installation


2

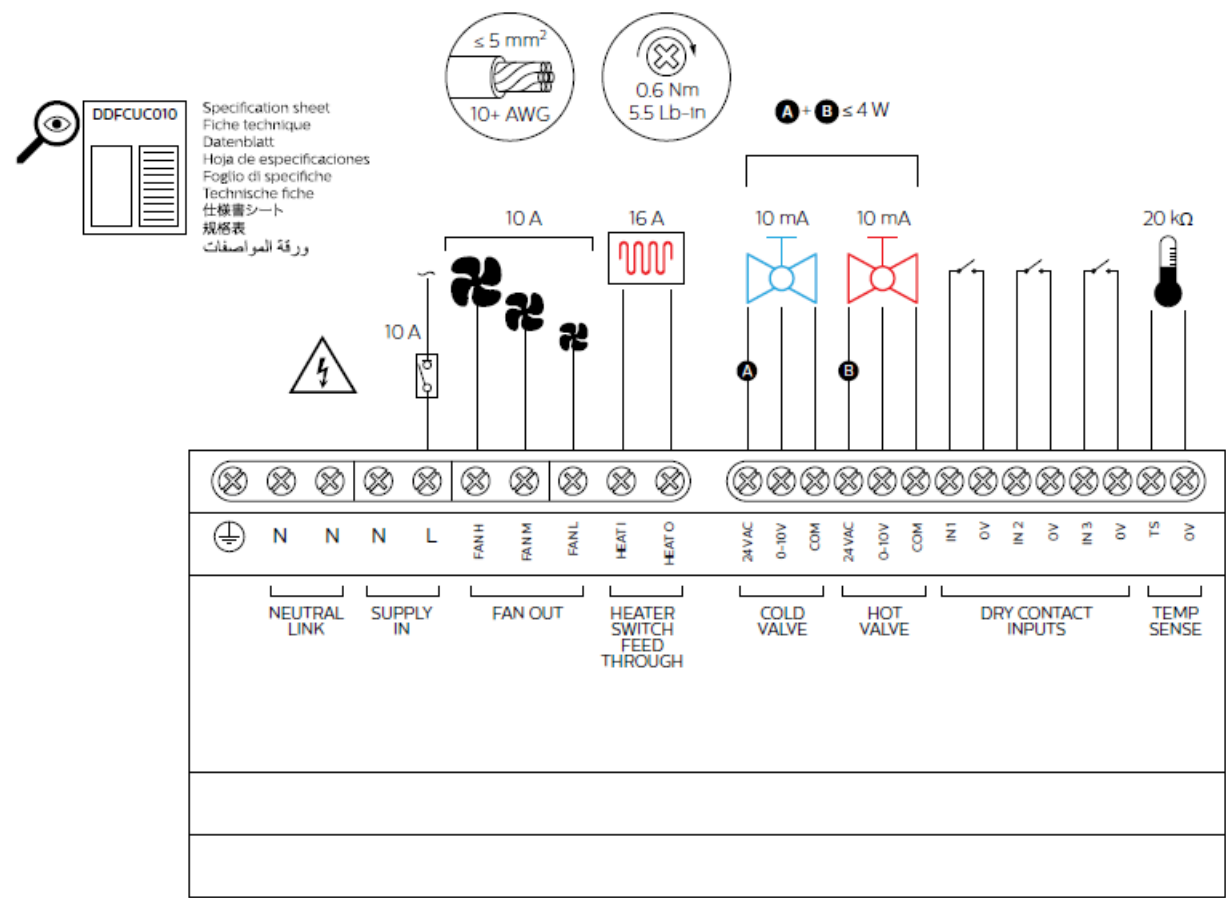

3

Output Ratings / Channel		
Load Type	Fan	Heater
General Use		16 A, 230 V ~
Motor	9.8 FLA (1/2 HP), 120 V ~ 8 FLA (1 HP), 230 V ~	

4

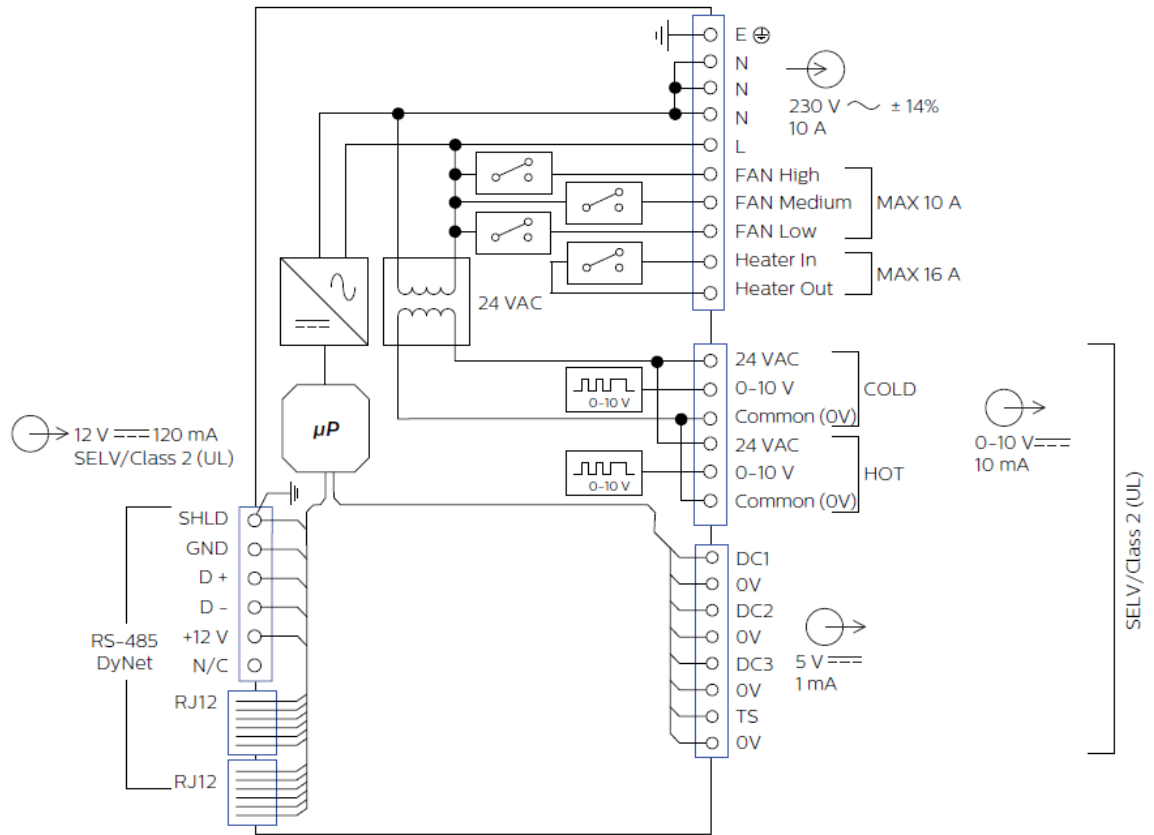

5

