




PHILIPS DDNG232 RS-232 Network Gateway Installation Guide

[Home](#) » [Philips](#) » PHILIPS DDNG232 RS-232 Network Gateway Installation Guide 






DDNG232
RS-232 Network Gateway

Installation Instructions






Devices must be installed in an approved enclosure by a qualified electrician in accordance with all national and local electrical and construction codes and regulations.

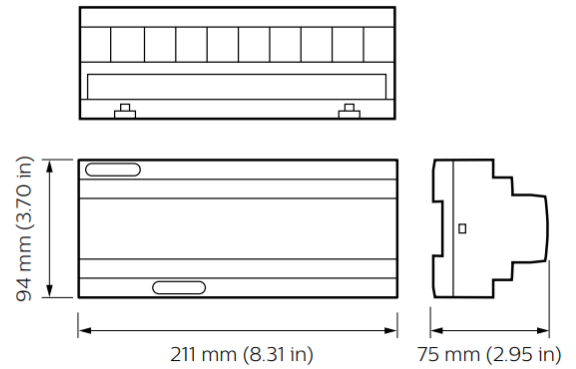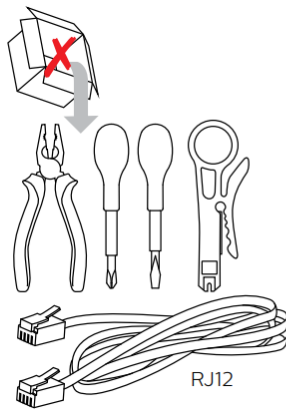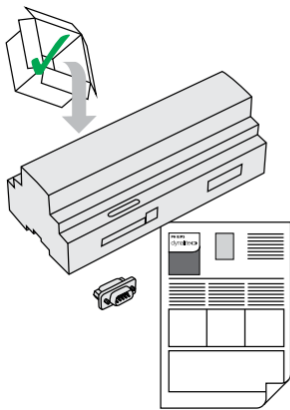


2


240 V ~
0.1 A

9
8 -
7 -
6 -
5 -
4 -
3 -
2 -
1 - I

 IEC C

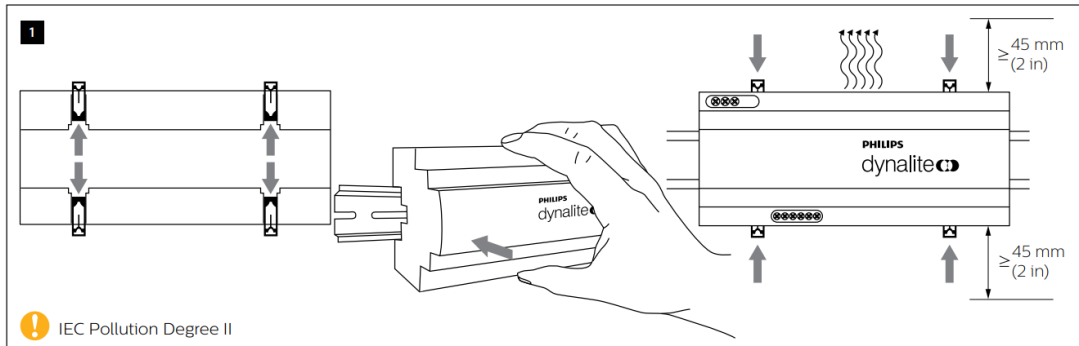


! IEC Pollution Degree II





3



Specification sheet
Fiche technique
Datenblatt
Hoja de especificaciones
Foglio di specifiche
Technische fiche
仕様書シート
规格表
ورقة المواصفات

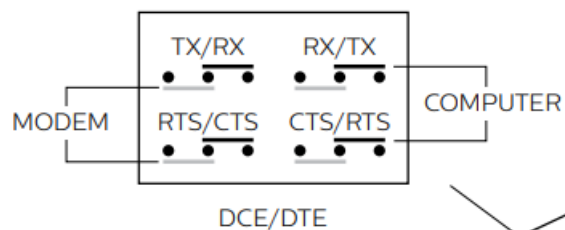

RS-232

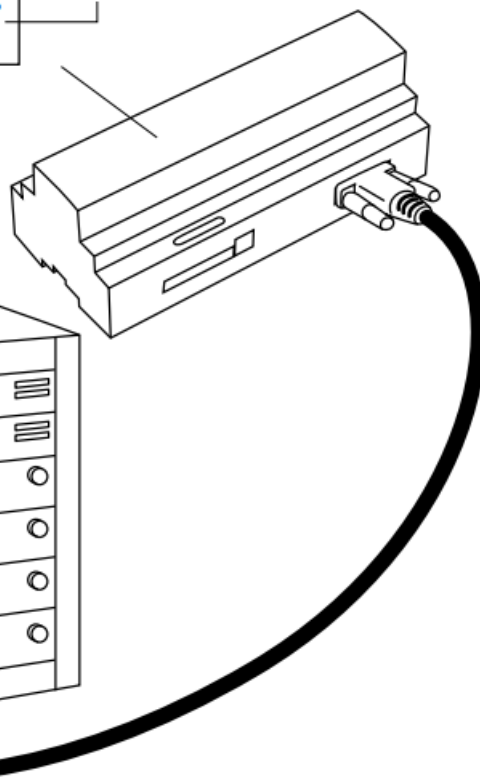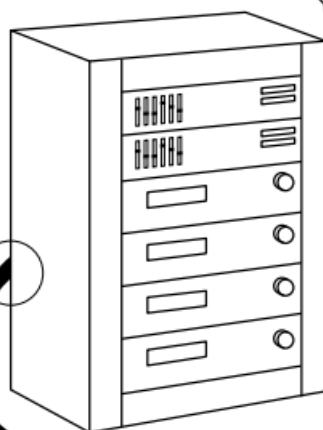


4



RS-485
DyNet

5

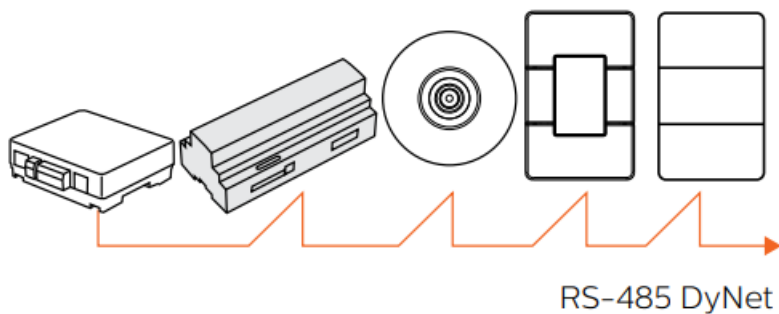

6



This is a class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.



© 2021 Signify Holding. All rights reserved. Specifications are subject to change without notice. No representation or warranty as to the accuracy or completeness of the information included herein is given and any liability for any action in reliance thereon is disclaimed. Philips and the Philips Shield Emblem have registered trademarks of Koninklijke Philips N.V. All other trademarks are owned by Signify Holding or their respective owners.

AZZ 408 1021 R16



www.lighting.philips.com/dynalite

Contents

1 Documents / Resources

1.1 References

2 Related Posts

	<p>PHILIPS DDNG232 RS-232 Network Gateway [pdf] Installation Guide DDNG232, RS-232 Network Gateway</p>
	<p>PHILIPS DDNG232 RS-232 Network Gateway [pdf] Instruction Manual DDNG232 RS-232 Network Gateway, DDNG232, RS-232 Network Gateway, Network Gateway , Gateway</p>

References

- 
[Philips Dynalite - Lighting Controls, Lighting Management](#)