

PHILIPS DMRC210 Dynalite Relay Controller Instruction Manual

Home » Philips » PHILIPS DMRC210 Dynalite Relay Controller Instruction Manual



Contents

- 1 PHILIPS DMRC210 Dynalite Relay
- Controller
- **2 Installation Instructions**
- 3 What's In The Box
- 4 Instructions
- **5 Documents / Resources**
 - **5.1 References**
- **6 Related Posts**




PHILIPS DMRC210 Dynalite Relay Controller




Installation Instructions


Devices must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations.

What's In The Box

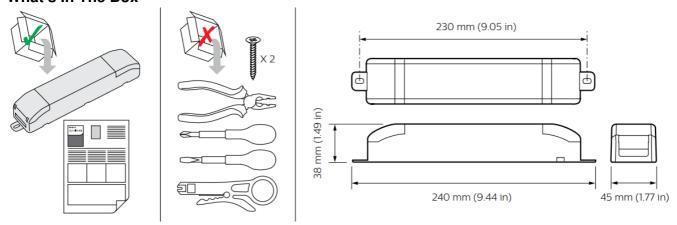

Instructions

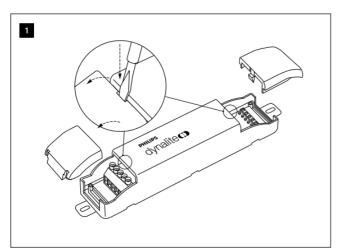

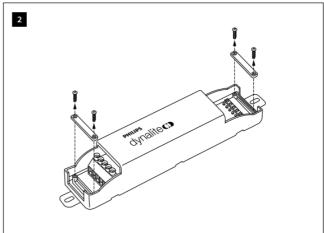





















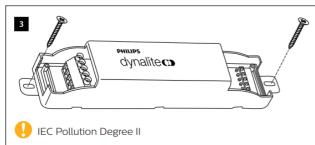

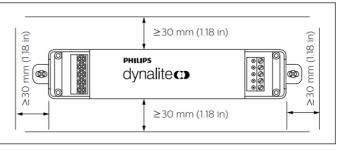



4 Output Ratings/Channel (CH)


Load Type	CH1-CH2
	10 A, 240 V ∼
☼ Incandescent	5 A, 240 V ∼
I ■ Electronic Ballast	3 A, 240 V ∼
∧∟ Inrush Current	165 A


Output Ratings/Group

 
DMRC210 ≤ 20 A

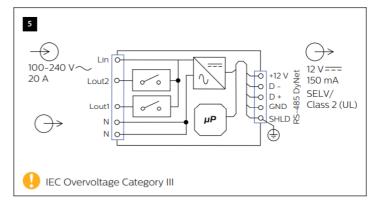

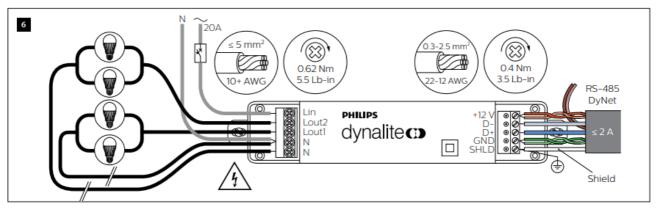

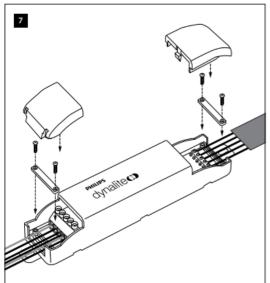



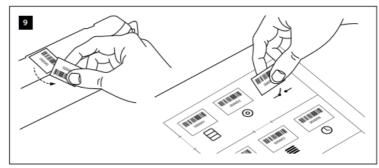

© 2021 Signify Holding. All rights reserved. Specifications are subject to change without notice. No representation or warranty as to the accuracy or completeness of the information included herein is given and any liability for any action in reliance thereon is disclaimed. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. All other trademarks are owned by Signify Holding or their respective owners. www.lighting.philips.com/dynalite

Documents / Resources



PHILIPS DMRC210 Dynalite Relay Controller [pdf] Instruction Manual DMRC210, Dynalite Relay Controller, DMRC210 Dynalite Relay Controller

References

• S Dynalite | Philips lighting

Manuals+,