



PHILIPS P3155 LED Ceiling Lamp with Sensor User Manual

[Home](#) » [Philips](#) » PHILIPS P3155 LED Ceiling Lamp with Sensor User Manual 

PHILIPS P3155 LED Ceiling Lamp with Sensor User Manual



Contents

1

Instructions

2

Detection area

3

Application Note

4

Documents / Resources







5





Related Posts

Instructions


Symbols



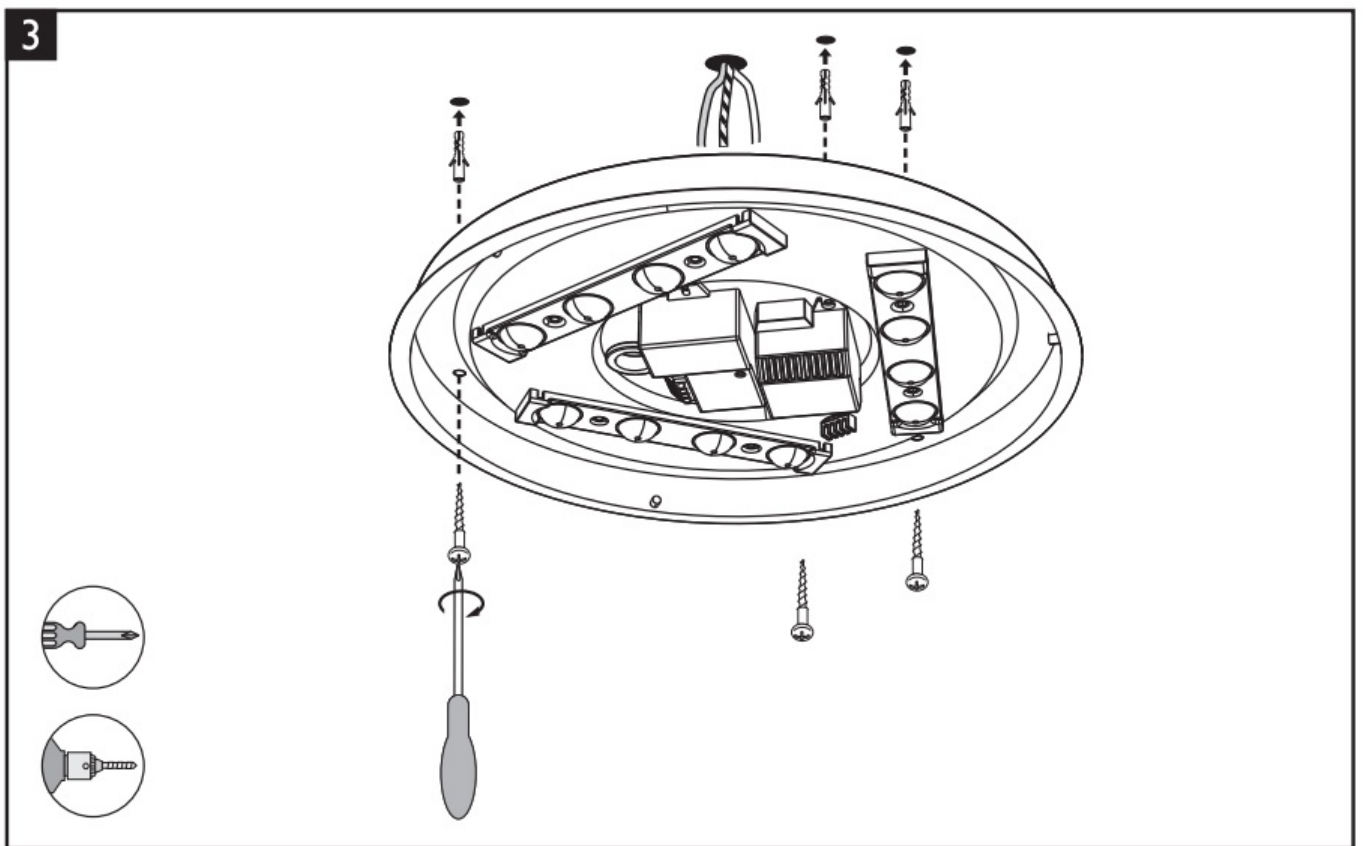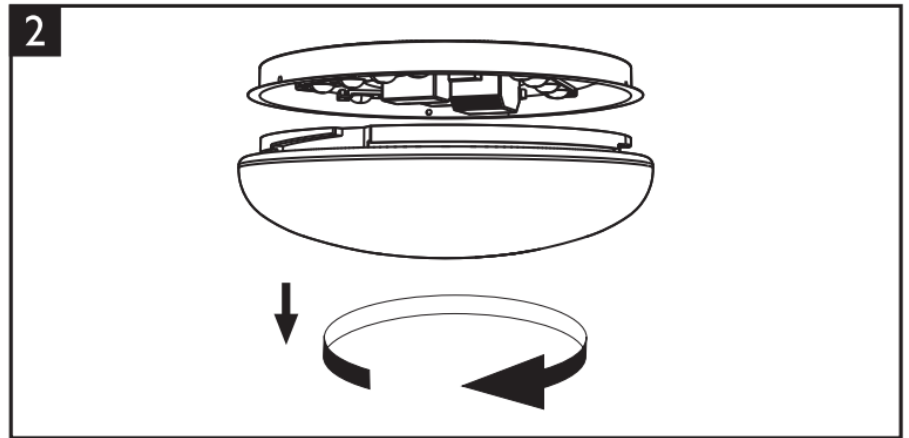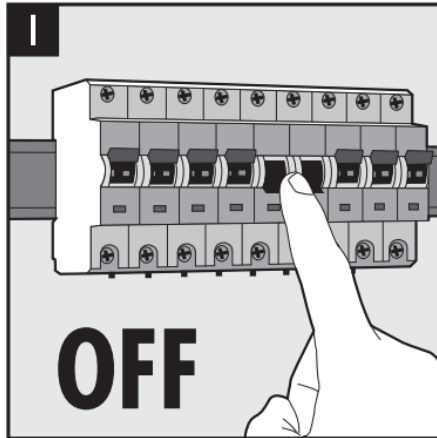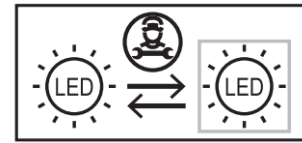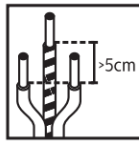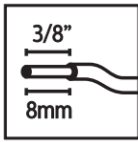


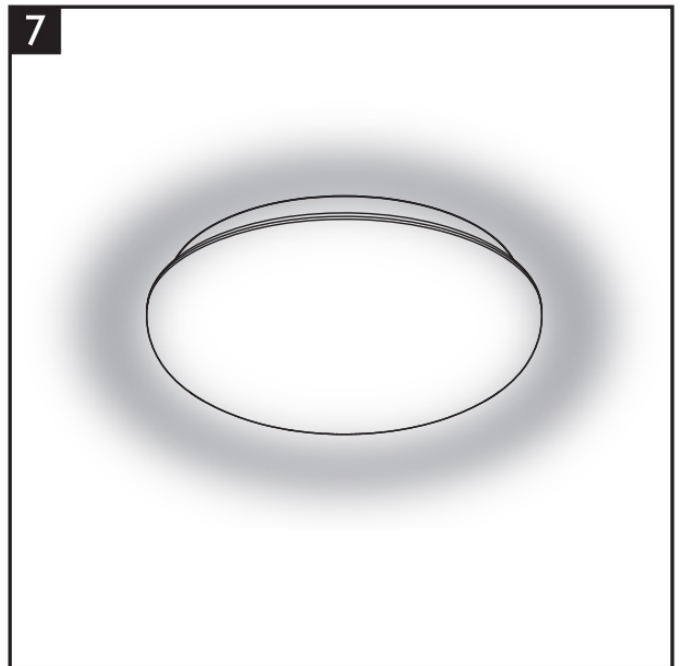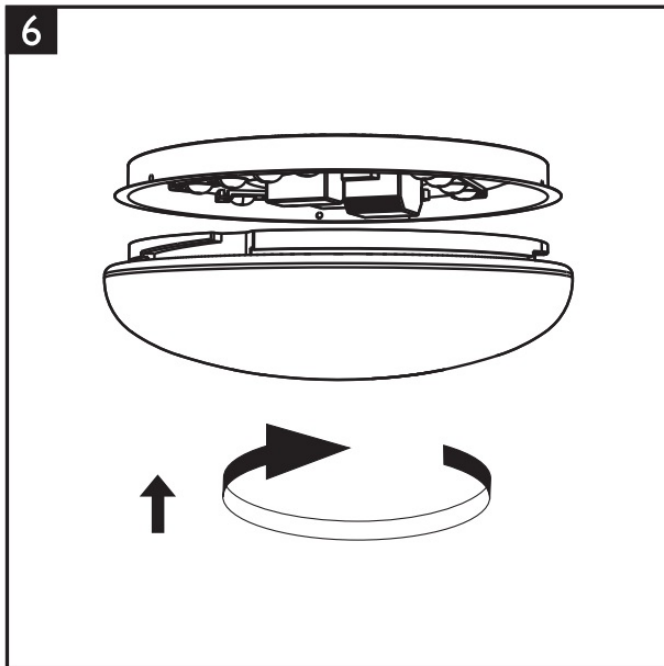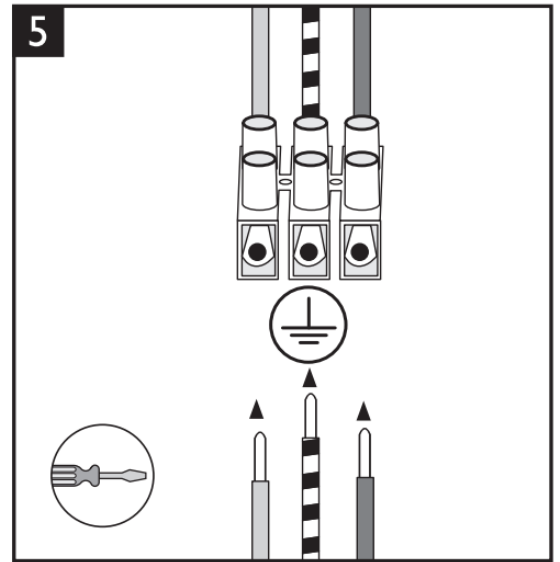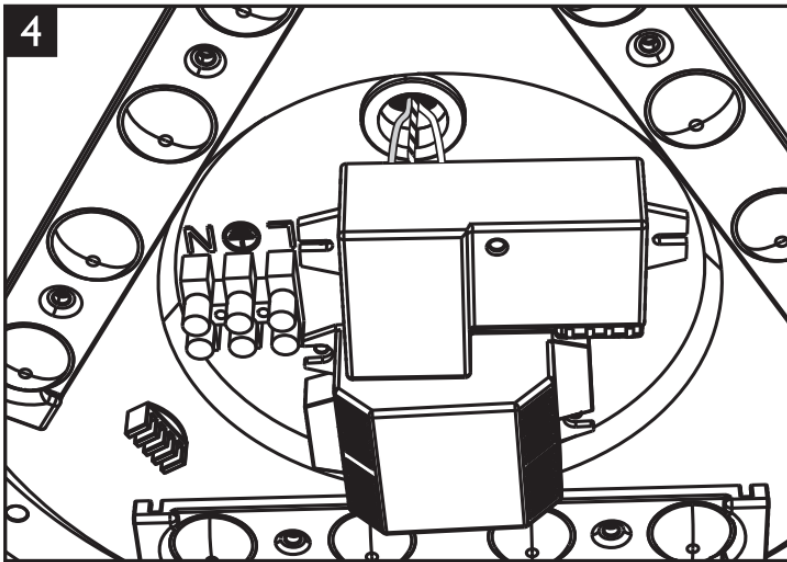


DIP switch settings

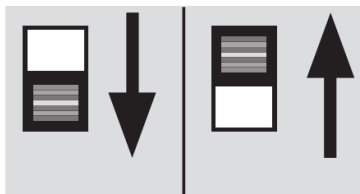

Default setting

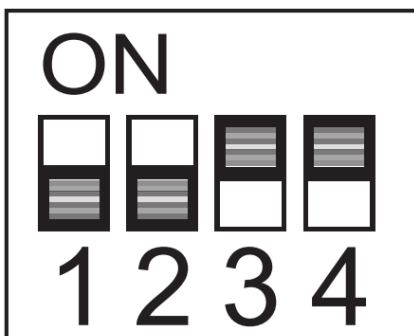

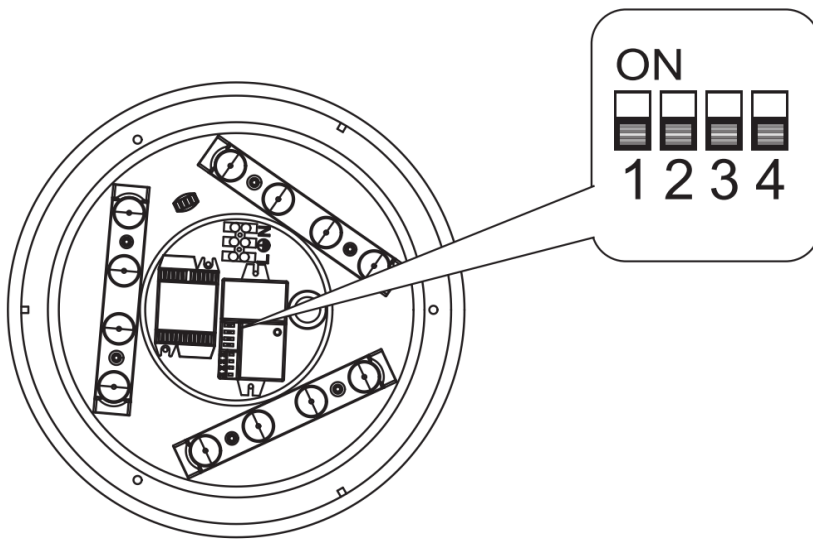



Detection area (default 50%) Detection area can be increased by selecting 100% on the DIP switches to fit precisely each application.

1	Detection area
	100%
	50%


Hold time (default 3 min.) Refers to the time period the lamp remains at 100% illumination after no motion detected.

2	3	Hold Time
		5S
		1min
		3min
		10min


Daylight sensor (default enable mode) The sensor can be set to only allow the lamp to illuminate bellow a defined ambient brightness threshold (251ux). When set to disable mode, the daylight sensor will switch on the lamp when motion detected regardless of ambient light.

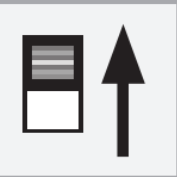4	Daylight Sensor
	ENABLE
	DISABLE

Detection area

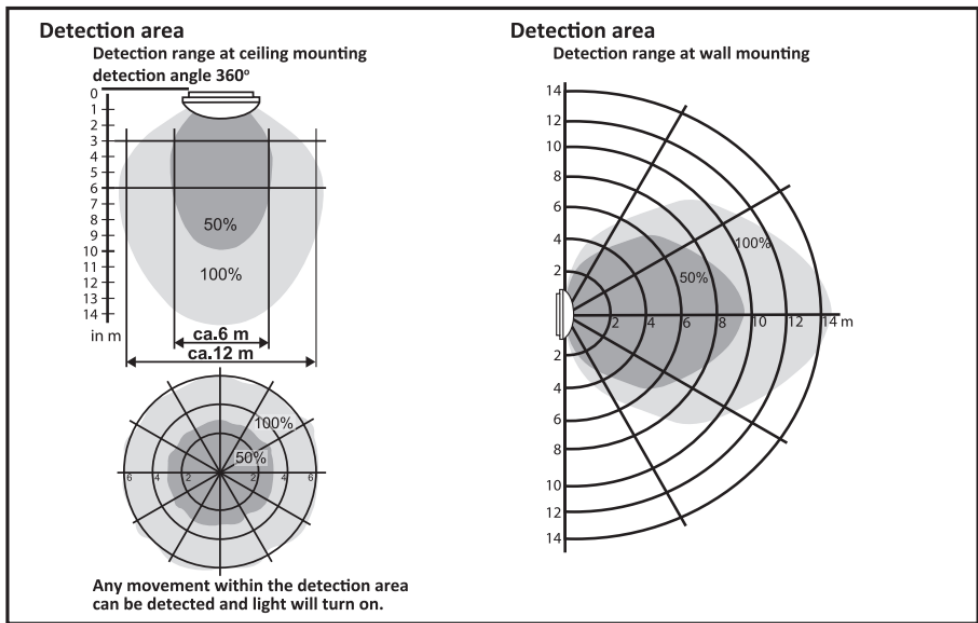

Application Note

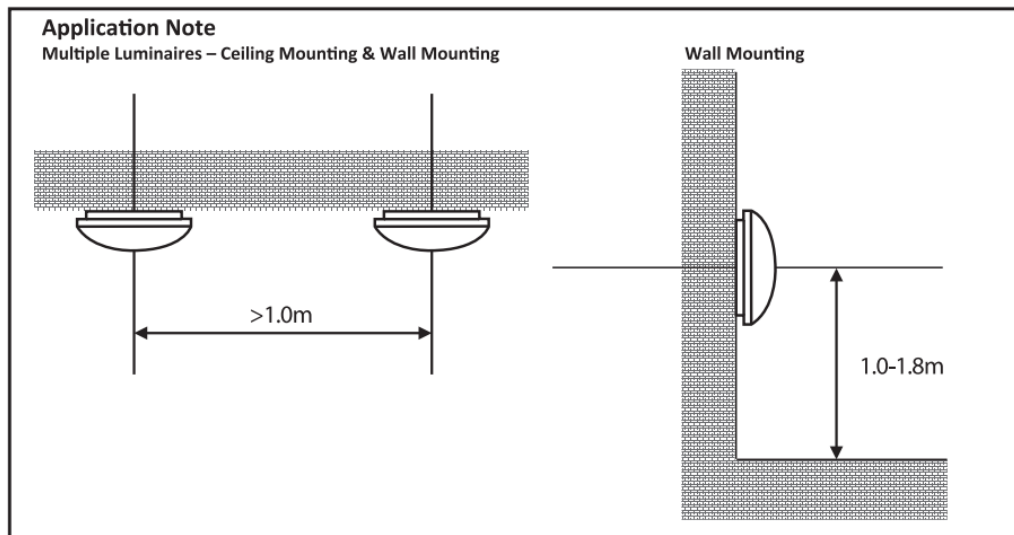

Philips and the Philips shield emblem are registered trademarks of Koninklijke Philips N.V.

Signify

I.B.R.S. / C.C.R.I. Numero 10461

5600 VB Eindhoven, the Netherlands

www.philips.com/lighting

@ 2021 Signify Holding

signify


Signify Commercial UK Limited

Unit 3, Guildford Business Park,

Guildford, Surrey, GU2 8XG, UK



Documents / Resources

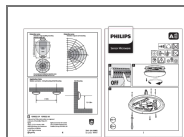

[PHILIPS P3155 LED Ceiling Lamp with Sensor](#) [pdf] User Manual

P3155, LED Ceiling Lamp with Sensor, P3155 LED Ceiling Lamp with Sensor