



phocos Pytes Inverter User Guide

[Home](#) » [phocos](#) » phocos Pytes Inverter User Guide 

Contents

- [1 phocos Pytes Inverter](#)
- [2 Connect the cables and set the DIP Switch](#)
- [3 Program the inverter](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



phocos Pytes Inverter



Connect the cables and set the DIP Switch

Connect the power cables between inverter and battery or the Busbars.
 A custom ethernet cable is needed for the communication between Pytes E-BOX battery and Phocos Any-Grid™ series.

Figure 2.1.2.1 Pin assignment of Phocos Any-Grid™ series inverter

Pin	1	2	3	4	5	6	7	8
Function			RS-485B		RS-485A			

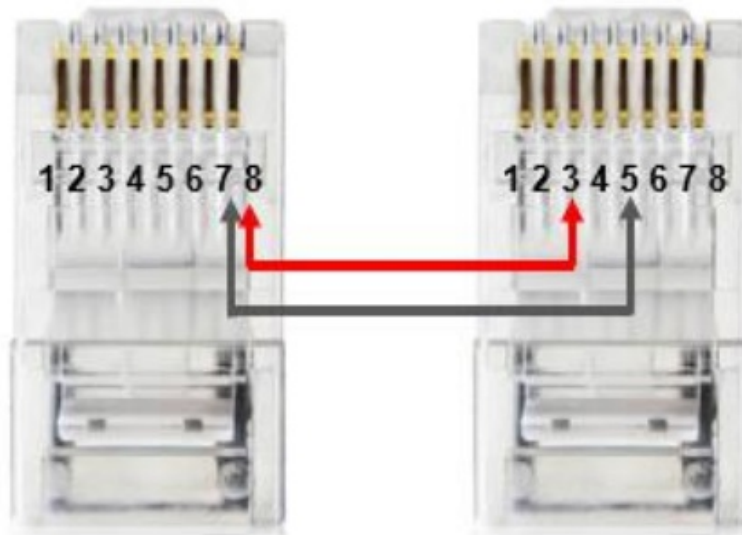


Figure 2.1.2.2 Phocos ethernet cable

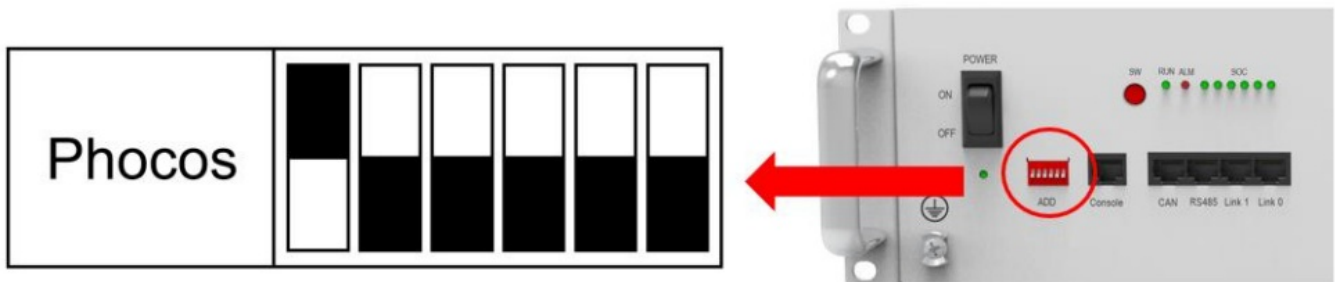


Figure 2.1.2.3 Phocos DIP switch setting

Plug in the battery end into the RS485 port of the Bytes E-BOX battery and plug in the inverter end into Phocos BMS Port as shown in Figure 2.1.2.4

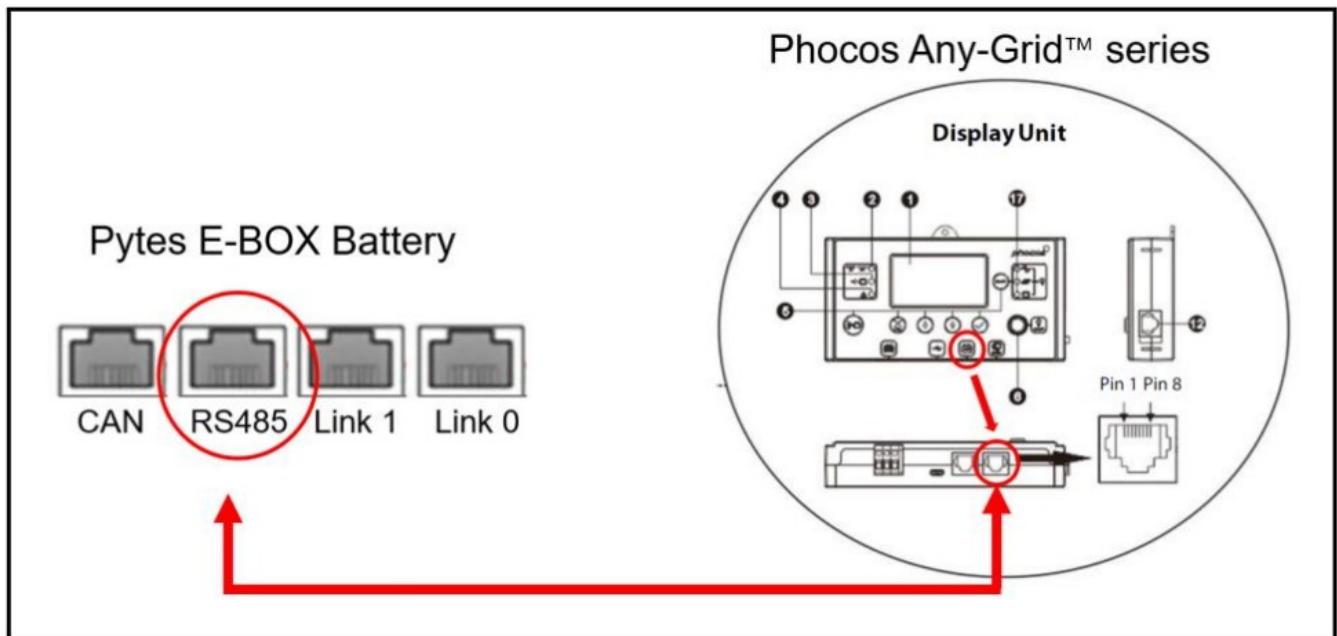


Figure 2.1.2.4 Phocos inverter comm cable connection

Program the inverter





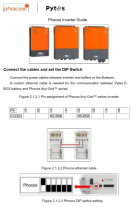
- Press  for 3 seconds to enter settings mode.
- Press  or  select between settings menus. Once selected, press to  confirm the selection or exit without confirmation.
- Select 05 (Battery type) and set the value to (RS-485) as shown in Figure 2.1.2.5



Figure 2.1.2.5 Phocos inverter battery type selection

- Please refer to the Phocos AnyGrid Hybrid inverter manual for more settings such as Grid Setup, PV Setting, etc.

Documents / Resources

	phocos Pytes Inverter [pdf] User Guide Pytes Inverter, Pytes, Inverter
---	---

Manuals+.