

 


Phomemo M08F A4 Portable Printer User Guide

[Home](#) » [Phomemo](#) » Phomemo M08F A4 Portable Printer User Guide 



Quick Start Guide
M 0 8 F Phomemo A4
Portable Printer

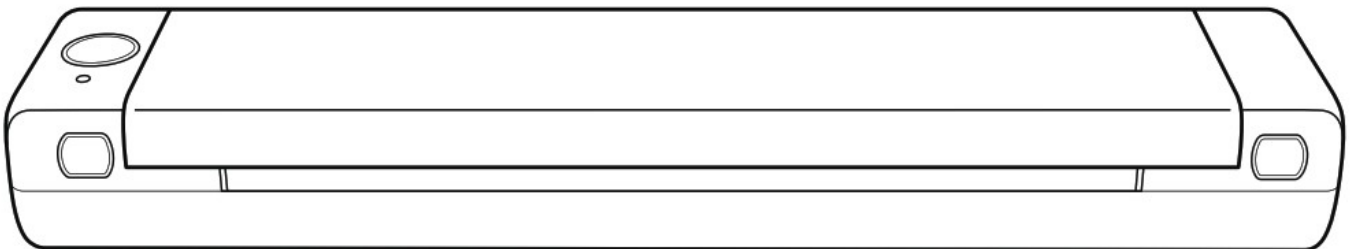


Before using, please read this manual carefully and keep it properly for future reference.

Contents

- 1 Package Contents
- 2 Printer Components
- 3 Precautions
- 4 Instruction Guide
- 5 How to Download and Install Driver
- 6 After-sales Service
- 7 FCC Warning
- 8 Warranty Card
- 9 Documents / Resources
- 10 Related Posts

Package Contents

 
① Printer*1

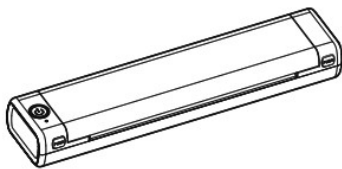


② Data Cable *1



 
③ Flannel Bag*1

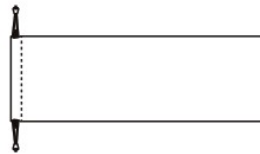

④ Quick Start Guide*1

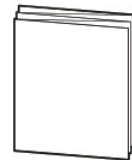 

Printer Components

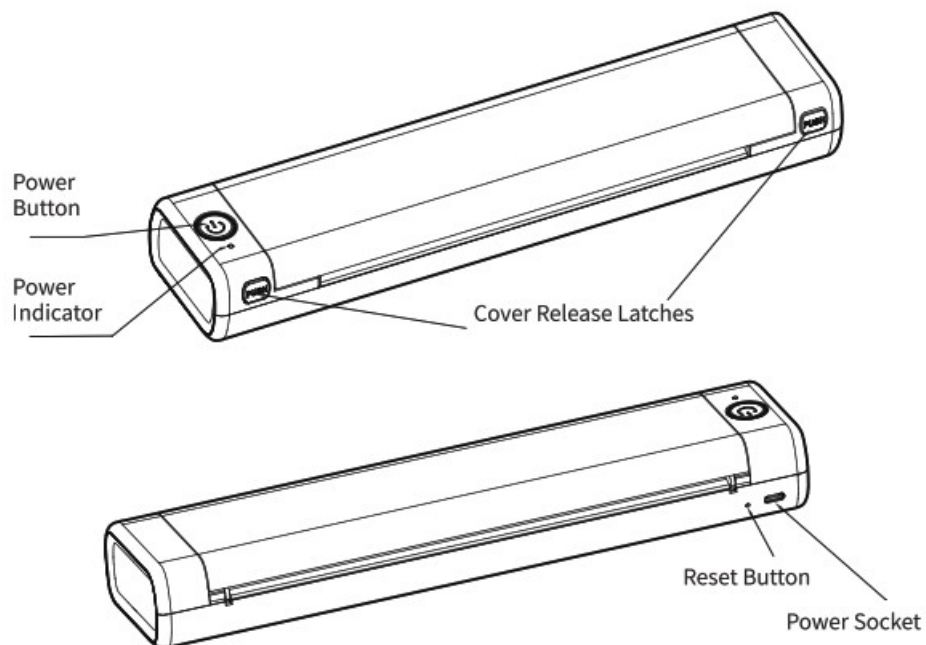 

Indicator Light Guide

Name	Status	Description
Power Indicator	Lit (Red)	Out of paper/ Cover is open/ Overheat
	Blinking (Red)	Low power
	Lit (Green)	Normal
	Blinking (Green)	Charging

Button Function

(Power) Button Function	Operation
Turn on the printer	Press and hold the button for around 3 seconds until the power indicator light turns on.
Print QR code	Double-press the button to print QR code. You can scan the QR code using the App on the phone and connect to the printer.
Turn off the printer	Press and hold the button for around 3 seconds until the power indicator light turns off.

Precautions

1. Please use 5V/2A input for charging, and it is recommended to use mobile phone power adapter for charging.
2. Please connect the USB cable to the power adapter before charging, Please gently insert or unplug the charging cable when charging, to prevent excessive force from damaging the port.
3. After the charging is completed, please unplug the charging cable in time.
4. In order to avoid danger, do not use or charge in the environment of high temperature, high humidity, heavy smoke and dust, such as in bathroom, steam room, near to open flame, etc.
5. Improper charging may cause damage to the print head.
6. Do not touch the print head to prevent scalding caused by overheating.
7. The tearing blade is sharp, please be careful to avoid touching it by mistake.
8. If the machine is malfunctioning, insert the reset hole to restart the machine.

Battery warning instructions

- It is forbidden to disassemble, hit, squeeze the battery, or throw it into fire;
- If severe swelling occurs, please do not reuse it;
- Do not place in a high temperature environment, and it is strictly prohibited to use the battery after soaking in water; There is a danger of explosion if the battery is replaced by the wrong type. Be sure to dispose of the used battery according to the instructions;
- If consumers use a power adapter for power supply, they should purchase a power adapter that meets the requirements of corresponding safety standards or a power adapter with CCC certification.

Instruction Guide

4.1 Install App

Download the App


Please search for “Phomemo” on your phone’ s App market and download the App.



4.2 Install and change the printer’ s consumable

1. Installing Consumable

Use two hands to hold the paper and make sure it is straight and aligned. Insert the paper carefully into the printer’ s feeder until the rotler pulls the paper to its optimal position. To get the best printing quality, please use original Phomemo papers.

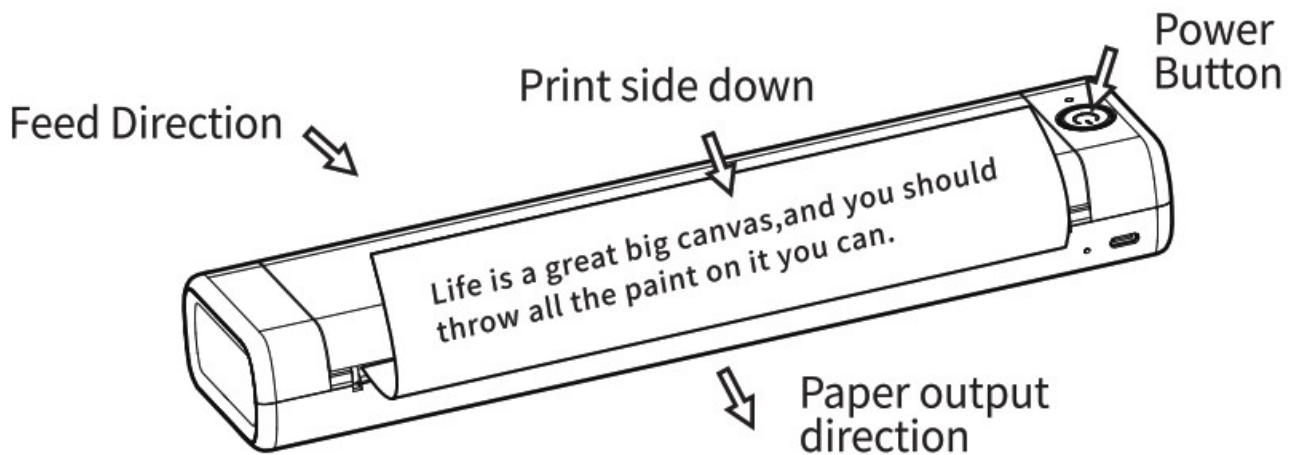

Note:

1. The paper must be inserted aligned to the paper feeder.
2. The paper can only be printed on one side, please check the paper. The side printed with “This side should face up” is the non-printable side and should be installed with that side faced up.


2. Changing Consumable

1. You can set the paper as “Single paper” or “Fanfold A4 paper” in the App.
2. Refer to the instructions on “Installing Consumable” to install the relevant consumables.



Note:

1. When you need to take out the printing paper, press the PUSH buttons simultaneously to open the printer cover and take out the paper.
2. When using “Fanfold A4 paper”, after printing your documents, tear along the perforation lines.

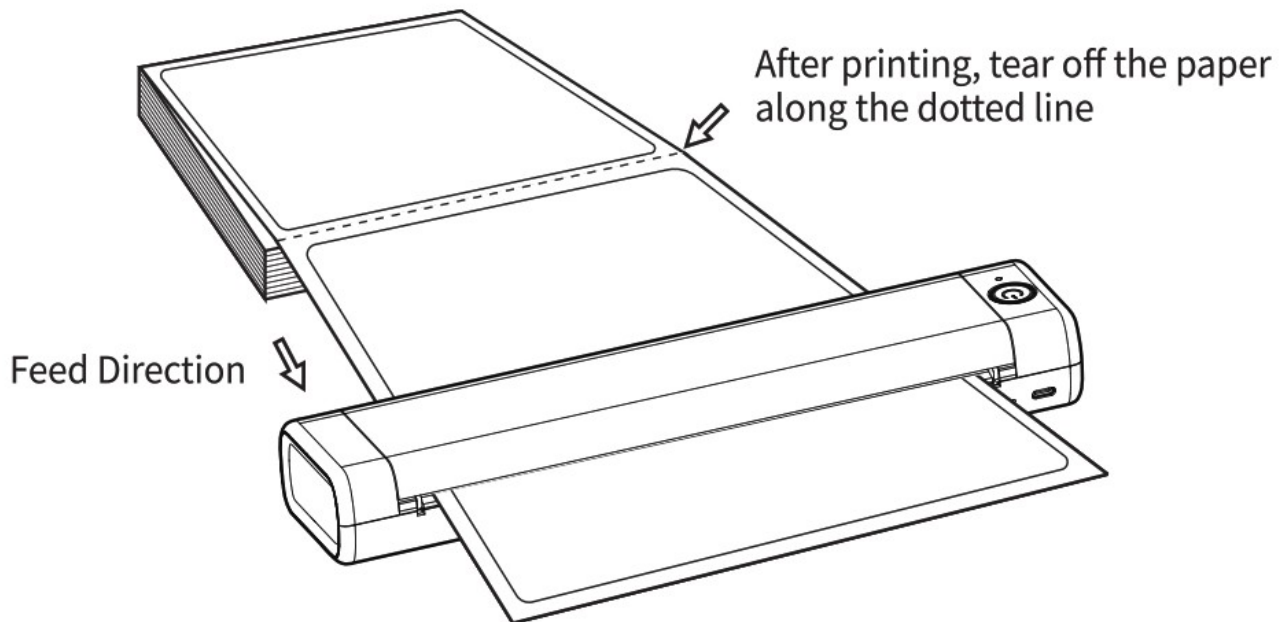


4.3 Connect the printer to the App

Method 1:

Turn on your phone's Bluetooth and open your Phomemo App. Press the button on the top right of your Phomemo App home page and select MO8F from the list.

Note: Android system needs to enable positioning and allow app to obtain relevant permissions.

 Method 2: Double-press the printer's power button to print a QR code. Open your Phomemo App and press the button on the top right of your Phomemo App home page. On the selection page, press scan and scan the QR code to connect to the printer.

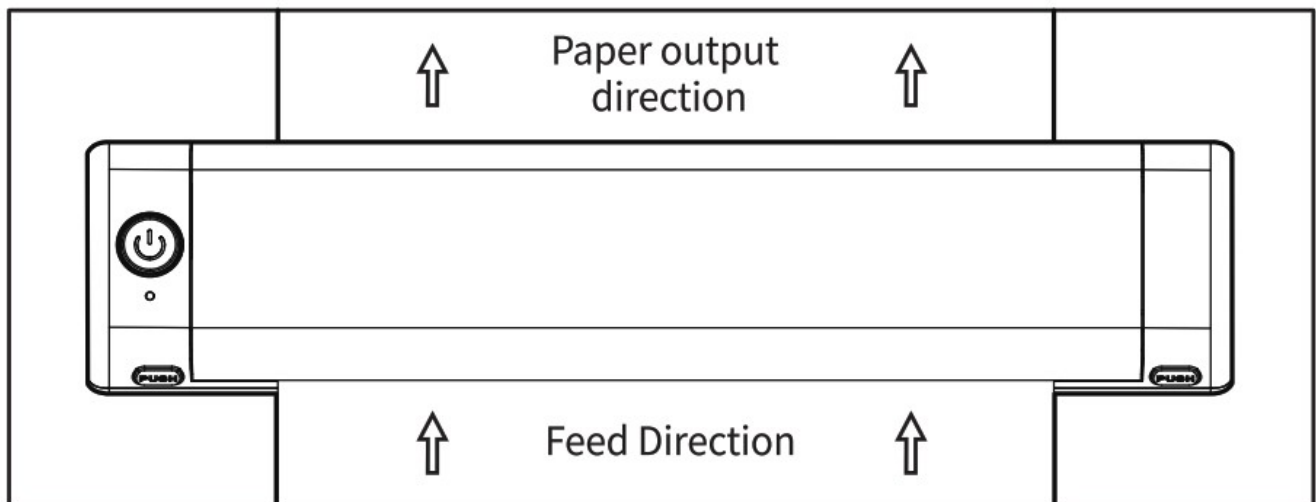

How to Download and Install Driver

Method 1:

Use the USB pendrive included in the package to obtain the latest driver.

Download the relevant driver according to the your operating system version and follow the instruction to install the driver.

Method 2: Download the latest driver from the official website. Download the relevant driver according to the your operating system version and follow the instruction to install the driver.

Official website: <https://phomemo.com/pages/download-center-m08f>



Download

M08F App in Google Play

M08F App in APP Store

M08F PC Driver For Windows

M08F PC Driver For MAC

UN -If you wish to obtain more tutorials on how to install the driver, please
Noles Open your Phomemo APP > Profile > Use Tutorial to obtain more guidance. |!

After-sales Service

6.1 Warranty description

* Although the product has undergone strict testing and quality inspection, accidents may occur during transportation, resulting in damages to the machine. If there is any problem with the printer, please contact us through the following methods. We have a quick response after-sales team to solve the problem professionally.

* If the problem is still not solved through our joint efforts, we will replace you with a new machine for free, and you need not to pay any fees. Your satisfaction makes us advance.

6.2 After-sales information

OnlineContact information:

Whatsapp : +86 13928088284 / +86 15338193665

Skype : Phomemo Team-Jessie / Phomemo Team-Helen

Customer Service phone number: +1 855 957 5321(US only)

Service time: Mon-Fri 9AM-5PM (EST) for any questions & suggestions.

Email address:support@phomemo.com

Official Website:www.phomemo.com



Please search for "Phomemo" to get the printer operation guide

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed

and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Warranty Card

Return
Exchange
Repair

User Info	Name: Gender:	Phone:
	Address:	
Product Info	Purchase date:	
	Product order number:	
	Product Serial Number:	
Requirement s of return /replacement /repair	Reason description:	
Maintenance records	Failure condition:	Maintenance person:
	Handling situation:	Delivery date:
	Maintenance ticket number:	Delivery date:

 
Documents / Resources

Before using, please read this manual carefully and keep it nearby for future reference.

EO: Package Contents

- ☐ Printer(s) ☐ Data Cable(s) ☐ Floppy Disk(s) ☐ Quick Start Guide(s)

62. Printer Components



Indicator Light Guide		
Name	Status	Description
Power indicator	ON (Red)	Out of power (cables open/overheat)
	Flashing (Red)	Low power
	ON (Green)	Normal
	Flashing (Green)	1 Alarm

Phone Function	Operation
Turn off the phone	Press and hold the button for around 5 seconds until the power indicator light turns on.
Turn off the code	Press and hold the button to turn off the code. You can also turn off the code using the App or the phone and connect to the printer.
Turn off the printer	Press and hold the button for around 5 seconds until the power indicator light turns on.

ES. Precautions

 
- Please use the 30W input for charging, and it is recommended to use mobile phone power adapter for charging.
- Please connect the USB cable to the power adapter before charging. Please gently insert or unplug the charging cable after charging. Do not use excessive force when connecting the port.
- Please do not use the charging cable in the following situations: the charging cable is damaged. We advise to avoid using the charging cable in the environment of high temperature, high humidity, heavy smoke and dust, such as in bathroom, shower room, near to open flame, etc.
- Improper charging may cause damage to the port head.
- If the USB head of the port head is prevented accidentally from overheating.
- If the heating time is very short, please be careful not to touch the USB head.
- If the USB head is damaged, please do not use it.

Battery warning instructions

- * Never smoking or flameable, lit, open fire, battery, or flame is nearby;
- * When handling, please do not touch it;
- * Do not place in a high temperature environment, and it is strictly prohibited to use the battery after working in heat;
- * There is a danger of explosion if the battery is replaced by the wrong type. Be sure to dispose of the used battery according to the instructions;
- * Consumers use a power adapter for power supply, they should purchase a power adapter that meets the requirements of our corresponding safety standards or a power adapter with CCC

Ed. Instruction Guide

- 4.3 Install App
- Download the App
- Please search for "Pneumonia" on your phone's App-store and download the App
- 4.3.1 Install and change the printer's console
1. Installing the console
- Insert two hands to hold the paper and make sure it is straight and aligned. Insert the paper into the printer's handle until the roller pulls the paper to its optimal position. The paper will be automatically aligned and the printer will print the paper.



-



66. How to Download and Install Driver



Method 3:
Download the Intel driver from the official website. Download the wireless driver according to your operating system version and follow the instruction to install the driver.
Official website: <https://support.lenovo.com/ja/jp/download-center/wifi>

66. Official Printing Paper Type

Normal thermal paper: Does not contain Bisphenol-A. The printed lines can last for 20 years if stored in a dry environment at room temperature without direct sunlight.

Disinfectant Quick-drying thermal paper: Does not contain Bisphenol-A, can be disinfected with 95% alcohol. The printed lines last up to 10 years if stored in a dry condition at room temperature without direct sunlight.

*The printing paper mentioned above are official for printing papers.

*Any issues with our printer affecting using non-official printing papers will not be covered under our warranty policy.

07. After-sales Service

4.3 Release description

1) Although the product has undergone extensive safety inspection, accidents may occur during maintenance, resulting in damage to the machine. If there is any problem with the printer, please contact it through the following methods. We have a special response team to solve the problem as soon as possible.

2) If the problem is still not solved through our joint efforts, we will replace you with a new machine for free, and we will not pay any money. Your satisfaction makes us advance.

6.2 After-sales information

Customer Center
WhatsApp: +86 13908906666 / +86 13908906666
Store: Phoenix Plaza 3624 Phoenix Nanshan
Customer Service phone number: +13908906666 (English only)
Service time: Mon-Fri 9:00-18:00 / Sat 9:00-17:00 for questions & suggestions.
Email address: support@phoenixm.com
Official Website: www.phoenixm.com
Website: www.phoenixm.com for more information and product introduction

©B. FCC Warning

- This device complies with part 25 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This device has been tested and found to comply with the requirements for class B digital devices, pursuant to part 15 of the FCC Rules. These requirements provide for certain protection against harmful interference in a residential environment.
- This device uses frequency modulation (FM) to transmit data. This type of modulation is known to produce less interference than amplitude modulation (AM).
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off, the user is encouraged to take one of the following measures to correct the interference:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/television technician for help.
- The steps that have been evaluated to prevent harmful RF exposure for the user are:
 - The device has been evaluated to meet general RF exposure requirements. The device was

ES. Mortgage Card

<input type="checkbox"/> Nature <input type="checkbox"/> Exchange <input type="checkbox"/> Rate		
Site info	Name	Gender Phone
	Address	
	Purchase date	
Product info	Product order number	
	Product Serial Number	
Requirements of return	Reason description	
Requirement input		
	Failure condition	Maintenance person
Reclamation results	Handling description	Delivery date

B0CFYMW9JX, B0BN3MR949, B0BTPHW2J4, B0BZ1Z1HR8, M08F, A4 Portable Printer, M08 F A4 Portable Printer, Portable Printer, Printer