

 


Phomemo P12 Label Maker Machine with Tape User Manual

[Home](#) » [Phomemo](#) » Phomemo P12 Label Maker Machine with Tape User Manual 

Phomemo P12 Label Maker Machine
with Tape User Manual

Please read this manual carefully before using this product and keep it for reference.

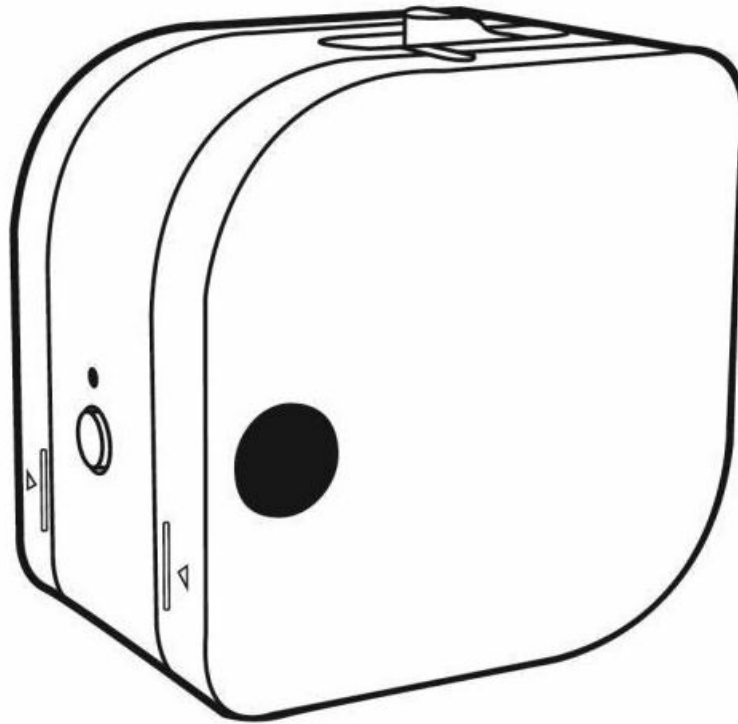


P12 User Manual

Contents

- 1 [Product description](#)
- 2 [How to change ribbon](#)
- 3 [Operation Guidance](#)
- 4 [How to changer ribbon](#)
- 5 [How to download the app](#)
- 6 [Attention](#)
- 7 [Note](#)
- 8 [Battery Warning Description](#)
- 9 [FCC Caution](#)
- 10 [Product Warranty Description](#)
- 11 [Non-warranty regulations](#)
- 12 [Warranty/Maintenance Card](#)
- 13 [Documents / Resources](#)
 - 13.1 [References](#)

 Product description

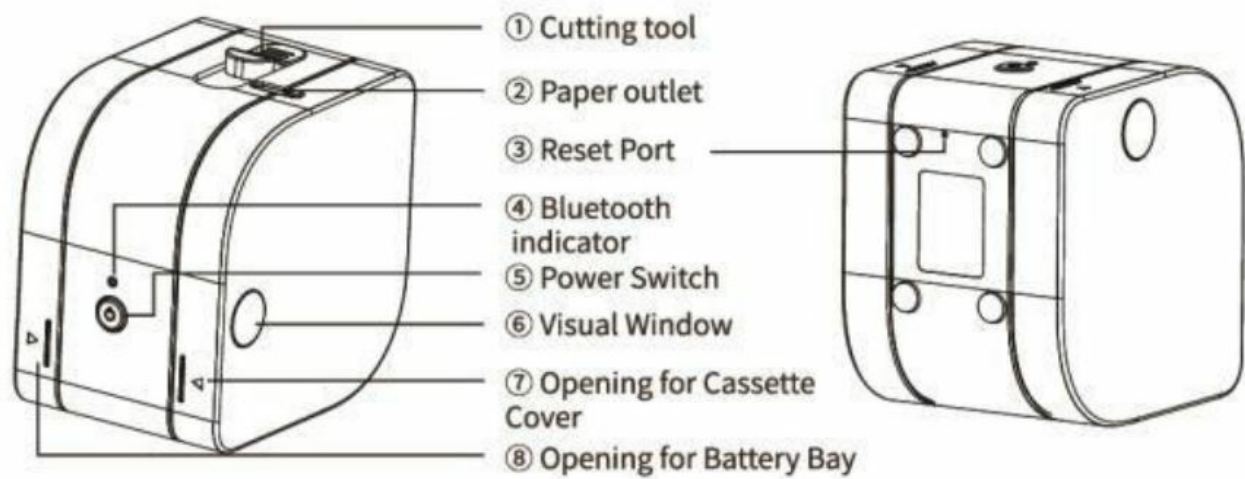


Indicator information


Status/Function		Color of indicator	Printing situation
Battery indicator	Normal	Continuous on (green)	Printing normally
	Low battery	Flashing (red)	Stop printing and shut down

Please Note: When the printing result of the machine is blurred or unclear, please replace the battery in time

 How to change ribbon

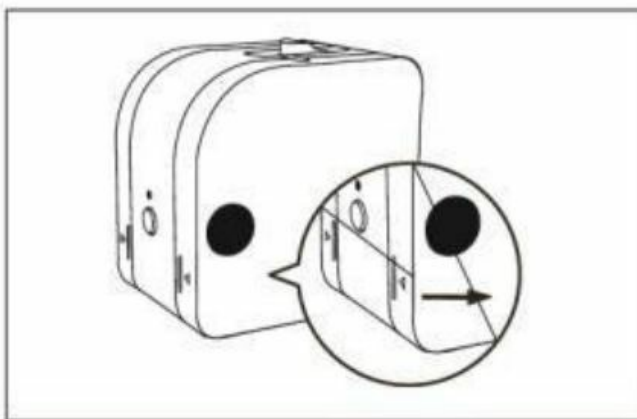


 1. Open the cover by pulling it out in the indicated direction of the arrow.

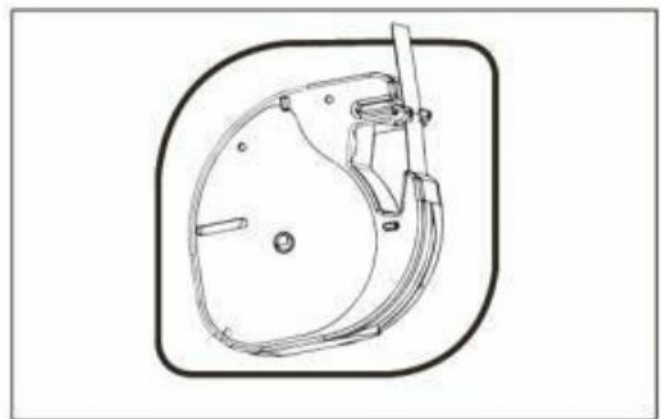


2. Put in the label tape cassette correctly as shown in the picture above. Close the cover to complete the installation

 Operation Guidance

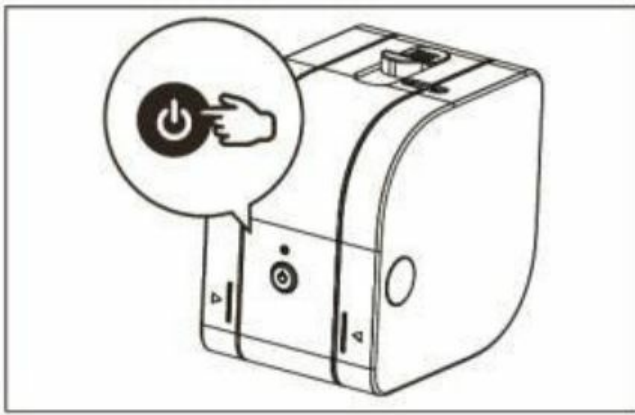


 1. Supply power by using six AAA batteries. To turn on the machine, press and hold the power button for 3 seconds

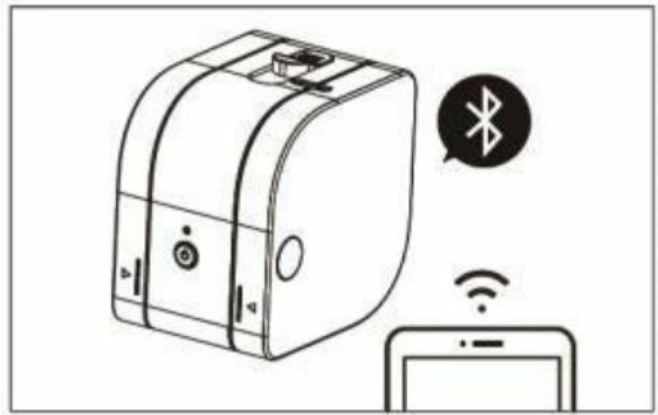


2. To connect the printer to your phone, search for the device on the app and select the device.

 How to changer ribbon

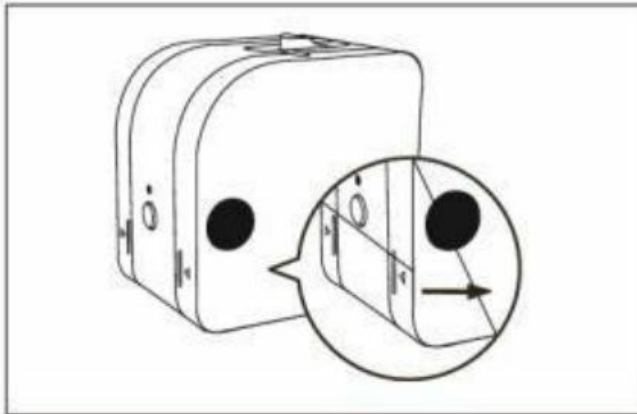

 1. Open the cover by pulling it out in the indicated direction of the arrow.

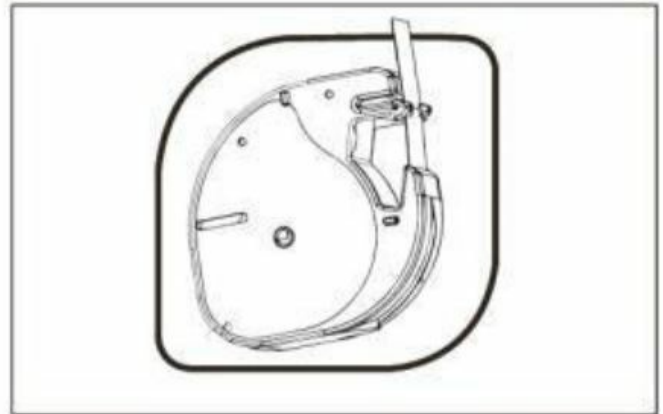

2. Put in the label tape cassette correctly as shown in the picture above. Close the cover to complete the installation

How to download the app

1. Get the app on App Store to Google Play



<https://apps.apple.com/us/app/phomemo/id1456102145>



<https://play.google.com/store/apps/details?id=com.quyin.phomemo&hl=en&gl=US>

2. Or Scan the qr Code to download the app



<http://downloadapp.quin.com/M110-Print-master/>

Attention

① Do not charge or use the printer in high temperature high humidity, or foggy circumstances(e.g. in a bathroom, a steam room or beside a fire) which may be dangerous.

(NOTE: This machine is not suitable for tropical environments)

② improper charging methods may cause damage.

③ Do not touch the print head; It may hot.

④ Be aware of the sharp blade.

⑤ If the machine is malfunctioning, the reset hole can be used to restart the machine.

Note

This equipment has been tested and found to comply within the limits of a Class B digital device, pursuant to Part 1 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encourage to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

-Consult the dealer or an experienced radio/T technician for help.

Battery Warning Description

Never disassemble, strike, squeeze or put into fire;
If there is severe swelling, do not continue to use;
Do not put in a high temperature environment. Do not use if immersed in water;
Be sure to replace with an appropriate type of battery. (There is danger of explosion if you replace it with the wrong type of battery.)
Be sure to dispose of the used battery as instructed.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions(1)this device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.

Product Warranty Description

Thank you for choosing Phomemo.

1.The free warranty period is 1 year from the date of purchase.

2.Within 30 days from the date of receipt, the user can choose to return the item.

Please save the warranty/maintenance card properly. The warranty/maintenance card will not be replaced if lost or damage.

Non-warranty regulations

The warranty is void under the following conditions:

- ① Exceeding the warranty period.
- ② Not presenting the original warranty/maintenance card.
- ③ Presenting a damaged warranty/maintenance card(e.g. torn or tampered with) Altering product information.
- ④ Damage caused by unauthorized repair, disassembling, etc,
- ⑤ Damage caused by human error.
- ⑥ Damage caused by natural disasters such as earthquakes, floods, windstorms, lightning strikes, or external disasters such as fires and home collapse.
- ⑦ Failure or damage caused by harsh conditions(oil, dust, moisture, direct sunlight, etc.)or failure to use or care for as required by the instruction manual.

Warranty/Maintenance Card

☐

Replace

☐

Return


☐

Repair

User Info	Name:	Gender:	Phone:
	Address		
Product information	Date of purchase		
	Product Order Number:		
	Product Serial Number:		
Return, Replace or Request	Reasons:		
Maintenance records	Fault conditions:		Maintenance staff
	Processing situation		Repair date:
	Repair ticket number:		Date of inspection:

 
Documents / Resources

Please read this user manual before using the product and keep it for reference.



P12 User Manual


Product description




Technical Information

Parameter	Value
Model	P12
Material	ABS
Weight	1.2kg
Dimensions	120mm x 80mm x 30mm

 
Operation Guidance



How to charge ribbon



How to download the App



Attention

1. Do not use the device in a high-temperature or high-humidity environment.
2. Do not use the device in a corrosive or explosive environment.
3. Do not use the device in a magnetic field environment.

- Increase the separation between the equipment and member
- Convert the apparatus into an outlet on a circuit different from that to which the member is connected
- Connect the member to an experimental voltage, if indicated by the label

• Connect the speaker wires to a power source and ensure that the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

Product certification

© All charges of application are paid
by means of Google Pay



- ### Description de l'avertissement de batterie

Description de la garantie du produit Franquise

- regime par le biais d'allocations.

Certification du produit

P12 Label Maker Machine with Tape, P12, Label Maker Machine with Tape, Maker Machine with Tape, Machine with Tape, Tape

© 2004 Blackwell Publishing Ltd

 
Full text

3. Il periodo di garanzia gratuita è di 3 anni dalla data di acquisto.
 4. Fino al giorno della data di scadenza, l'utente può scegliere di restituire l'articolo.

Conservare con cura la scheda di garanzia/monetazione. La scheda di garanzia/monetazione non verrà costruita in caso di smarrimento del negozio.



Creation



Numa d'exarce, golpex, aplice e prende fango;
Si hay una hinchaple peyne, no cont' nix usando.

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.