



PHONAK Roger DigiMaster V2 Speaker Column User Guide

[Home](#) » [PHONAK](#) » PHONAK Roger DigiMaster V2 Speaker Column User Guide 






Contents

- [1 Start](#)
- [2 Operating range](#)
- [3 Audio connection](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)


Start

Components and functions
Roger DigiMaster

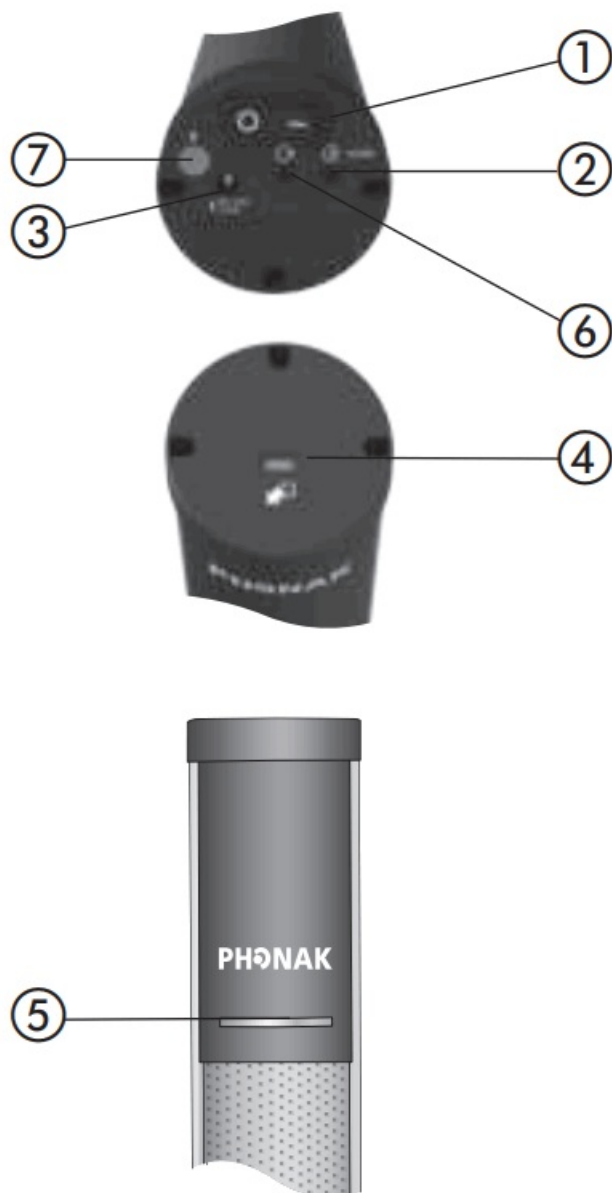

1. On/off
2. 3.5 mm audio input
3. Power socket
4. USB C
5. Indicator light (LED)
6. 3.5 mm audio output
7. Bluetooth


Power supply

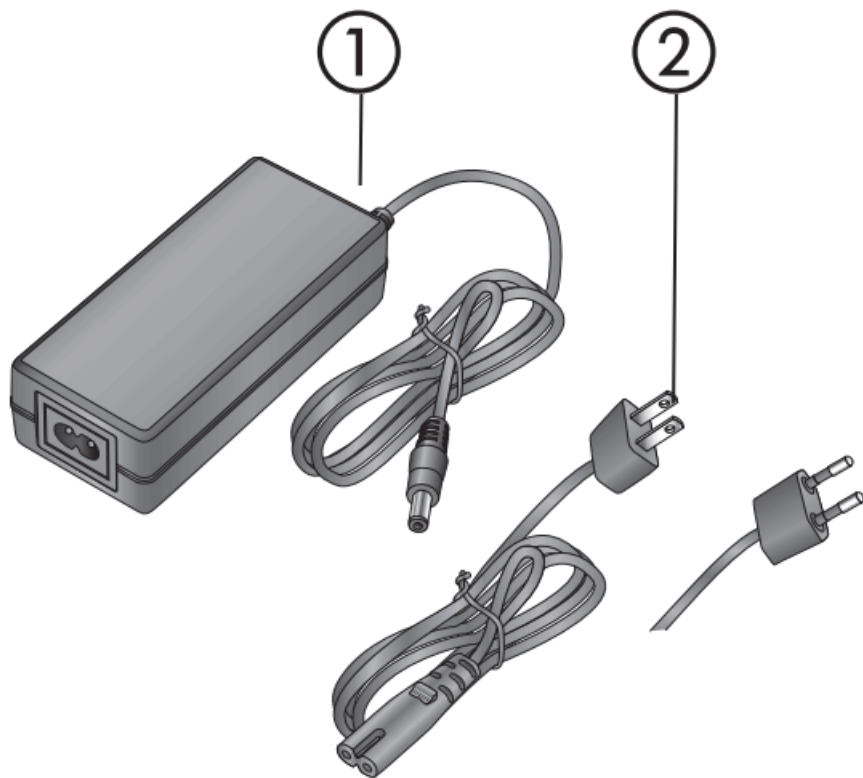


1. Power supply
2. US and EU cable

Package contents may vary slightly depending on your country


Option:
DigiMaster Floor stand + bag

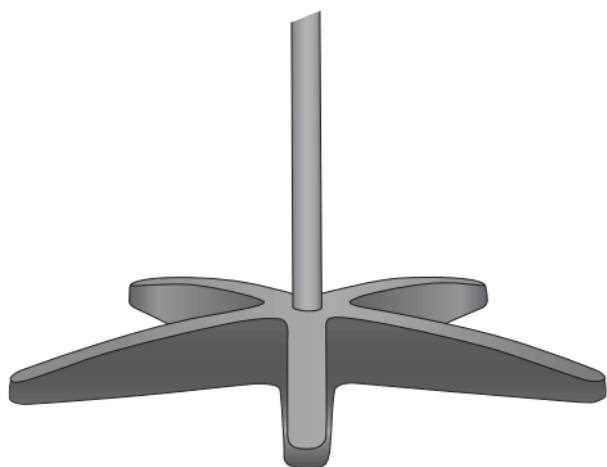


Option:
Wall mount kit

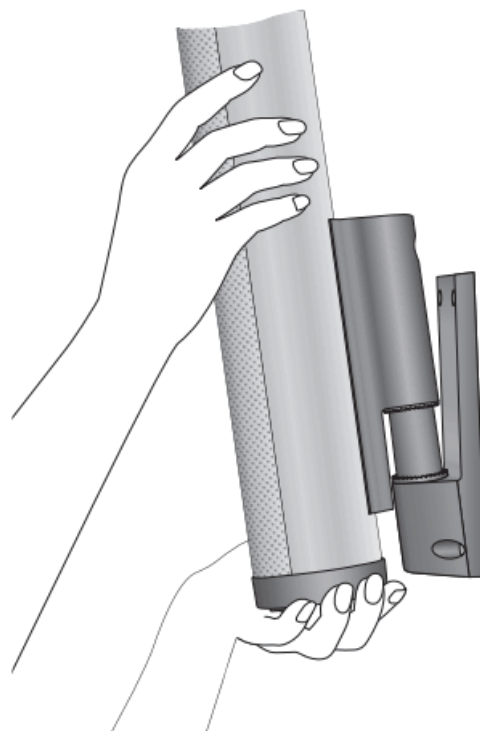

Option:
UK and AU cable

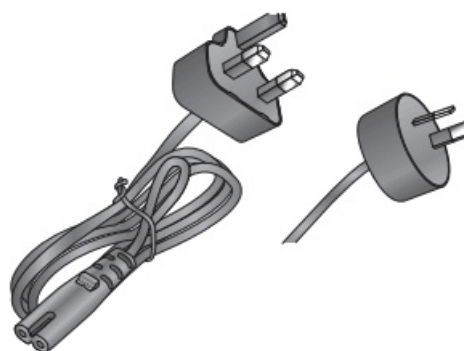


1. Mains

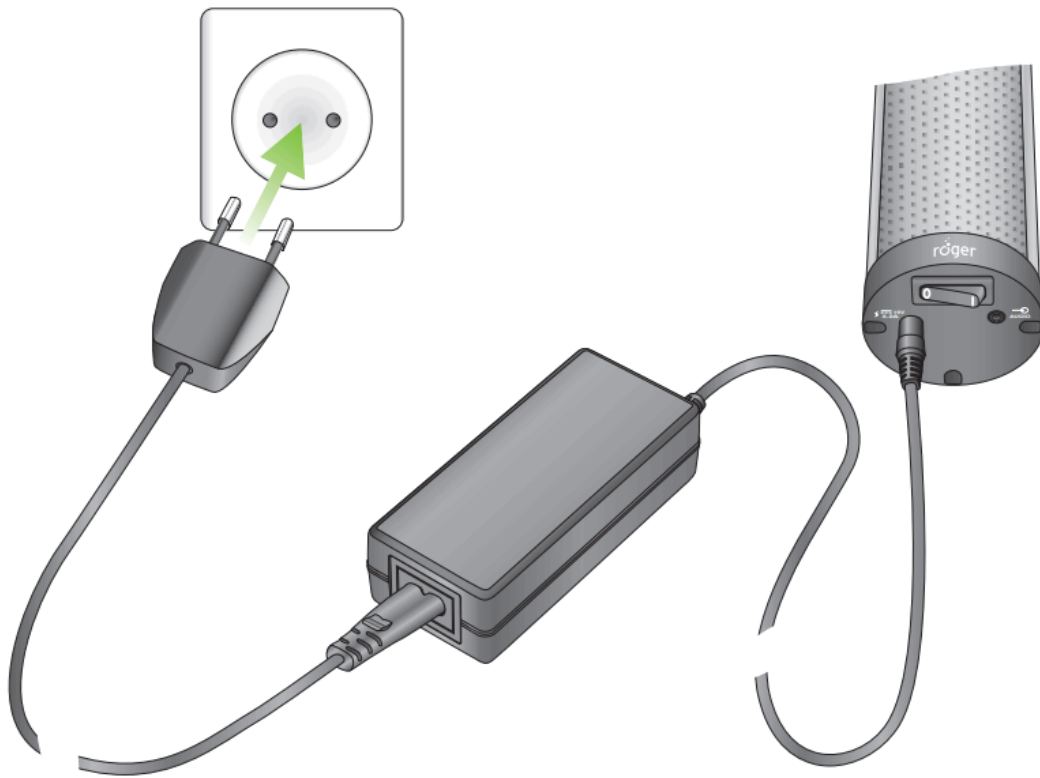


2. Switching Roger DigiMaster on





3. Connecting Roger DigiMaster

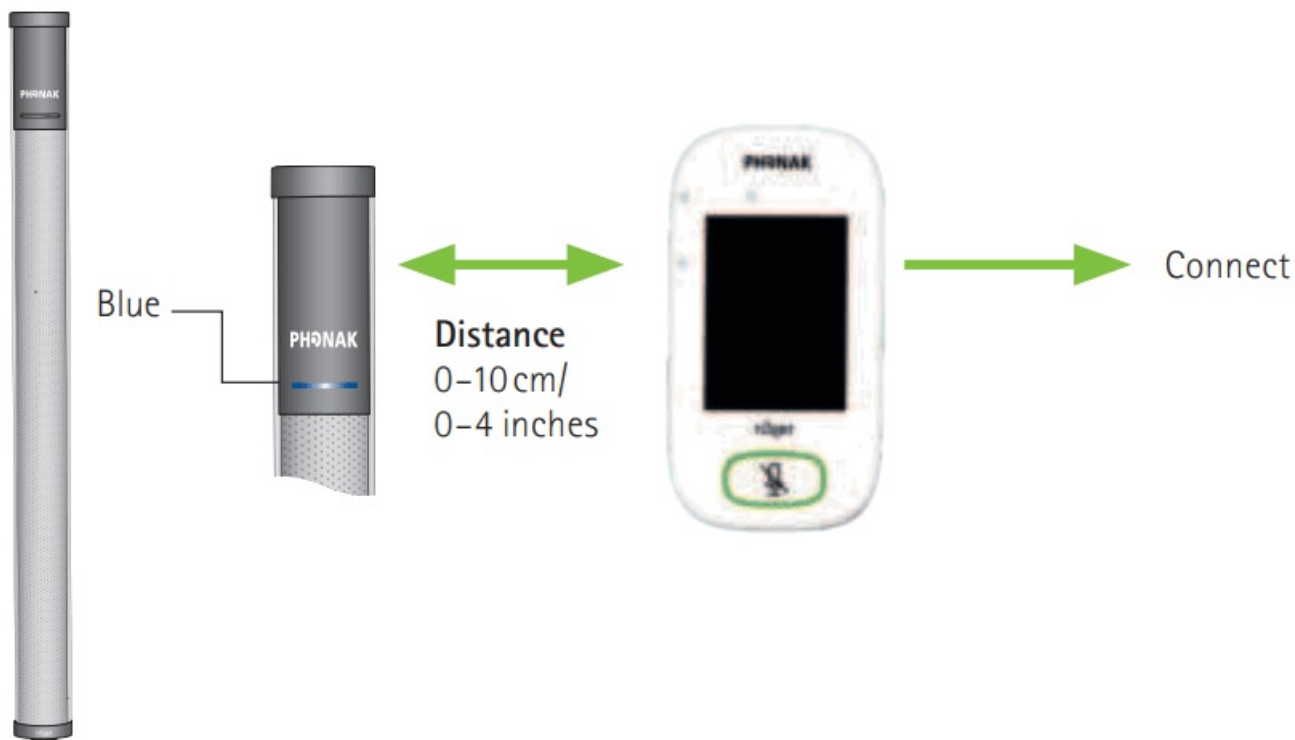

⚠ Connect Roger DigiMaster before first use (Connect).
Connecting Roger DigiMaster

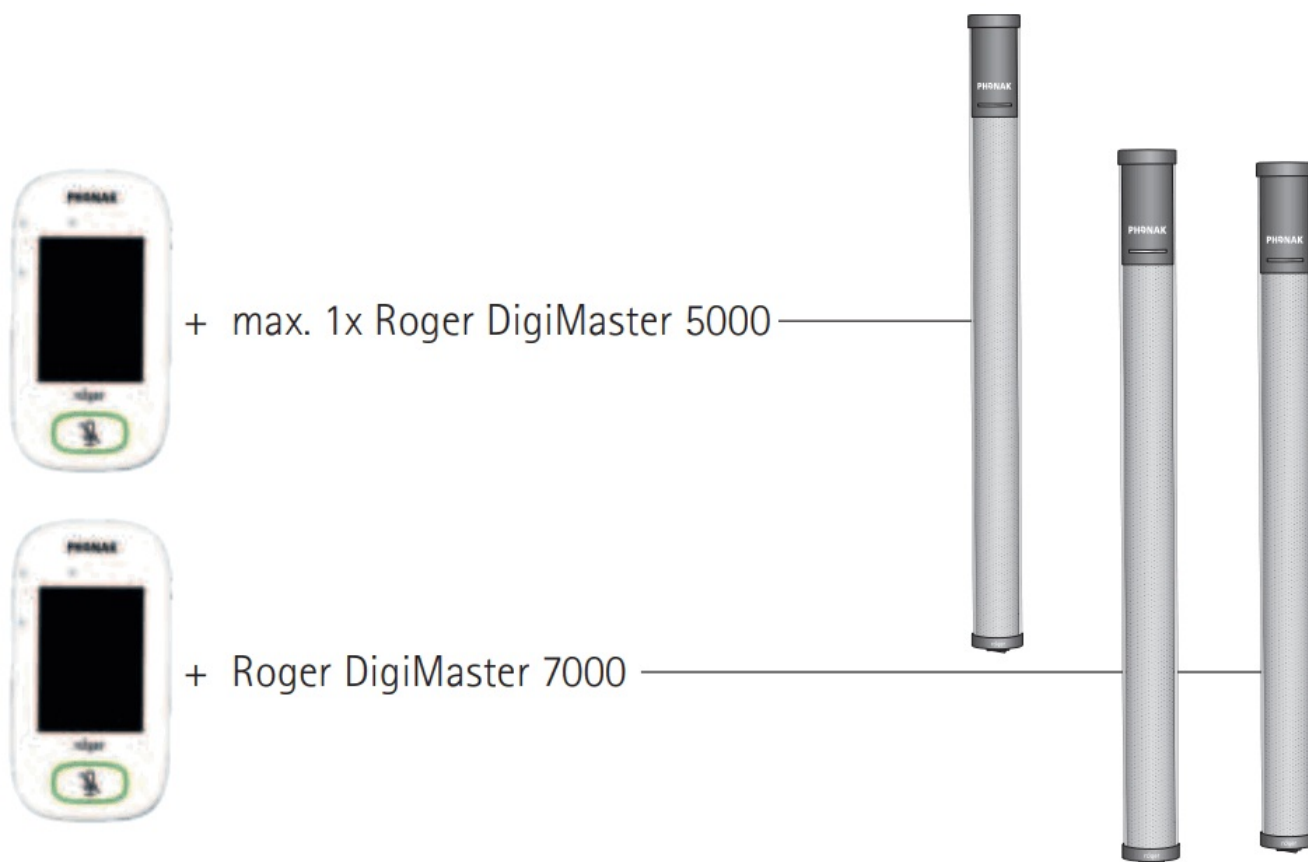

4. How to use Roger DigiMaster

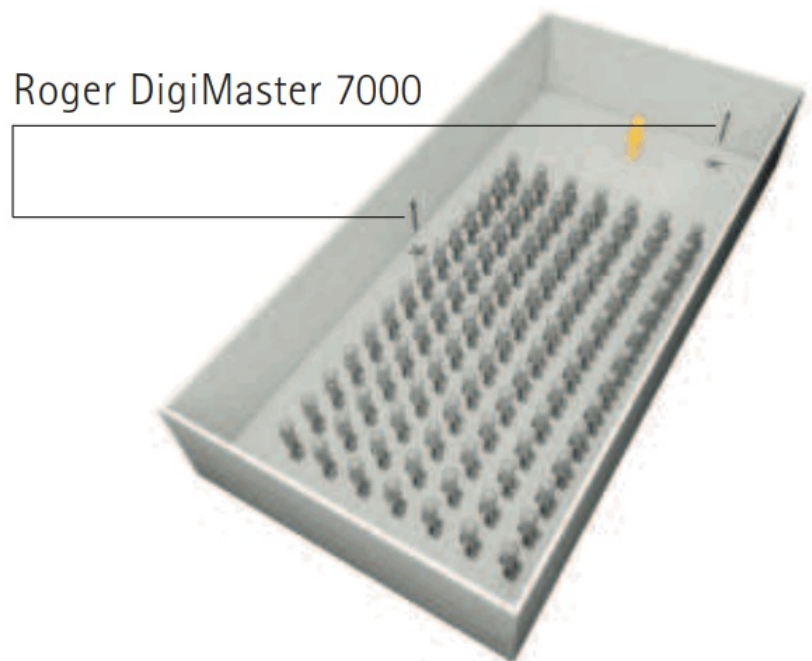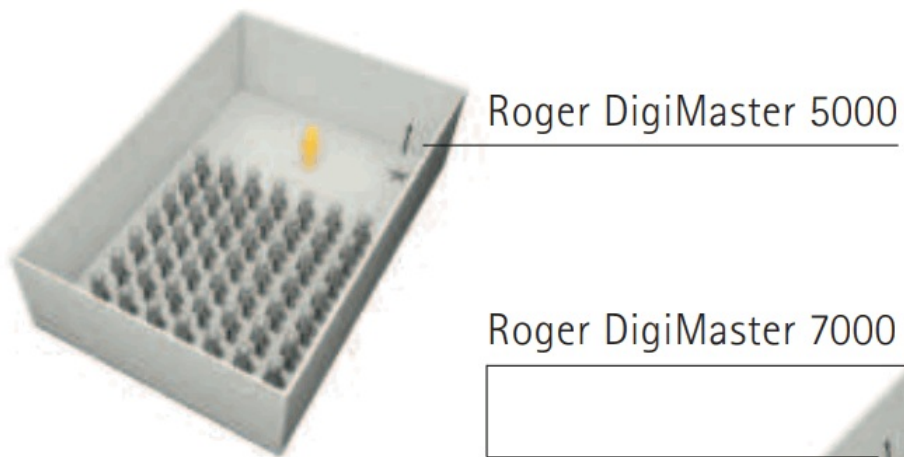


⚠ Same loudspeaker position whether using floor stand or wall mount.


5. Bluetooth® Pairing




1. Press shortly the Bluetooth button on the DigiMaster
2. LED: fast blue blinking (60 s pairing mode)
3. Pair the device (BT settings: DigiMaster xxxx)
4. LED: connected, blinking blue twice (1 s)

Operating range

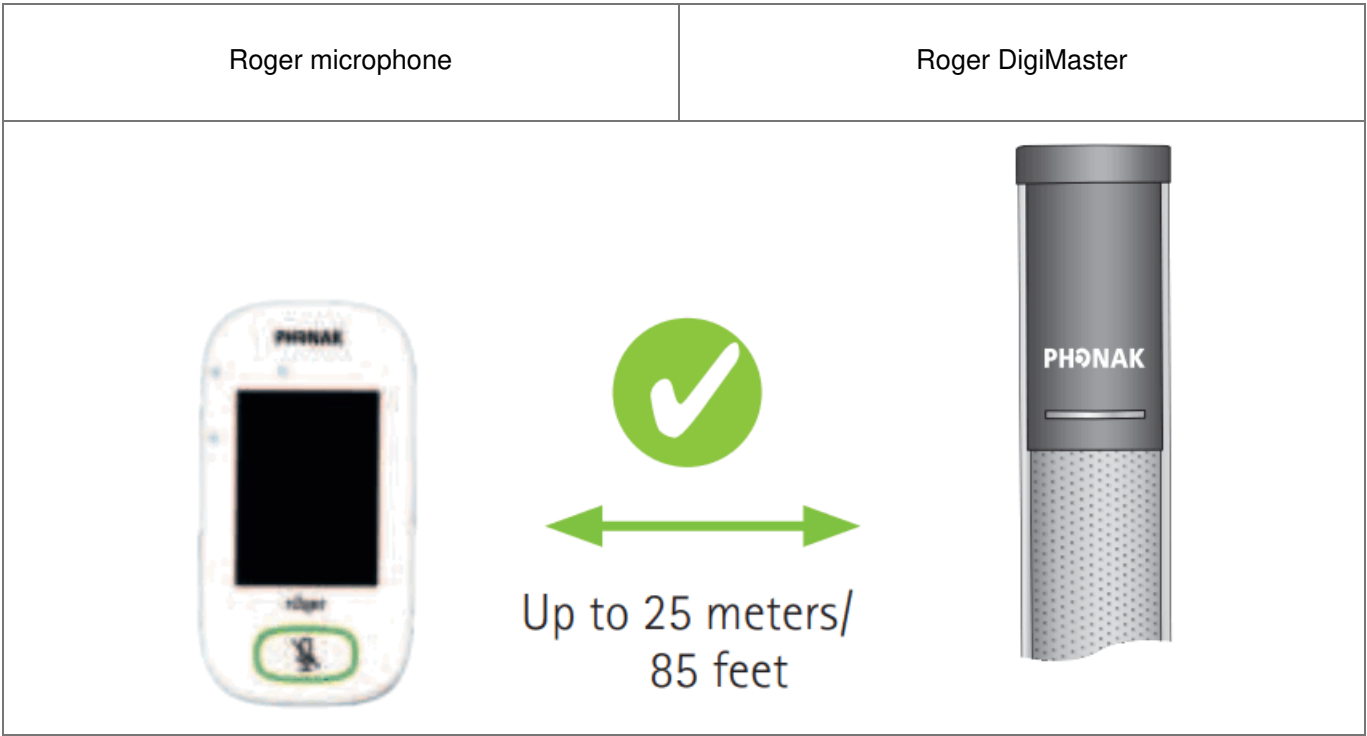


 Out of range! If distance greater than 25 meters / 85 feet

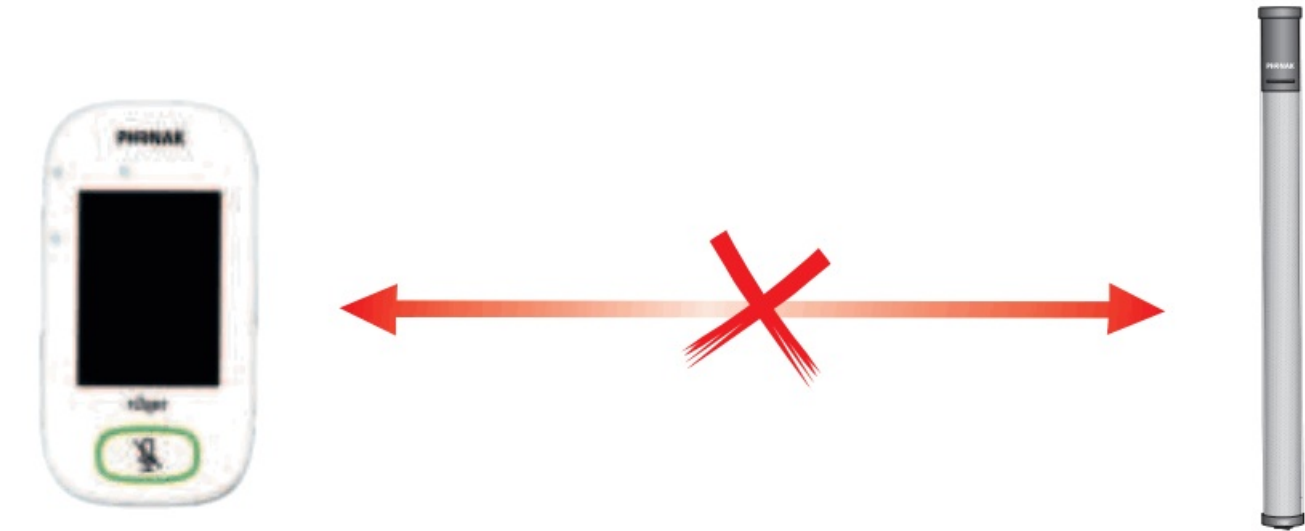


Audio connection



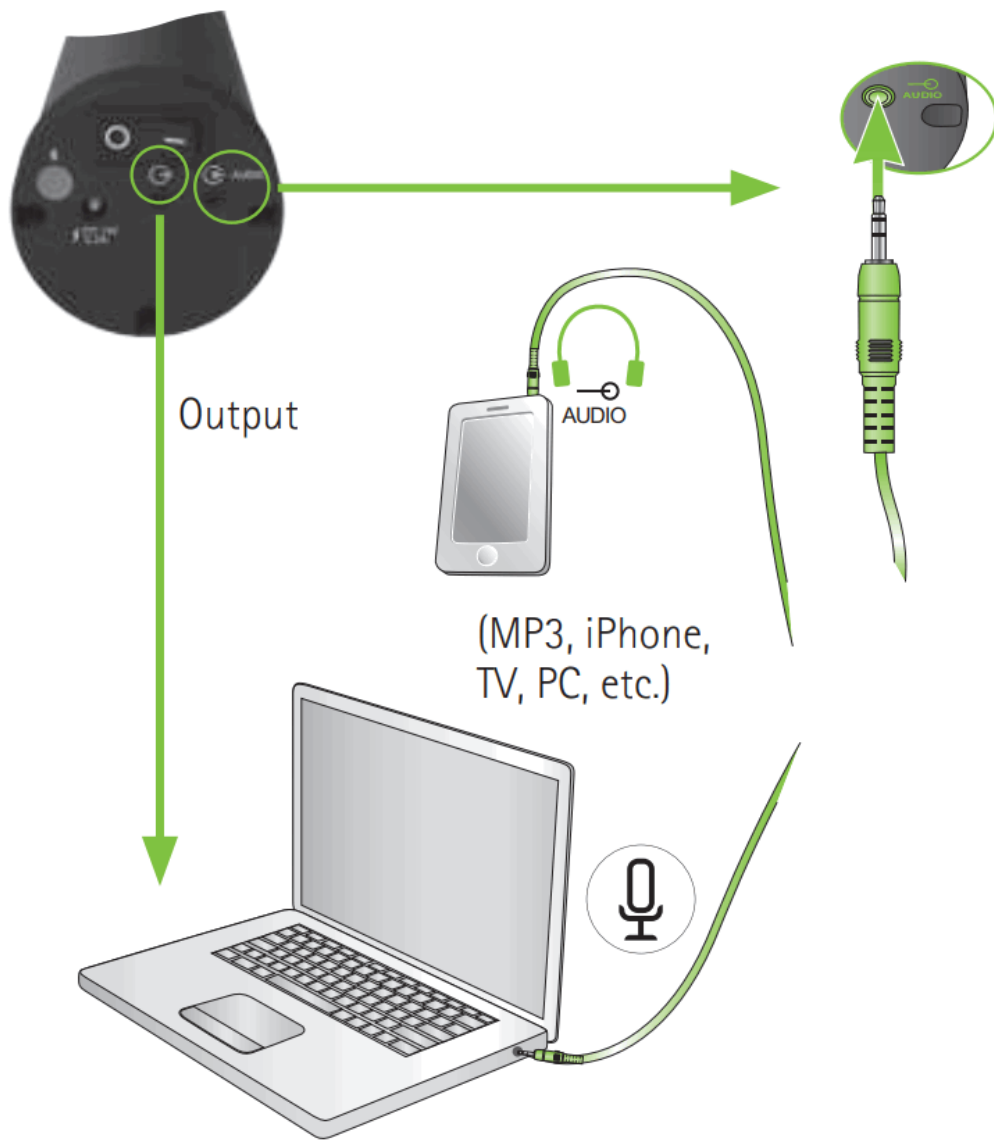



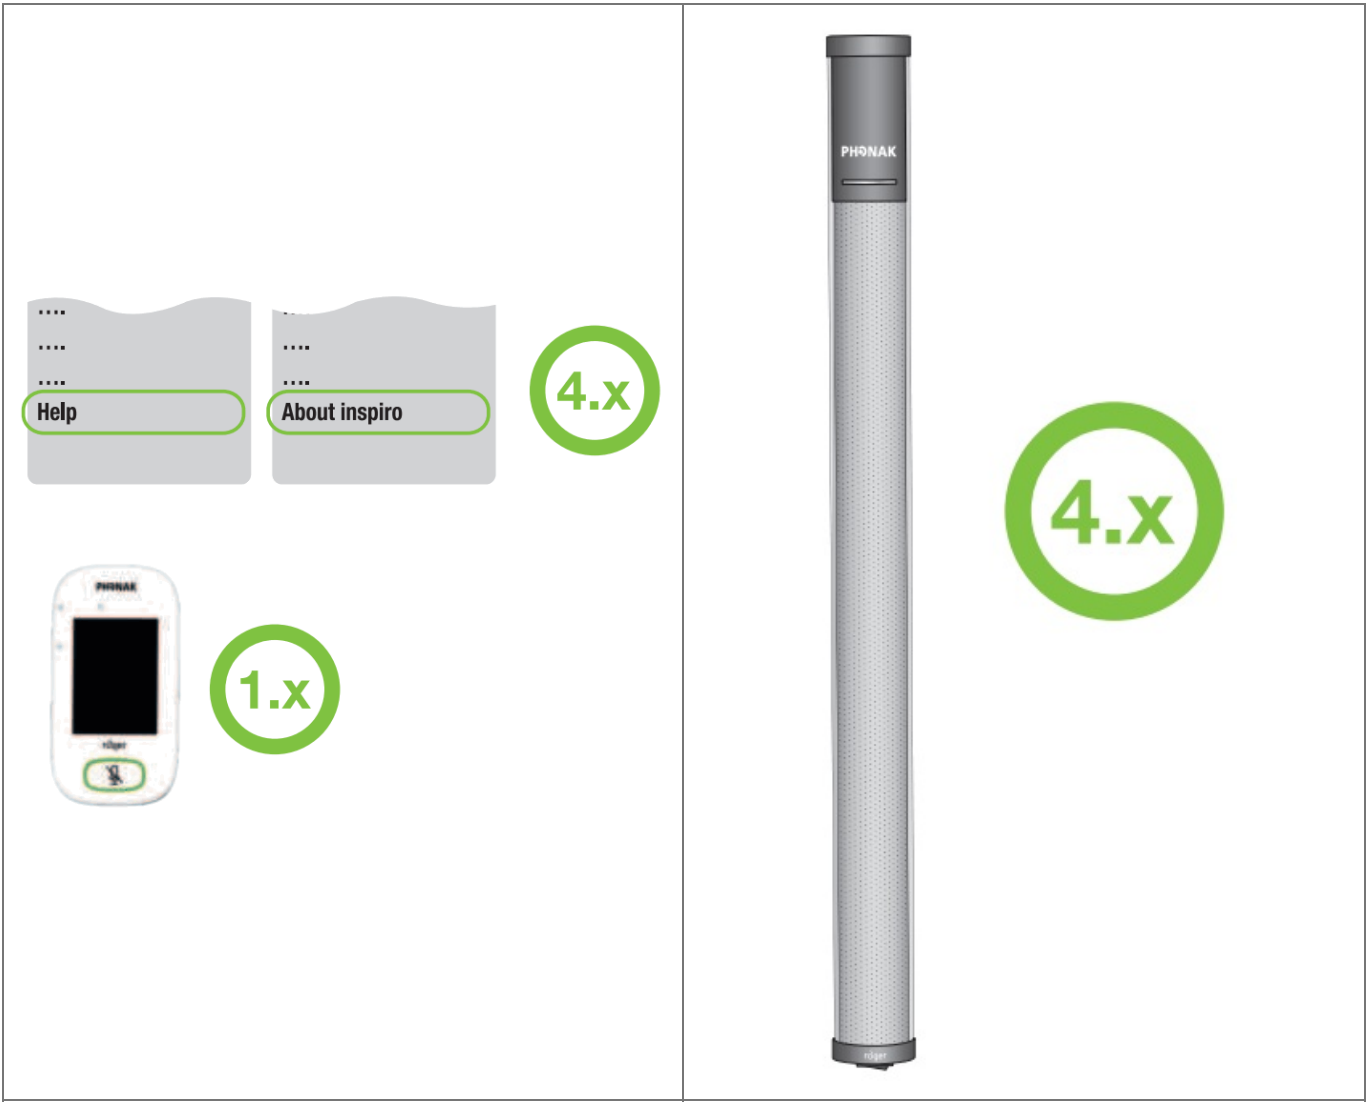

Roger DigiMaster



Network compatibility





Indicator light (LED status)

		Roger DigiMaster off
		Standard operation mode
		Roger Microphone off / out of range
		Muted
		Volume +/-
		Software update
		Call technician

Operating conditions

+0° to +40° Celsius / +32° to + 104° Fahrenheit
 < 95% (non condensing) relative humidity


 Use of accessories, transducers and cables other than those specified or provided by the manufacturer of this equipment could result in increased electromagnetic emissions or decreased electromagnetic immunity of this equipment and result in improper operation.

 Do not expose your device to temperatures and humidity outside of the recommended conditions stated in the User Guide.

⚠ For charger , use only IEC 62368- and/or EN60601-1 certified equipment with an output rating of 19 VDC, 3200 mA.

⚠ Do not use the device in areas where electronic equipment is prohibited.

⚠ Keep this device out of reach of children aged under 3 years.

 **Bluetooth®** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sonova AG is under license.

 **Sonova Communications AG**
Herrenschwandweg 4
CH-3280 Murten
Switzerland


sonova

HEAR THE WORLD



029-3306/V1.00/2022-09/na © 2022 Sonova AG
All rights reserved

Documents / Resources

	<p>PHONAK Roger DigiMaster V2 Speaker Column [pdf] User Guide Roger DigiMaster V2, Speaker Column, Roger DigiMaster V2 Speaker Column</p>
---	---