



PIC Flickering  
Flame Bug  
Zapper



# PIC Flickering Flame Bug Zapper Owner's Manual

[Home](#) » [PIC](#) » PIC Flickering Flame Bug Zapper Owner's Manual 

## Contents

- [1 PIC Flickering Flame Bug Zapper](#)
- [2 HOW IT WORKS](#)
- [3 IMPORTANT CORD & SAFETY INSTRUCTIONS](#)
- [4 IMPORTANT SAFETY INSTRUCTIONS](#)
- [5 INSTALLATIONS & OPERATION INSTRUCTIONS](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)



**PIC Flickering Flame Bug Zapper**



## Owner's Manual

### IMPORTANT SAFETY INSTRUCTIONS

#### HOW IT WORKS

Flying Insects are attracted to the unit by UV light. Bugs are killed upon contact with bug zapper. Dusk-til-dawn sensor turns the flame effect on and off. **WARNING:** When using electric appliances, basic precautions should always be followed, Including the following:

- To disconnect, remove plug from outlet.
- Unplug from outlet when not in use and before servicing or cleaning.
- Connect only to a circuit that is protected by a ground-fault circuit-interrupter (GFCI)
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.

**CAUTION** – High Voltage. Keep Out of Reach of Children.

**Input** voltage: AC 120V- 60Hz 110mA

#### IMPORTANT CORD & SAFETY INSTRUCTIONS

This product is for (household) outdoor use only. The product is equipped with a 2-prong plug to fit the proper type receptacles. To reduce the risk of electric shock, only plug Into a property Installed outlet. Extension cords used with this product must be marked with sutlix letters “W-A” and with a tag saying, \*Sultable for use with Outdoor Appllances. Use only extension cords that have plugs and receptacles that match the product plug. Electrical rating of the extension cord must be as great as the electrical rating of the product. Do not attempt to make repairs on the unit. Call our customer service department at 1-[800-799-7302](tel:800-799-7302) for additional questions or assistance.

**WARNING:** Skin or eye damage may result from directly lewing the light produced by the product.

**WARNING:** If the cord appears damaged, do not attempt to use or plug in the product.

1. Only use compatible outdoor rated extension cords and outlets for this unit.
2. Never carry the unit by the cord. Only unplug by pulling on the plug.
3. Keep extension cords off the ground and ensure tight connection of cords.
4. Store product indoors in original packing materials and out of reach of children.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or move the antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- For help, consult the dealer or an experienced radio/TV technician

## **IMPORTANT SAFETY INSTRUCTIONS**

**WARNING** – When using electric appliances, basic precautions should always be followed, including the following:

- Read all the instructions before using the appliance.
- To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
- Do not contact moving parts.
- Only use attachments recommended or sold by the manufacturer.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- To reduce the risk of electrical shock, do not put the appliance in water or other liquid. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- This appliance is provided with double insulation. Use only identical replacement parts. See instructions for Servicing of Double-Insulated Appliances.
- **CAUTION:** (Household) Outdoor Use Only.
- **CAUTION:** Outdoor Household Use Only.
- **CAUTION:** When a flammable liquid is sprayed, there may be danger of fire or explosion, especially in a closed room.
- To Reduce the Risk of Electric Shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it

still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

- CAUTION – Do not stick foreign objects, metal objects or fingers into the unit.
- Confirm if the device requires an extension cord connection to the power supply cord.
- A recommendation of the type of extension cord to be used, such as Use extension cord marked SJW-A, SJEW-A, or SJTW-A only\*, or the equivalent.
- Use only extension cords which have plugs and receptacles which accept the product's plug. Replace or repair damaged cords.
- The electrical rating of the extension cord must be as great as the electrical rating of the product.
- Don't Abuse Cord – Never carry product by cord or yank it to disconnect from receptacle. Keep cord from heat, oil, and sharp edges.
- Disconnect the product from the power supply when not in use, before servicing, when changing bulbs, cleaning, and similar actions.
- Do not insert foreign objects Into this product
- Outdoor extension cords must be used with outdoor use products and are surface marked with suffix letters "W-A" and with a tag stating "Suitable for Use with Outdoor Appliances".
- The connection to an extension cord should be kept dry and off the ground.
- Store products Indoors when not in use – out of reach of children.
- Do not clean this product with a water spray or similar method.
- The product should only be connected to a circuit that is protected by a ground-fault circuit-interrupter
- WARNING: Skin or eye damage may result from directly viewing the light produced by the lamp in this apparatus. Always disconnect power before servicing.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction conceding use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING:** The lamps in this appliance cannot be replaced. The appliance can not be repaired or maintained by the user.
- The appliance is suitable for outdoor use.
- **WARNING:** An electric shock hazard may exist if water from a garden hose is directed at the Insect killer.
- When using extension cords, keep the socket-outlet away from moisture and avoid damage to the cord.
- The appliance is to be kept out of reach of children.
- The appliance is not to be used in locations where flammable vapor or explosive dust is likely to exist.



: dangerous voltage 6000 – 6500V.

## SAVE THESE INSTRUCTIONS

### SERVICING OF DOUBLE-INSULATED APPLIANCES

In a double-Insulated appliance, two systems of Insulation are provided Instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added to the appliance.

Servicing of a double-insulated appliance requires extreme care and knowledge of the system, and should be done only by qualified service personnel. Replacement parts for a double-Insulated appliance must be identical to those parts in the appliance.

## INSTALLATIONS & OPERATION INSTRUCTIONS


1. Unpack the zapper.
2. Hang the device on a shepherd's hook or mounted hook (4 feet off the ground is recommended – SOLD SEPARATELY.
3. Plug cord into an outlet or UL listed extension cord as described in "IMPORTANT CORD & SAFETY INFORMATION."
4. For best results, leave unit plugged in except when cleaning or servicing. The dusk to dawn sensor will turn the unit on each night.
5. Pesky flying insect activity is highest outdoors at night. For best results, keep the unit away from competing light sources. Intended for household use.
6. Place the unit at least 10 to 20 feet away from where people will be sitting to draw insects away from outdoor living areas.
7. This unit is all-weather resistant and designed for outdoor use only.

## CLEANING

1. Be sure to clean the unit once per week.
2. To clean, unplug the unit.
3. Gently aim canned/compressed air through the openings of the zapper window. Plug the unit back in for continued use.
4. Open the bottom cap once per week and discard dead insects and debris.

**Manufactured For :** PIC® Corporation 1101-1107, West Elizabeth Ave. Linden (NJ 07036, USA 1- [800-799-7302](tel:8007997302)  
**Made In China** EPA Est. No. 94412-CHN-1 Stock# DECO-LAN v031323d

## Documents / Resources

	<p><a href="#">PIC Flickering Flame Bug Zapper</a> [pdf] Owner's Manual Flickering Flame Bug Zapper, Flame Bug Zapper, Bug Zapper, Zapper</p>
---	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.