



picun H1 Open Back Wireless Headphone User Manual

[Home](#) » [picun](#) » [picun H1 Open Back Wireless Headphone User Manual](#) 

Contents

- 1 [picun H1 Open Back Wireless Headphone User Manual](#)
 - 1.1 [Headphone LED Indicator Instructions](#)
 - 1.2 [Appearance Diagram and Function Overview of the Headphones](#)
 - 1.3 [Basic Operation of the Headphones](#)
 - 1.4 [Earbuds Specifications](#)
 - 1.5 [What's in the package](#)
 - 1.6 [Cautions](#)
 - 1.7 [Warning](#)
 - 1.8 [Product Warranty Card](#)
 - 1.9 [Warranty instructions](#)
 - 1.10 [Warranty provisions](#)
 - 1.11 [Product Qualification Certificate](#)
 - 1.12 [FCC Warning](#)
- 2 [Documents / Resources](#)
 - 2.1 [References](#)
- 3 [Related Posts](#)

picun H1 Open Back Wireless Headphone User Manual





H1


Open-back Wireless headphones

User manual

Headphone LED Indicator Instructions

Power On	Alternating flashes of white and orange lights.
Pairing Both Headphones	Both headphones flash alternately in white/orange.
Pairing Successful	Main Headphone: Alternating white/orange light flashing.
	Sub Headphone: Orange light flashes once every 5 seconds.
Power Off	Orange light flashes 3 times.
Charging Headphones	Orange light stays on while charging; turns off when fully charged.
Charging the charging case.	Insert the charging cable, and the last digit on the digital screen will flash. The digital screen shows increasing values according to the battery charge level.
Charging Case Charging the Headphones	When the headphones are placed in the charging case, the case charges the headphones. The digital screen shows decreasing values according to the battery discharge level. Meanwhile, the battery icons for the left and right ear flash in a marquee pattern and the screen light turns off when fully charged.

Appearance Diagram and Function Overview of the Headphones

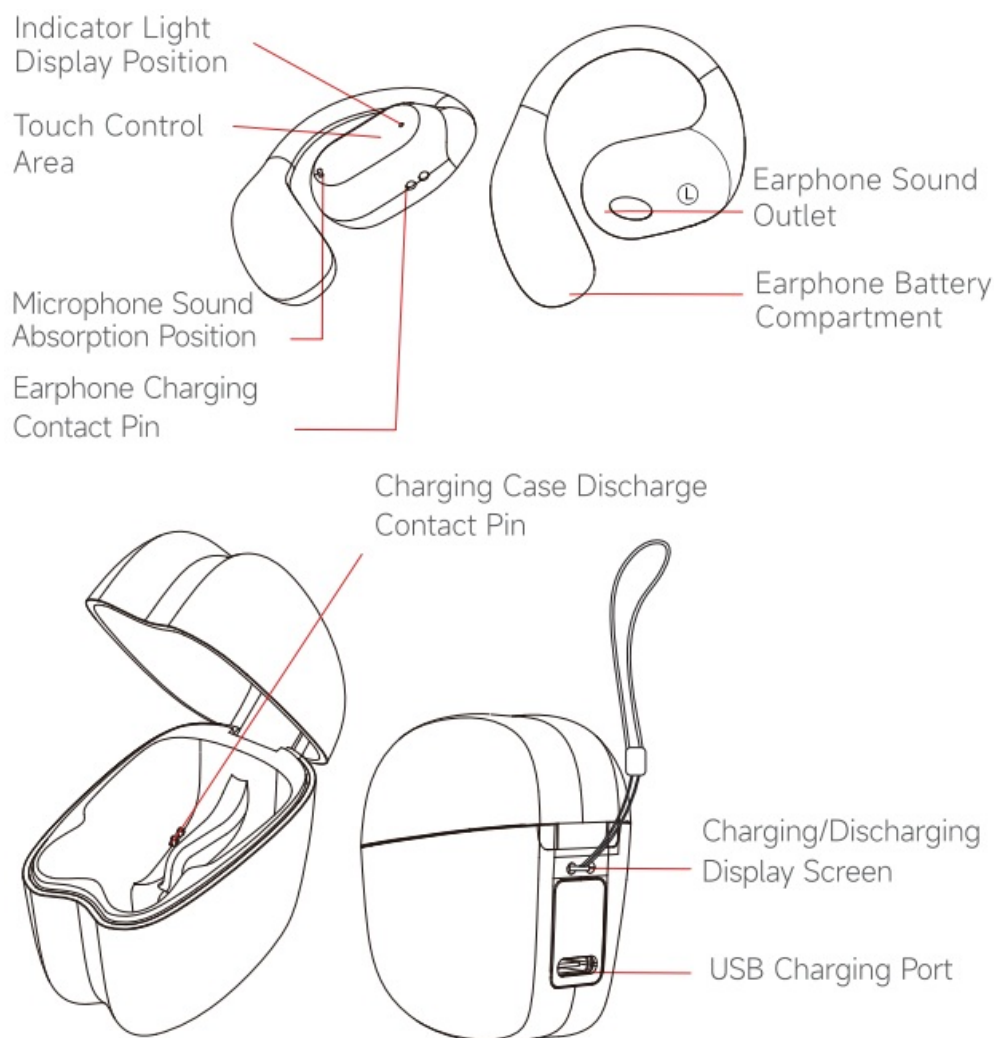

Basic Operation of the Headphones

Wireless Pairing

I. First-time Use

1. Remove both headphones from the charging case, they will automatically power on or you can touch and hold the touch keys on the (L) and @ headphones for 3 seconds to power on.
2. After powering on, the headphones will automatically pair with each other. The main earphone with alternating white and orange lights indicates the primary ear, while the secondary ear flashes orange light once every 5 seconds; the headphones default to low latency mode upon startup.
3. To connect the headphones to a device, turn on Wireless on the device and find the headphone's device name "picun H1" in the Wireless settings and select it to complete the connection.

I. Subsequent Uses

If the device already has the headphones pairing information, upon turning on the headphones they will automatically reconnect and pair with the device.

Connecting to Other Devices

To connect to a different device, first delete the pairing information from the previously paired device, or tap the

touchpad on the headphones 5 times to disconnect the link with the phone and enter pairing mode ready to be connected to another phone; then follow the “Wireless Pairing” steps.

Independent Use of a Single Earphone

1. Remove either the left or right earphone from the charging case, it will automatically power on.
2. After powering on, the indicator light of the left/right earphone will flash alternately in white and orange.
3. To pair the earphone with a device, turn on Wireless on the device and find the earphone’s device name “picun H1” in the Wireless settings and select it to complete the connection for single ear mode.
4. When using a single earphone, removing the other earphone will automatically pair both earphones and enter dual earphone mode.

In case both earphones cannot be used simultaneously (one side is silent), please follow these steps

1. Place both earphones back in the charging case.
2. Delete the existing Wireless device name “picun H1” from the phone.
3. Repeat the “Wireless Pairing” operation.

Power on

Remove both earphones from the charging case; they automatically power on, or touch and hold the touch buttons on the (L) and ® earphones for 3 seconds to power on.

Power Off

In the powered-on state, long-press the touch button for 5 seconds or place the earphones back into the charging case to turn off.

Volume Adjustment

1. Single tap the right earphone’s touch button to increase volume (volume increase only in single earphone use).
2. Single tap the left earphone’s touch button to decrease volume (volume increase only in single earphone use).

Song Selection

1. Long-press the left ear touch button to play the previous song (In single-ear mode, only the next track function is available.).
2. Long-press the right ear touch button to play the next song (In single-ear mode, only the next track function is available.).

Play/Pause/Answer Calls

During music playback, tap the touch button twice to pause the music.
When music is paused, tap the touch button twice to resume playback.
Tap the touch button twice to answer a call when there is an incoming call.
During a call, tap the touch button twice to hang up the current call.
Long-press the touch button for 2 seconds to reject an incoming call.
In Wireless connected state, tap the touch button three times to activate Siri (voice assistant).

TWS Team Mode (Left/Right Earphone Interconnection)

When both left/right earphones are powered on in pairing mode they will automatically team up

Auto Power Off and Distance Reconnection

The earphones will disconnect when out of the effective range. If returned within 5 minutes to the Wireless range, they will automatically reconnect. If not back within 5 minutes, the earphones will automatically power off.

Battery Status

When connected to an iOS device, the current battery status of the earphones is displayed in the top right corner of the iOS device screen.

Charging the Charging Case

Insert the USB-C charging cable into the charging case. The last digit on the digital screen will flash, and the digital screen will show increasing values according to battery charge level until it displays 100 when fully charged.

Earphone Charging Time

1. Earphones with no battery placed in the charging case will fully charge in about 1 hour. In low battery condition, the orange light flashes 3 times every 10 seconds.
2. When the earphones are placed in the charging case, the case charges the earphones. In normal charging status, the orange light stays on and turns off when fully charged.

Important Tips

1. Please use a 5V-1A/5V-2A charger to charge the charging case. Using a charger with a higher voltage may damage the charging case.
2. If the headphones are not used for more than 3 months, please charge them before use.
3. For long periods of non-use, it is recommended to charge the headphones once every 3 months to effectively protect the battery's lifespan.
4. Upon receiving the headphones, please fully charge them before using.

Earbuds Specifications

Wireless Protocol	A2DP/AVRCP/HFP/HSP
Transmission Distance	10m
Speaker Size	14.2mm
Frequency Range	20HZ-20kHz
Speaker Sensitivity	120.5±3dB
Speaker Impedance	16Ω±15%
Microphone Sensitivity	—42±3dB
Operating Current	3.9-20mA
Charging Voltage	5V

What's in the package

1.Wireless Earphones	2.Charging Cable	3.Charging Case
4.Lanyard	5.User Manual	

Cautions

- *Avoid placing the headphones in high-temperature environments, including direct sunlight.
- *Do not place the headphones near open flames or other excessively hot environments.
- *Keep the headphones dry and avoid exposing them to damp environments or submerging them in liquids.
- *Only use the provided charging cable to charge the headphones; do not attempt to charge them using other methods.
- *Do not disassemble the headphones, and refrain from attempting to repair or modify them in any way.
- *Be cautious of excessive dropping, impact, scratching, or any behavior that may affect the functionality of the headphones. If any damage occurs, such as dents, punctures, tears, deformations, or corrosion, please stop using the headphones immediately and contact the seller or reach out to us through the contact information provided on the warranty card.
- *If the headphones emit an unusual smell, become excessively hot, or show abnormal changes in color or shape, please stop using them immediately and contact the seller or reach out to us through the contact information provided on the warranty card.

Warning

Prolonged use of headphones at high volumes may cause hearing damage. Please use them responsibly and at moderate volume levels.

Product Warranty Card

Product model: _____ Product color: _____
Date of purchase: _____ Purchase store: _____
Purchase account: _____ Warranty reason: _____
User name: _____ Contact telephone number: _____
User address: _____

Warranty instructions

Please keep the warranty card and valid proof of purchase to present when the product fails to repair, if you cannot provide the warranty card or relevant proof of purchase, the product warranty period will be calculated based on date of delivery of the product.

Warranty provisions

1. Advisory services, users can call 4008894883 for any problems encountered in the warranty process.
2. Within one year from the date of purchase, if the quality of the product fails and the technical staff of the company confirms that the failure of the machine occurs under normal use, free warranty service will be provided.
3. The Company shall refuse to provide free warranty service and shall only provide repair service free of labor charges and only charge for parts in the following cases.
 - A. The product has been damaged by misuse, negligent use or force majeure;
 - B. The product has been dismantled or repaired without the company's authorization.
 - C. Crushing, water immersion, shell damage, deformation and other man-made damage.
 - D. The original warranty card and the sales certificate of the sales unit cannot be provided, and the date of purchase is beyond the warranty period.
4. The free service provided by this warranty card does not include accessories, other decorations, gifts, etc.

Product Qualification Certificate

After inspection, the product meets the technical standards and is allowed to leave the factory.



FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general F exposure requirement.
The device can be used in portable exposure condition without restriction.

Documents / Resources

	picun H1 Open Back Wireless Headphone [pdf] User Manual 2AMWY-H1, 2AMWYH1, H1, H1 Open Back Wireless Headphone, H1 Wireless Headphone, Open Back Wireless Headphone, Wireless Headphone, Headphone
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.