





PILZ VT8-PITGB11 PIT gb with PIT Reader Owner's Manual

Home » PILZ » PILZ VT8-PITGB11 PIT gb with PIT Reader Owner's Manual

Contents

- 1 PILZ VT8-PITGB11 PIT gb with PIT
- Reader
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 Introduction
- **5 Overview**
- 6 Safety
- 7 Security
- 8 Function description
- 9 Installation
- 10 Commissioning
- 11 Operation
- 12 Troubleshooting
- 13 Maintenance and testing
- **14 Dimensions**
- 15 Technical details
- 16 Order reference
- 17 EC declaration of conformity
- 18 Documents / Resources
 - 18.1 References
- **19 Related Posts**



PILZ VT8-PITGB11 PIT gb with PIT Reader



Product Information

Specifications

• Product Name: PIT gb with PITreader

Model Number: 1005249-EN-02
Manufacturer: Pilz GmbH & Co. KG
Storage: SD (Secure Digital) Card

Product Usage Instructions

Using the Documentation

Install and commission the product only after reading and understanding this document. Retain the document for future reference.

Definition of Symbols

DANGER! – This warning indicates a hazardous situation that poses an immediate threat of serious injury or death. Follow the preventive measures mentioned.

FAQ (Frequently Asked Questions):

Q: How do I troubleshoot issues with the PIT gb with] PITreader?

A: Refer to the Troubleshooting section in the manual (Page 27) for guidance on resolving common problems.

PIT gb with PITreader Operating Manual-1005249-EN-02

· Control and signal devices









Preface

- This document is the original document.
- Where unavoidable, for reasons of readability, the masculine form has been selected when formulating this document. We do assure you that all persons are regarded without discrim-ination and on an equal basis.
- All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's

internal purposes. Suggestions and comments for improving this documenta-tion will be gratefully received.

- Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®,
- SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.
- SD means Secure Digital

Introduction

Validity of documentation

This documentation is valid for the product PIT gb with PITreader. It is valid until new docu-mentation is published. This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future ref-erence.

Definition of symbols

Information that is particularly important is identified as follows:

• DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.

WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.

CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.

NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular import-ance.

INFORMATION

This gives advice on applications and provides information on special features.

Overview

Product features

PIT gb with PITreader Key

- Housing with E-Stop pushbutton, 2 illuminated pushbuttons and PITreader Key
- PIT gb with PITreader Key is available in two versions:
 - PIT gb RLLE y up ETH with connections on the E-STOP end
 - PIT gb RLLE y down ETH with connections on the PITreader end
- PITreader Key: Authentication is via a transponder key (see Order reference: Transponder key [36])
- Connector design: a 12-pin M12 male connector and a 4-pin M12 female connector

- · Slimline design
- · Control elements finally wired and installed
- · Coloured caps for pushbuttons, to mark the function
- · Labelling option for individual marking of the control elements
- Can be installed in different directions (see Assembly positions [17])

PIT gb with PITreader Card

- Housing with E-STOP pushbutton, 2 illuminated pushbuttons and PITreader Card
- PIT gb with PITreader Card is available in two versions:
 - PIT gb QLLE y up ETH with connections on the E-STOP end
 - PIT gb QLLE y down ETH with connections on the PITreader end
- PITreader Card: Authentication is via transponder cards, transponder stickers and/or transponder keys (see Order reference: Transponder key [36])
- Connector design: a 12-pin M12 male connector and a 4-pin M12 female connector
- · Slimline design
- · Control elements finally wired and installed
- · Coloured caps for pushbuttons, to mark the function
- Labelling option for individual marking of the control elements
- Can be installed in different directions (see Assembly positions [17])

Scope of supply

PIT gb with PITreader Key

- PIT gb RLLE y up ETH or PIT gb RLLE y down ETH
- 2 washers M5
- Coloured caps (set), assorted colours

PIT gb with PITreader Card

- PIT gb QLLE y up ETH or PIT gb QLLE y down ETH
- 2 washers M5
- · Coloured caps (set), assorted colours

Safety

Intended use

The product PIT gb with PITreader is intended for use in safety circuits in accordance with IEC EN 60947-5-5, EN ISO 13850. Before using the product, a safety assessment of the overall system is needed in accordance with the Machinery Directive.

The PIT gb with PITreader is a system for authentication and authorisation on control systems. Authentication is via appropriate transponders.

The PIT gb with PITreader must be used in combination with a suitable evaluation device (see Connection to evaluation device [25]).

The following is deemed improper use in particular:

- · Any component, technical or electrical modification to the product
- Use of the product outside the areas described in this manual
- Use of the product outside the technical details (see chapter entitled "Technical details [30]").

NOTICE

EMC-compliant electrical installation

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

Foreseeable misuse

If using the PIT gb with PITreader under corrosive environmental conditions (cooling emulsions, surface treatment, gases, ...):

Please contact Pilz.

Safety regulations

Additional documents that apply

You should also read and take note of the following document

Operating manual PITreader

You will need to be conversant with the information in this document to fully understand this operating manual.

Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, de-commissioned and maintained by persons who are competent to do so.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. In order to inspect, assess and handle products, devices, systems, plant and machinery, this person must be familiar with the state of the art and the applicable national, European and international laws, directives and standards. It is the company's responsibility only to employ personnel who

- Are familiar with the basic regulations concerning health and safety / accident prevention,
- Have read and understood the information provided in the section entitled Safety
- Have a good knowledge of the generic and specialist standards applicable to the specific application.

Warranty and liability

All claims to warranty and liability will be rendered invalid if

- The product was used contrary to the purpose for which it is intended,
- Damage can be attributed to not having followed the guidelines in the manual,
- Operating personnel are not suitably qualified,
- Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.)
- · The product was opened.

Disposal

When decommissioning, please comply with local regulations regarding the disposal of electronic devices, such as the Electrical and Electronic Equipment Act.

For your safety

WARNING

Risk of injury due to loss of the safety function.

Manipulation of the E-STOP pushbutton control element S4 may lead to serious injury and death.

- You should prevent the control element being manipulated with a spare control element.
- · Only Pilz may exchange control elements.
- Before disposing of a defective PIT gb with PITreader: the PIT gb with PITreader must be safety decommissioned. To do this, all the data must be deleted from the product, see under "Reset PITreader to default setting [26]".

INFORMATION

Do not remove the two protective caps on the connector until you are just about to connect the product.

Security

To secure plants, systems, machines and networks against cyberthreats it is necessary to implement (and continuously maintain) an overall industrial security concept that is state of the art.

Perform a risk assessment in accordance with VDI/VDE 2182 or IEC 62443-3-2 and plan the security measures with care. If necessary, seek advice from Pilz Customer Support.

Further information on Security can be found in the operating manual for the PITreader (1004806).


Function description

Product types

In order to control the functions of a whole plant or machine, the PIT gb with PITreader contains the following:

- One E-STOP pushbutton
- Two pushbuttons
- One PITreader

PIT gb with PITreader Key

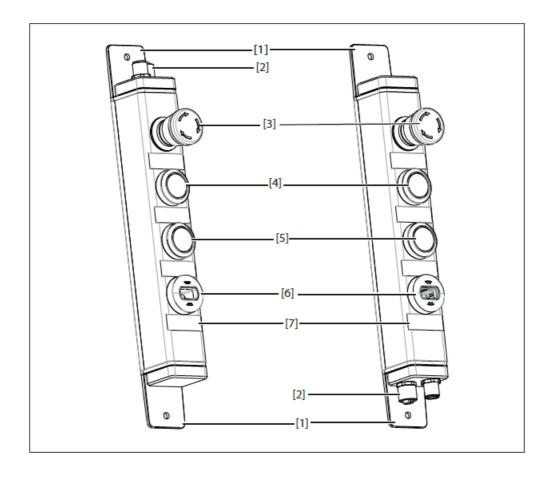


- 1. Rotatable mounting bracket
- 2. M12 connector
- 3. E-STOP pushbutton S4
- 4. Pushbutton S3, illuminated
- 5. Pushbutton S2, illuminated
- 6. PITreader Key S1
- 7. Individual labelling option (width: 35 mm, height: 13 mm)

M12 connector [2]

The two M12 connectors [2] used to connect the product are located either on the E-STOP end (PIT gb RLLE y up ETH) or on the PITreader end (PIT gb RLLE y down ETH).


- E-STOP pushbutton S4 [3] The E-STOP pushbutton S4 [3] is used to shut down plant and machine sections in order to reduce or avert imminent or existing hazards to persons and damage to machinery or materials.
- Pushbuttons S2, S3 [5, 4]
 - Pushbuttons S2, S3 [5, 4] are used to switch a signal and for status display.
 - Pushbuttons S2, S3 [5, 4] light up if the corresponding input is connected.
- Pushbutton S2 [5]
 - With the pushbutton S2 [5] you can Reset the password of the PITreader to its default setting [26] during power-up.
- PITreader Key S1 [6] PITreader Key S1 [6] is used for authentication and authorization on control systems. Authentication is via transponder.

PIT gb with PITreader Card

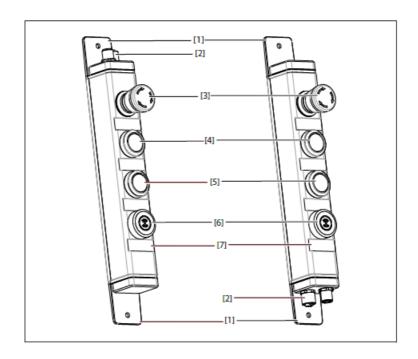

- 1. Rotatable mounting bracket
- 2. M12 connector
- 3. E-STOP pushbutton S4
- 4. Pushbutton S3, illuminated
- 5. Pushbutton S2, illuminated
- 6. PITreader Card S1
- 7. Individual labelling option (width: 35 mm, height: 13 mm)
- M12 connector [2] The two M12 connectors [2] used to connect the product are located either on the E-STOP end (PIT gb QLLE y up ETH) or on the PITreader end (PIT gb QLLE y down ETH).
- E-STOP pushbutton S4 [3] The E-STOP pushbutton S4 [3] is used to shut down plant and machine sections in order to reduce or avert imminent or existing hazards to persons and damage to machinery or materials.
- Pushbuttons S2, S3 [5, 4]
 - Pushbuttons S2, S3 [5, 4] are used to switch a signal and for status display.
 - Pushbuttons S2, S3 [5, 4] light up if the corresponding input is connected.
- Pushbutton S2 [5] With the pushbutton S2 [5] you can Reset the password of the PITreader to its default setting [26] during power-up.
- PITreader Card S1 [6] The PITreader Card S1 [6] is used for authentication and authorisation on control systems. Authentication is via transponder.

Block diagram

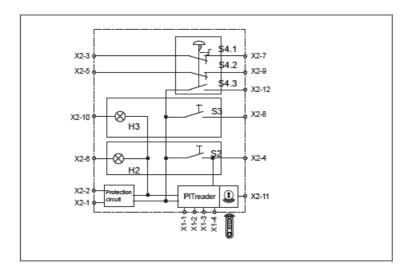

PITreader

The function of the PITreader authentication system is described in the operating manual for the PITreader (see Additional documents that apply [9]).

The PITreader cannot be connected to PIT m4SEU.

Coloured caps


The pushbuttons can be marked with coloured caps according to their function (see Attach coloured cap to pushbutton [19]).

Installation

Assembly positions


Potential installation positions of the mounting bracket on PIT gb with PITreader

The mounting brackets used to fasten the PIT gb with PITreader to the mounting surface can be rotated before installing the PIT gb with PITreader, see the following examples for the PIT gb with PITreader Key:

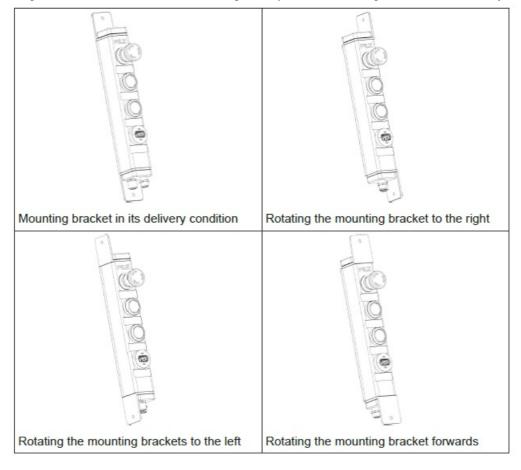

Potential installation positions of the PIT gb with PITreader

The potential installation positions of the PIT gb with PITreader are horizontal and vertical, see the following examples for the PIT gb with PITreader Key:

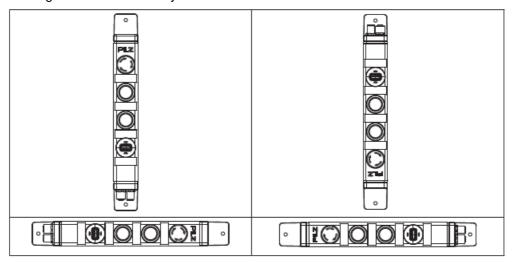


Installing the product

Note

- The PIT gb with PITreader must be installed on a solid surface (e.g. profile, panel).
- The PIT gb with PITreader must be situated so that it can easily be reached above the access level (e.g. base level, platform level).

The E-STOP pushbutton must be accessible at a height of between 0.6 m to 1.7 m above the access level.

- The mounting surface must have a max. unevenness of 0.5 mm.
- The housing of the PIT gb with PITreader must make contact with the mounting surface over at least 5 mm on both ends (see figure).

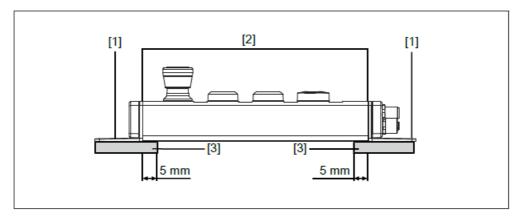


Legend

- 1. Mounting surface
- 2. Mounting bracket
- 3. Housing
- Use the following to fasten the PIT gb with PITreader:
 - M5 screws
 - M5 washers


Procedure

- 1. Provide the mounting surface [1] with drill holes for fastening the PIT gb with PITreader (see Dimensions [29]).
- 2. Rotate the mounting bracket [2] into the correct position for installation.
- 3. Fasten the PIT gb with PITreader to the mounting surface [1] and tighten the screws (including washers) with 4 Nm.

Attach coloured cap to pushbutton

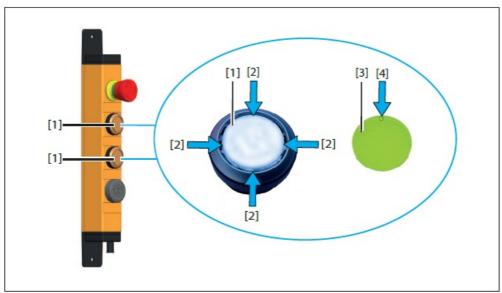


- Take the required coloured cap from the set provided [3].
- Place the coloured cap [3] on the required pushbutton
- [1] so that the alignment marking [4] matches up with one of the positions illustrated [2].

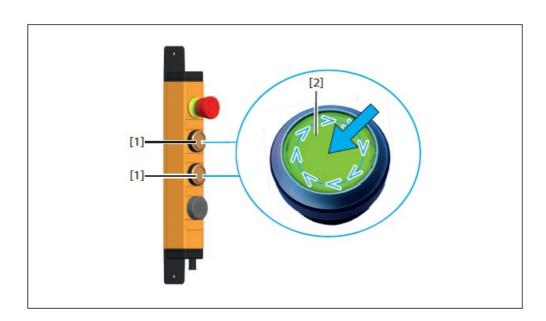


- Press the coloured cap [2] downwards, as far as it will go. The pushbutton [1] is then pressed.
- When the pushbutton is pressed [1]: Run your finger around the outer edge of the coloured] cap [2] in a circular motion until it clicks into place.

Installation PITreader card holder

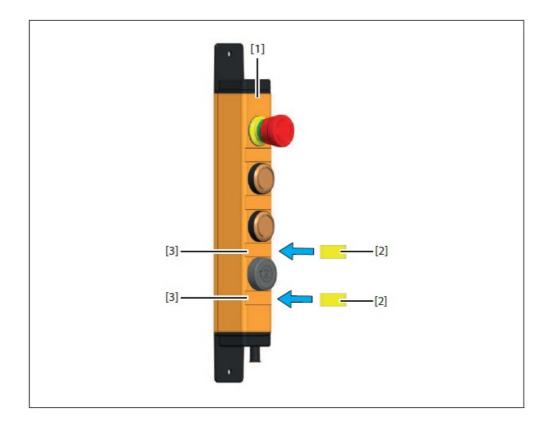


- Clean the two labelling surfaces [3] on the PIT gb [1]. The adhesive label positions must be smooth and free from dirt, dust and grease.
- On the first label blank [2], remove the protective film from the adhesive surface.
 Do not touch the adhesive surface, to ensure that the adhesive function is not compromised.
- Press the label blank [2] firmly on to the labelling surface [3].
- Follow the same procedures for the second label blank [2].

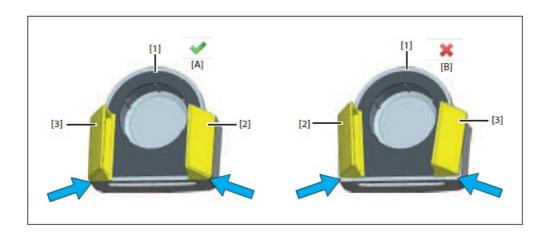


Note:

Please note that the two wings [2, 3] are different [A, B] (arrows).

Once installed [A], the respective underside of the wing must be flush with the underside of the PITreader card holder [1] (arrows).

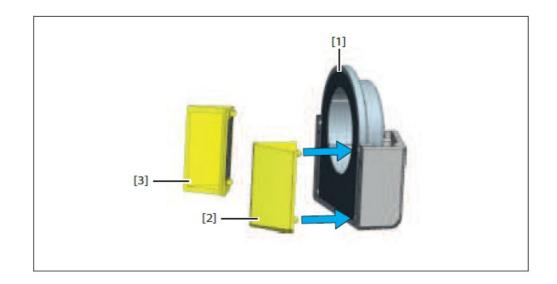

- Check which of the two wings needs to be attached on the left [3] or right [2] on the PITreader card holder [1]. To do this, take one wing [3] or [2] and insert it with both lugs (arrows) on one side of the PITreader card holder [1]. If both wings [2, 3] are flush with the underside of the PITreader card holder [1], the wings are installed correctly. If not, swap the two wings round [2, 3].
- Now, on the PITreader card holder [1], remove the protective film from the adhesive surface.
 Do not touch the adhesive surface, to ensure that the adhesive function is not compromised.
- On the first wing, remove the protective film from the adhesive surface and press the wing firmly on to the PITreader card holder [1].
 - Do not touch the adhesive surface, to ensure that the adhesive function is not compromised.
- · Follow the same procedures for the second wing.

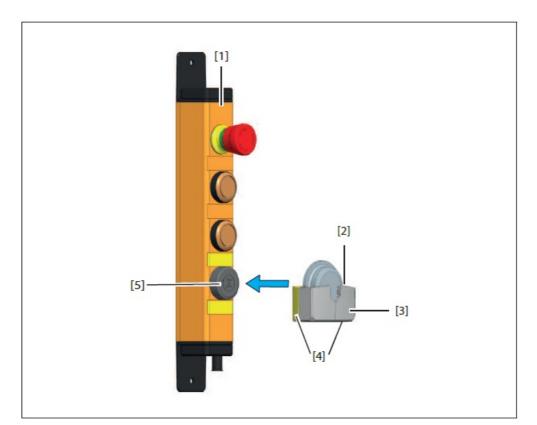

Clean the PIT gb housing [1] around the read head [5]. The adhesive position must be smooth and free from dirt, dust and grease.

• Guide the PITreader card holder [3] so that it is a little above the read head [5]; the opening [2] of the PITreader

.

card holder [3] must face upwards.

- Do not touch the adhesive surface, to ensure that the adhesive function is not compromised.
- Align the PITreader card holder [3] horizontally so that the wings (4) can slide over the housing of the PIT gb [1].
- Guide the PITreader card holder [3] further over the read head [5] until it fits on the housing of the PIT gb [1].
- Press the PITreader card holder [3] firmly on to the housing of the PIT gb [1], around the read head [5].

Attach PITreader transponder sticker

Attach transponder sticker, see operating manual for the PITreader.

Wiring

Note

- Information given in the Technical details [30] must be followed.
- The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).
- The supply voltage must be fitted with a 4 A fuse, characteristic B/C.
- Ensure the wiring and EMC requirements of EN 60204-1 are met.
- Use a 12-pin cable with an A-coded M12 female connector to connect the PIT gb with PITreader to an evaluation device (see Order reference: Accessories [39]).
- To connect the PIT gb with PITreader to a controller, use a 4-pole cable with a D-coded M12 male connector (see Order reference: Accessories [39]).
- Route the cables so that they are protected.

Terminal assignment connectors

NOTICE

The colour marking for the connection lead only applies for the cable that Pilz supplies as an accessory.


11 21	PIN	Cable colour	Function
10	1	Brown	+24 V UB
30009	2	Blue	0 V UB
	3	White	E-STOP channel 1
4 0 0 0 0 8	4	Green	Pushbutton S2
	5	Pink	E-STOP channel 2
5 6 7	6	Yellow	LED H2 for pushbutton S2
	7	Black	E-STOP channel 1
12-pin M12 male connector	8	Grey	Pushbutton S3
	9	Red	E-STOP channel 2
	10	Purple	LED H3 for pushbutton S3
	11	Grey-pink	Signal output PITreader I0/ O0
	12	Red-blue	E-STOP signal contact


Fig.: View of the PIT gb with PITreader from the connector end:

Position of the coding elements on the connectors to protect the cables from twisting.

Legend

- 1. Coding element on the 12-pin connector
- 2. Coding element on the 4-pin connector

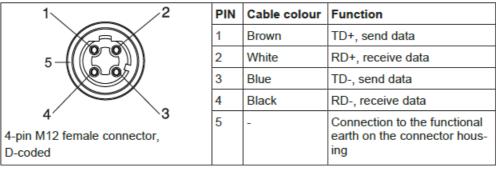

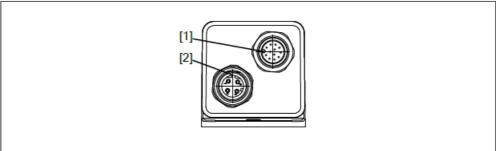

Commissioning

Connection to evaluation device

Suitable Pilz evaluation devices for the actuation of the LED and reading out all control elements include:

- PNOZmulti
- PSSuniversal PLC

Suitable Pilz evaluation devices for the evaluation of the E-STOP, for example, are:

- PNOZelog
- PNOZsigma
- PNOZ X

The correct connection to the respective evaluation device is described in the operating manual for the evaluation device. Make sure that the connection is made in accordance with the specifications in the operating manual for the selected evaluation device.

Configure PITreader

• Configure the authentication system PITreader, see operating manual for the PITreader.

Checking the product

Once the product has been installed and aligned, final inspections must be carried out before] it can be put into service.

INFORMATION

This inspection may only be carried out by qualified personnel.

- Check the PIT gb with PITreader for damage.
- Always test the function with a connected evaluation device.
- Check the function of the E-STOP.
- Check the function of the other control elements.

Operation

Display and control elements

The use and display of pushbutton S2 and pushbutton S3 depends on the application in the connected controller.

PITreader

Position transponder on the PITreader

Position transponder, see operating manual for the PITreader.

LED display PITreader

A description of the "LED display" can be found in the operating manual for the PITreader.

Firmware update PITreader

The firmware update for the PITreader authentication system is described in the operating manual for the PITreader (see Additional documents that apply [9]).

Reset PITreader to default setting

Procedure:

- 1. Switch off the supply voltage to the PIT gb with PITreader.
- 2. Press and hold pushbutton S2.
- 3. Switch on the supply voltage to the PIT gb with PITreader.
- 4. When the yellow LED lights up, release pushbutton S2.
- 5. Press pushbutton S2 again with 10 seconds.

The LED lights up yellow and then green.

The PIT gb with PITreader has been reset successfully.

Status of LEDs on the PITreader when resetting to the factory default settings

Description	Colour	Status
Pushbutton S2 is pressed.	Yellow	*
Pushbutton S2 is released.		\(
Pushbutton S2 is pressed again. The device is reset to the factory default settings.		*
The product has successfully been reset to the factory default settings.	Green	*

Troubleshooting

Fault	Cause	Remedy
LED off	V voltage supply not present and/or no signal at the corres ponding input	 Check the wiring of the inputs and outputs Rectify the wiring error
No output signal with control element operation	24 V voltage supply not prese nt	Check the wiring of the inputs and outputs. Rectify the wiring error.
Product's function compromised	Connection cable damaged	Check the connection cable. If necessary, change the connection cable.
Control element damaged	External force	Contact Pilz and arrange a re-placemen t for the product.
LED on the PITreader flashes red	Fault on the PITreader (e.g. h ardware error, configuration e rror, invalid or uncoded transponder key, transponder card or transponder sticker,)	Appropriate measures, see LED display PITreader.

Maintenance and testing

It is not necessary to perform maintenance work on the product in normal operation.

• Please return any faulty product to Pilz.

Cleaning

- · Clean the product monthly.
- Use a soft cloth and mild detergent for cleaning.

Monthly check

• Perform a manual function test [25] of the PIT gb with PITreader every month.

INFORMATION

This inspection may only be carried out by qualified personnel.

Check after modifications


Inspect the PIT gb with PITreader each time the plant/machine is modified.
 Exchanging the PIT gb with PITreader is also to be classed as a modification.

• During the inspection you must comply with the requirements of the applicable national regulations.

INFORMATION

This inspection may only be carried out by qualified personnel.

Dimensions

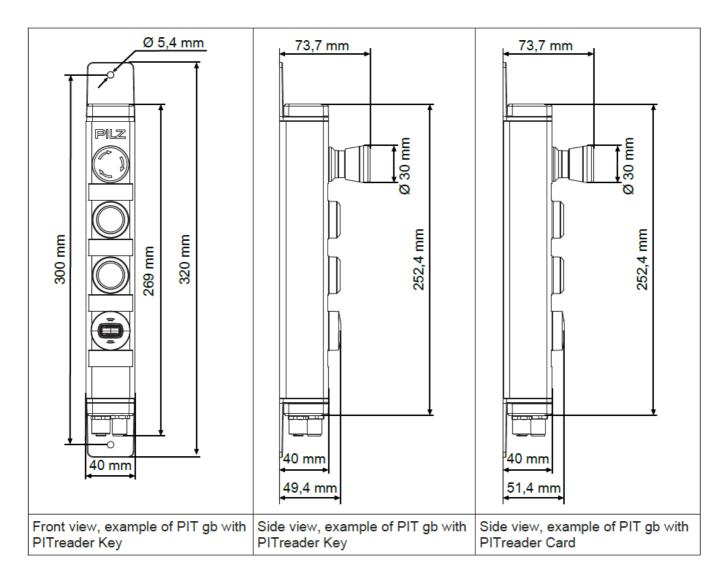

Technical details

General	G1000020	G1000021	G1000041	G1000042
Certifications	CE, EAC, FCC, IC, UKCA, UL/cUL	CE, EAC, FCC, IC, UKCA, UL/cUL	CE, EAC, FCC, IC, U KCA, UL/cUL	CE, EAC, FCC, IC, UKCA, UL/cUL
Self-monitored	No	No	No	No
Lamp				
Kind	LED	LED	LED	LED
Colour	White	White	White	White
Transponders	G1000020	G1000021	G1000041	G1000042
Transponder type	Transponder keys	Transponder keys	Transponder card, tr ansponder key, trans ponder sticker	Transponder card, tr ansponder key, tran sponder sticker
Electrical data	G1000020	G1000021	G1000041	G1000042

Supply voltage				
Voltage	24 V	24 V	24 V	24 V
Kind	DC	DC	DC	DC
Type of power supply	SELV/PELV	SELV/PELV	SELV/PELV	SELV/PELV
Voltage tolerance	-15 %/+20 %	-15 %/+20 %	-15 %/+20 %	-15 %/+20 %
Output of external p ower supply (DC)	3,5 W	3,5 W	3,5 W	3,5 W
Duty cycle	100 %	100 %	100 %	100 %
Min. contact current	1 mA	1 mA	1 mA	1 mA
Emergency stop	G1000020	G1000021	G1000041	G1000042
Quantity	1	1	1	1
Number of N/C cont acts	2	2	2	2
Number of signal contacts	1	1	1	1
E-STOP release typ	Turn release	Turn release	Turn release	Turn release
Utilisation category				
in accordance with t he standard	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1
DC13 at	24 V	24 V	24 V	24 V
Current	0,1 A	0,1 A	0,1 A	0,1 A
Contact material	Ag	Ag	Ag	Ag
Mechanical life	6050 cycles	6050 cycles	6050 cycles	6050 cycles
Pushbutton	G1000020	G1000021	G1000041	G1000042
Quantity	2	2	2	2
Number of N/O cont acts	2	2	2	2

Pushbutton	G1000020	G1000021	G1000041	G1000042
Utilisation category				
in accordance with the standard	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1
DC13 at	24 V	24 V	24 V	24 V
Max. current	0,1 A	0,1 A	0,1 A	0,1 A
Mechanical life	1,000,000 cycles	1,000,000 cycles	1,000,000 cycles	1,000,000 cycles

B10	1,300,000 cycles	1,300,000 cycles 1,300,000 cycles 1,300,00		1,300,000 cycles	
Contact material	Ag	Ag Ag		Ag	
PITreader	G1000020	G1000021	G1000041	G1000042	
Sensor's mode of op eration	Transponders	Transponders	Transponders	Transponders	
Transponder's en-	passive (battery	passive (battery	passive (battery	passive (battery	
ergy supply	free)	free)	free)	free)	
Frequency band	13,24 – 13,88 MHz	13,24 – 13,88 MHz	13,24 – 13,88 MHz	13,24 – 13,88 MHz	
Max. transmitter output	170 mW	170 mW	120 mW	120 mW	
Supply interruption b efore de-energise- ti on	10 ms	10 ms	10 ms	0 ms	
Galvanic isolation (s emiconductor out- p ut)	No	No	No	No	
Switching current pe r semiconductor output	100 mA	100 mA	100 mA	100 mA	
Short circuit proof (s emiconductor out- p ut)	Yes	Yes	Yes	Yes	
Signal level at "1" (in put)	15 – 30 V DC	15 – 30 V DC	15 – 30 V DC	15 – 30 V DC	
Input current range	4 mA	4 mA	4 mA	4 mA	
Galvanic isolation (in put)	No	No	No	No	
MTBF	36 Jahre	36 Jahre	36 Jahre	36 Jahre	
Ethernet interface	G1000020	G1000021	G1000041	G1000042	
Quantity	1	1	1	1	
IP address, factory s etting	192.168.0.12	192.168.0.12	192.168.0.12	192.168.0.12	
Connection type	M12x1, 4-pin, D-code	M12x1, 4-pin, D-code	M12x1, 4-pin, D-code	M12x1, 4-pin, D-code	
Transmission rate	10/100 Mbit/s	10/100 Mbit/s	10/100 Mbit/s	10/100 Mbit/s	

_

Environmental data	G1000020	G1000021	G1000041	G1000042
Ambient temperat- u re				
Temperature range	-20 – 55 °C			

Environmental data G1000020		G1000021	G1000041	G1000042
Storage temperature				
Temperature				
range -25	5 – 70 °C	-25 – 70 °C	-25 – 70 °C	-25 – 70 °C
Climatic suitability				
in accordance with t he standard	EN 60068-2-78	EN 60068-2-78	EN 60068-2-78	EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C	93 % r. h. at 40 °C	93 % r. h. at 40 °C
EMC	EN 301489-1 V2.1.1	EN 301489-1 V2.1.1	EN 301489-1 V2.2.3	EN 301489-1 V2.2.3
Vibration				
in accordance with t he standard	EN 60947-5-2	EN 60947-5-2	EN 60947-5-2	EN 60947-5-2
Frequency	10 – 55 Hz	10 – 55 Hz	10 – 55 Hz	10 – 55 Hz
Amplitude	1 mm	1 mm	1 mm	1 mm
Shock stress				
in accordance with t he standard	EN 60947-5-2	EN 60947-5-2	EN 60947-5-2	EN 60947-5-2
Acceleration	30 g	30g	30g	30g
Duration	11 ms	11 ms	11 ms	11 ms
Airgap creepage				
in accordance with t he standard	EN 60947-1	EN 60947-1	EN 60947-1	EN 60947-1
Overvoltage cat- eg ory	III	III	III	III
Pollution degree	3	3	3	3

Protection type				
Housing	IP65	IP65	IP64	IP64
in accordance with UL	Type 1	Type 1	Type 1	Type 1
Mechanical data	G1000020	G1000021	G1000041	G1000042
Mounting position	Any	Any	Any	Any
Connection type	M12, 12-pin male c onnector			
Material				
Housing	Zn	Zn	Zn	Zn
Connection type	M12	M12	M12	M12
Fixing screws torque settings	4 Nm	4 Nm	4 Nm	4 Nm
Dimensions				
Height	320 mm	320 mm	320 mm	320 mm
Width	40 mm	40 mm	40 mm	40 mm
Depth	40 mm	40 mm	40 mm	40 mm
Weight	920 g	920 g	920 g	920 g

Where standards are undated, the 2020-08 latest editions shall apply.

Safety characteristic data

NOTICE

You must comply with the safety characteristic data in order to achieve the required safety level for your plant/machine.

Operating mode B10d in accordance with EN ISO 13849-1: 2015 and EN 62061 E-STOP with signal contact 130.000 $\,$

Supplementary data

Radio approvals

PIT gb with PITreader Key

USA/Canada FCC ID: VT8-IC: 7482AFCC/

IC-Requirements:

This product complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standards.

Operation is subject to the following two conditions:

- 1. this product may not cause harmful interference, and
- 2. this product must accept any interference received, including interference that may cause undesired operation.

Changes or modifications made to this product not expressly approved by Pilz may void the FCC authorization to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Network data

Pro- toc	Direction [*	Trans- port prot ocol	Port no.	Can be deactiv ated	Description
HTTP	In	TCP	1 65535	Yes	Web application:
		101	Default: 80	100	Browser is always forwarded to HTTPS
			1 65535		Web application:
HTTPS	In	TCP	Default: 44	No	Transport protection by TLSv1.2. Access to the web a pplication via username and password. The server is authenticated via an X.509 certificate.
Modbus			1 65535	Yes Def	
TCP	In	TCP	Default: 50 2	ault: Ina ctive	Modbus/TCP Server
NTP	01	UDP	1 65535	Yes Def	SNTP Client
NIP	Out	UDP	Default: 12 3	ault: Ina ctive	SNIP Client
OPC UA	In	ТСР	4840	Yes Def ault: Ina ctive	PITreader OPC Server UA
mDNS	In	UDP	5353	Yes	Network discovery with Multicast DNS
	111		3000	100	(224.0.0.251)
Multicas t configu	ln .	UDP	7075	Yes	Network configuration via Multicast protocol
ration			7.57.0	100	(239.255.0.12)

[*] in: The communication partner starts communication with the product. out: The product starts communication with the communication partner.

Order reference

Product

Product type	Features	Order no.
PIT gb RLLE y up ET H	PITgatebox with PITreader Key (pushbutton unit), housing with E- STO P (2 NC/1 NO), 2 illuminated pushbuttons (1 NO each) and PITreader Key, top connection, M12, 12-pin male connector and M12, 4-pin fema le connector, Ethernet interface, IP65, 5 coloured caps in GN, BU, RD, YE and transparent	G1000020
PIT gb RLLE y down ETH	PITgatebox with PITreader Key (pushbutton unit), housing with E- STO P (2 NC/1 NO), 2 illuminated pushbuttons (1 NO each) and PITreader Key, bottom connection, M12, 12-pin male connector and M12, 4-pin f emale connector, Ethernet interface, IP65, 5 col- oured caps in GN, B U, RD, YE and transparent	G1000021
PIT gb QLLE y up ET H	PITgatebox with PITreader Card (pushbutton unit), housing with E- ST OP (2 NC/1 NO), 2 illuminated pushbuttons (1 NO each) and PITread er Card, top connection, M12, 12-pin male connector and M12, 4-pin f emale connector, Ethernet interface, IP65, 5 coloured caps in GN, BU, RD, YE and transparent	G1000041
PIT gb QLLE y down ETH	PITgatebox with PITreader Card (pushbutton unit), housing with E- ST OP (2 NC/1 NO), 2 illuminated pushbuttons (1 NO each) and PITread er Card, bottom connection, M12, 12-pin male connector and M12, 4-p in female connector, Ethernet interface, IP65, 5 col- oured caps in GN, BU, RD, YE and transparent	G1000042

Transponder key

Product type	Features	Order no.
PITreader key ye g	Transponder key for authentication system PITreader, permissions free ly configurable Colour: yellow Material: plastic	402260
PITreader key ye g b	Generic transponder key for authentication system PITreader, per- mis sions freely configurable Colour: black Material: plastic	402260BK
PITreader key ye g b	Generic transponder key for authentication system PITreader, per- mis sions freely configurable Colour: blue Material: plastic	402260BL
PITreader key ye g g	Generic transponder key for authentication system PITreader, per- mis sions freely configurable Colour: green Material: plastic	402260GN
PITreader key ye g r d	Generic transponder key for authentication system PITreader, per- mis sions freely configurable Colour: red Material: plastic	402260RD

Product type	Features	Order no.
PITreader key ye g wt	Generic transponder key for authentication system PITreader, per- mis sions freely configurable Colour: white Material: plastic	402260WT
PITreader key ye g y e	Generic transponder key for authentication system PITreader, per- mis sions freely configurable Colour: light yellow Material: plastic	402260YE
PITreader key ye 1	Transponder key for authentication system PITreader, permission for o perating mode 1 Colour: yellow Material: plastic	402261
PITreader key ye 2	Transponder key for authentication system PITreader, permission for o perating mode 1 and 2 Colour: yellow Material: plastic	402262
PITreader key ye 3	Transponder key for authentication system PITreader, permission for o perating mode 1, 2 and 3 Colour: yellow Material: plastic	402263
PITreader key ye 4	Transponder key for authentication system PITreader, permission for o perating mode 1, 2, 3 and 4 Colour: yellow Material: plastic	402264
PITreader key ye 5	Transponder key for authentication system PITreader, permission for o perating mode 1, 2, 3, 4 and 5 Colour: yellow Material: plastic	402265
PITreader key ye 5 s ervice	Transponder key for authentication system PITreader, permission for o perating mode 1, 2, 3, 4 and 5 (Service) Colour: yellow Material: plastic	402269

Transponder cards

Product type	Features	Order no.
PITreader card ye g	Transponder card for authentication system PITreader Card, per- missi ons freely configurable Colour: yellow Material: plastic	402330
PITreader card ye 1	Transponder card for authentication system PITreader Card, permissio n for operating mode 1 Colour: yellow Material: plastic	402331
PITreader card ye 2	Transponder card for authentication system PITreader Card, permission for operating mode 1 and 2 Colour: yellow Material: plastic	402332

Product type	Features	Order no.
PITreader card ye 3	Transponder card for authentication system PITreader Card, permission for operating mode 1, 2 and 3 Colour: yellow Material: plastic	402333
PITreader card ye 4	Transponder card for authentication system PITreader Card, permission for operating mode 1, 2, 3 and 4 Colour: yellow Material: plastic	402334
PITreader card ye 5	Transponder card for authentication system PITreader Card, permission for operating mode 1, 2, 3, 4 and 5 Colour: yellow Material: plastic	402335
PITreader card ye 5 service	Transponder card for authentication system PITreader Card, permission for operating mode 1, 2, 3, 4 and 5 (Service) Colour: yellow Material: plastic	402339

Transponder sticker

Product type	Features	Order no.
PITreader sticker ye	Transponder sticker for authentication system PITreader Card, per- mis sions freely configurable Colour: yellow Material: plastic	402340
PITreader sticker ye	Transponder sticker for authentication system PITreader Card, permiss ion for operating mode 1 Colour: yellow Material: plastic	402341
PITreader sticker ye 2	Transponder sticker for authentication system PITreader Card, permiss ion for operating mode 1 and 2 Colour: yellow Material: plastic	402342
PITreader sticker ye 3	Transponder sticker for authentication system PITreader Card, permiss ion for operating mode 1, 2 and 3 Colour: yellow Material: plastic	402343
PITreader sticker ye 4	Transponder sticker for authentication system PITreader Card, permiss ion for operating mode 1, 2, 3 and 4 Colour: yellow Material: plastic	402344
PITreader sticker ye 5	Transponder sticker for authentication system PITreader Card, permiss ion for operating mode 1, 2, 3, 4 and 5 Colour: yellow Material: plastic	402345
PITreader sticker ye 5 service	Transponder sticker for authentication system PITreader Card, permiss ion for operating mode 1, 2, 3, 4 and 5 (Service) Colour: yellow Material: plastic	

Accessories

Coloured caps

Product type	Features	Order no.
PIT gb color covers	Colour covers for the illuminated pushbuttons (set)	G1000009
PIT gb color cover w h s1	Colour covers for the illuminated pushbuttons, white, IEC symbol Start	G1000013
PIT gb color cover w h s2	Colour covers for the illuminated pushbuttons, white, IEC symbol ON	G1000014
PIT gb color cover w h s3	Colour covers for the illuminated pushbuttons, white, IEC symbol Unlocking	G1000015
PIT gb color cover w h s4	Colour covers for the illuminated pushbuttons, white, IEC symbol Locking	G1000016
PIT gb color cover bl s5	Colour covers for the illuminated pushbuttons, blue, IEC symbol Re-qu est	G1000017
PIT gb color cover bl s6	Colour covers for the illuminated pushbuttons, blue, IEC symbol Reset	G1000018
PIT gb color cover bl s4	Colour covers for the illuminated pushbuttons, blue, IEC symbol Locking	G1000019

PITgatebox card holder

Product type	Features	Order no.
PITgatebox card hol der	Transponder mounting for the authentication system PITreader Card on the PITgatebox	402324

Cable

Product type	Features	Connector X1	Connector X2	Connector X3	Order no.
PSEN cable M12-12 sf 2m	2 m	M12, 12-pin fe male connector, strai ght			570350
PSEN cable M12-12 sf 3m	3 m	M12, 12-pin fe male connector, strai ght			570351
PSEN cable M12-12 sf 5m	5 m	M12, 12-pin fe male connector, strai ght			570352
PSEN cable M12-12 sf 10m	10 m	M12, 12-pin fe male connector, strai ght			570353
PSEN cable M12-12 sf 20m	20 m	M12, 12-pin fe male connector, strai ght			570354
PSEN cable M12-12 sf 30m	30 m	M12, 12-pin fe male connector, strai ght			570355

Product type	Features	Connector X1	Connector X2	Connector X3	Order no.
PSEN cable M12-12 sf 50m	50 m	M12, 12-pin fe male connector, strai ght			570356
PSEN cable M12-12 sf/ M12-12sm 1m	1 m	M12, 12-pin fe male connector, strai ght	M12, 12-pin ma le connector, st raight		570357
PSEN cable M12-12 sf/ M12-12sm 2m	2 m	M12, 12-pin fe male connector, strai ght	M12, 12-pin ma le connector, st raight		570358
PSEN cable M12-12 sf/ M12-12sm 3m	3 m	M12, 12-pin fe male connector, strai ght	M12, 12-pin ma le connector, st raight		570359
PSEN cable M12-12 sf/ M12-12sm 5m	5 m	M12, 12-pin fe male connector, strai ght	M12, 12-pin ma le connector, st raight		570360
PSEN cable M12-12 sf/ M12-12sm 10m	10 m	M12, 12-pin fe male connector, strai ght	M12, 12-pin ma le connector, st raight		570361
PSEN cable M12-12 sf/ M12-12sm 20m	20 m	M12, 12-pin fe male connector, strai ght	M12, 12-pin ma le connector, st raight		570362
SafetyNET p cable	By the metre, 4 -pin.CAT5e				380000

Connector

Product type	Features	Connector X1	Connector X2	Connector X3	Order no.
M12 con., straight, male, 4-pin, D	D-coded	M12, 4-pin mal e connector, str aight			380316
SafetyNET p connector RJ45s		4-pin RJ45 mal e connector, str aight, Cat 5a			380400

EC declaration of conformity

This product/these products meet(s) the requirements of the following directives of the European Parliament and of the Council.

- 2006/42/EC on machines
- 2014/53/EU on radio equipment
- The complete EC Declaration of Conformity is available on the Internet at www.pilz.com/downloads
- Representative: Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany

UKCA-Declaration of Conformity

This product(s) complies with following UK legislation:

- Supply of Machinery (Safety) Regulations 2008
- Radio Equipment Regulations 2017
- The complete UKCA Declaration of Conformity is available on the Internet at www.pilz.com/downloads
- Representative: Pilz Automation Technology, Pilz House, Little Colliers Field,
- Corby, Northamptonshire, NN18 8TJ United Kingdom, eMail: mail@pilz.co.uk

Support

Technical support is available from Pilz round the clock.

Americas

- Brazil
- +55 11 97569-2804
- Canada
- +1 888 315 7459
- Mexico
- +52 55 5572 1300
- USA (toll-free)
- +1 877-PILZUSA (745-9872)

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.

CECE®, CHRE®, CMSE®, INDUSTRIAL PI®, Leansafe®, Myzel®, PAS4000®, PAScal®, PASconfig®, Pilz®, PIT®, PMCprimo®, PMCprotego®, PMCtendo®, PMD®, PMI®,

PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, THE SPIRIT OF SAFETY® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries. We would point out that product features may vary from the details stated in this document, depending on the status at the time of publication

and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information.

Please contact our Technical Support if you have any questions.

We are represented internationally. Please refer to our homepage www.pilz.com for further details or contact our headquarters.

Headquarters: Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany Telephone: +49 711 3409-0, E-Mail: <u>info@pilz.com</u> Internet: <u>www.pilz.com</u>

Documents / Resources



PILZ VT8-PITGB11 PIT gb with PIT Reader [pdf] Owner's Manual

VT8-PITGB11 PIT gb with PIT Reader, VT8-PITGB11, PIT gb with PIT Reader, with PIT Reader, PIT Reader, Reader

References

- Pilz â€" Safe automation, automation technology Pilz INT
- Pilz â€" Safe automation, automation technology Pilz INT
- <u>Downloads Pilz INT</u>
- <u>Downloads Pilz INT</u>
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.