



Contents [[hide](#)]

- [1 PIMA PAM500 Panic Alert Unit](#)
- [2 Product Specifications](#)
- [3 Installation Instructions](#)
- [4 Circuit description](#)
- [5 General](#)
- [6 Limited Warranty](#)
- [7 FAQs](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



PIMA PAM500 Panic Alert Unit



Product Specifications

- **Panic input:** dry contact, NO
- **Release input:** dry contact, NO
- **Operating voltage range:** 10- 15VDC
- **Current consumption (during alarm):** 30mA
- **Dimensions:** 120 x 70 x 50 mm
- **Weight:** 100 g
- **Temperature range:** -10°C to +55°C

Installation Instructions

General

- PAM500 is a panic alert/nurse call unit, intended for use in the FORCE security system.
- The unit provides an audible and visual warning when an emergency button is pressed (external to the module), and opens a zone in the alarm system.
- Pressing the release button (external to the unit) stops the alarm and closes the zone in the alarm system.







Circuit description


General

#	Description
1	Terminal Blocks – Inputs
2	Terminal Blocks – Outputs
3	Switches for buzzer and lighting control
4	Alert Light

Switches

Notes: switches 2-4 for buzzer,r Switch – for light

	Flashing light Refer to switch 1 only
	Constant lighting Refer to switch 1 only
	Max buzzer volume Switch 2-4
	Medium buzzer Switch 2-4
	Min buzzer volume Switch 2-4
	Buzzer is off Switch 2-4

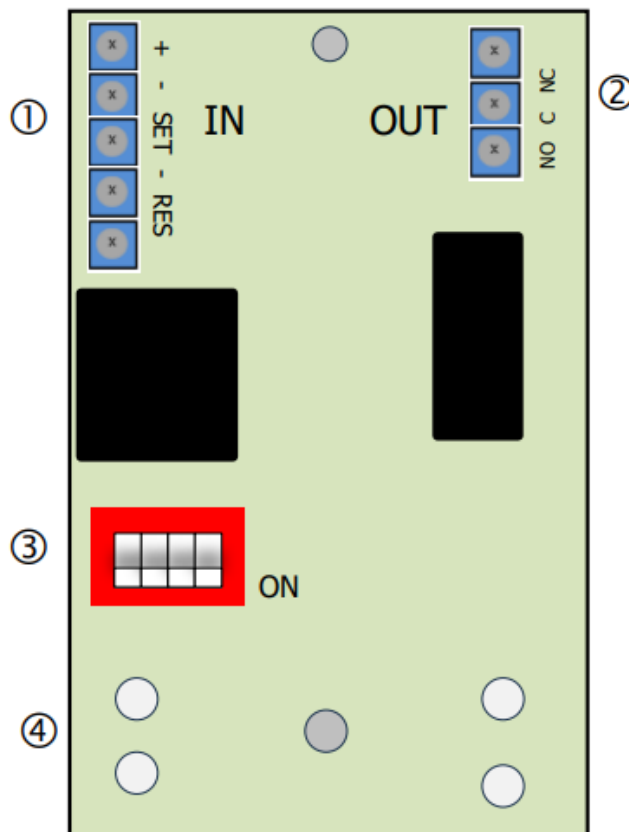

Terminal Block – Inputs

Name	Description
+	Input Voltage +12VDC
-	Input Voltage return
SET	Panic Button Input
-	Common for Panic and Release buttons
RES	Release Button Input

Terminal Block – Output

Connect to the Alarm System zone


NC	Relay NC terminal
C	Relay Common terminal
NO	Relay NO Terminal

The contents of the product packaging

- PAM500 distress alert unit
- Two installation screws + dowels
- Installation page

How to install and connect the PAM500


See the connection diagram in the following Figure.

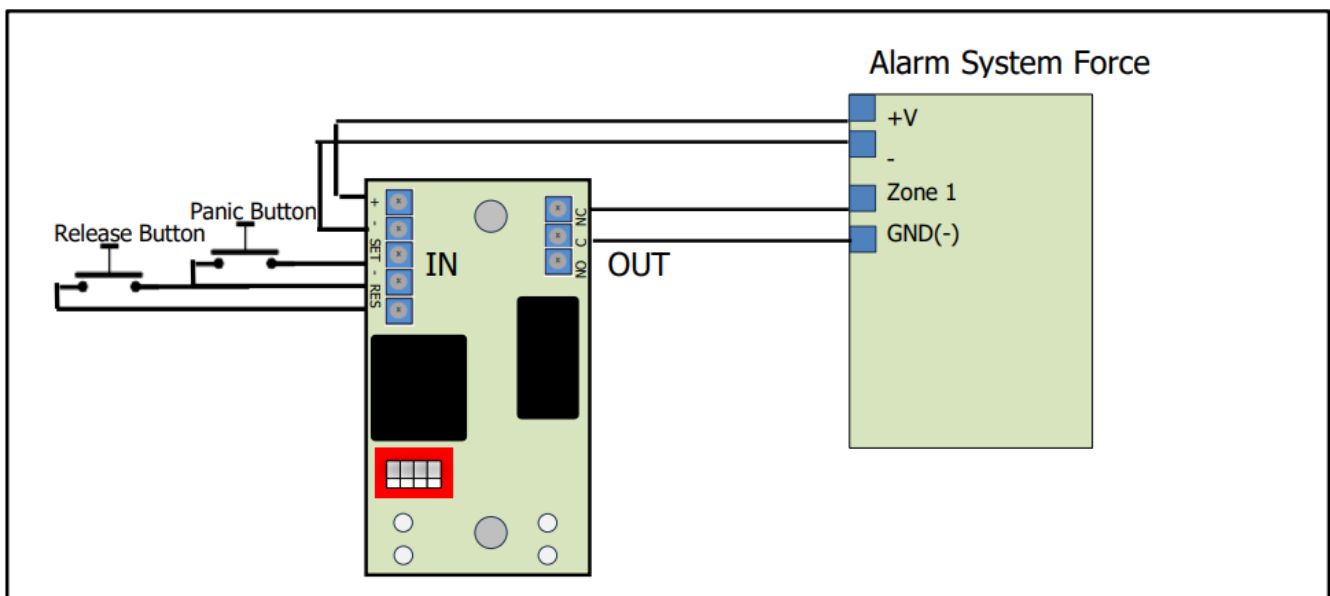

The screws and dowel kit supplied with the product must be used.

1. Remove the two front cover parts from the base.
2. Drill two holes in the wall according to the corner holes of the base #1 in the Figure on the right.) And insert the dowels.
3. Thread the wires intended for connection through the two holes in the base (no. 2 in the Figure on the right).
4. Assemble the red part of the cover (bottom) on top of the base and fasten them together to the wall with one of the screws.
5. Connect the wires coming from the panic button to the SET input and ground.

6. Connect the wires coming from the release button to the RES input and ground.
7. Connect the NC and C outputs to a suitable zone input on the alarm system.
8. Assemble the white part of the cover to the base and fasten with the second screw.

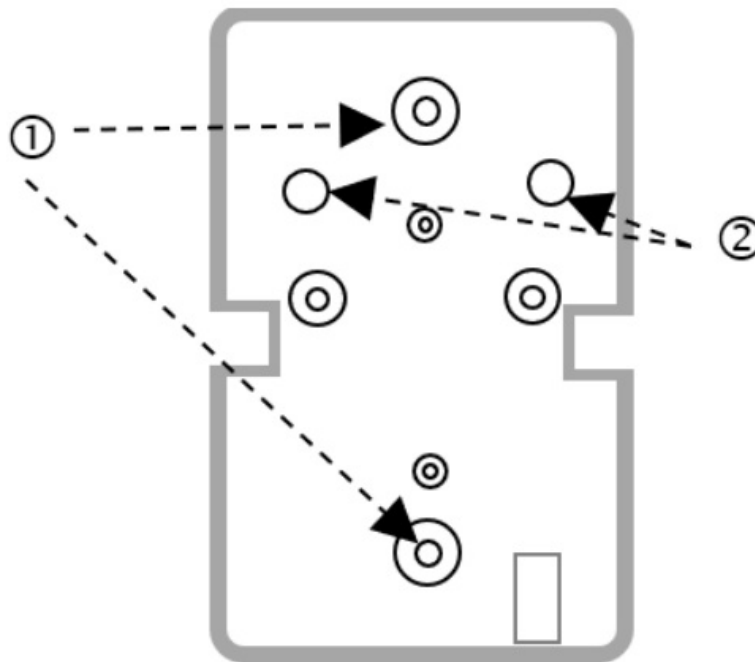


Both buttons, panic and release, must be of the Normally Open type, meaning they short the contacts when pressed.

Consult PIMA for suitable in-stock buttons.

Installation options

See Figure 2 for the different installation options

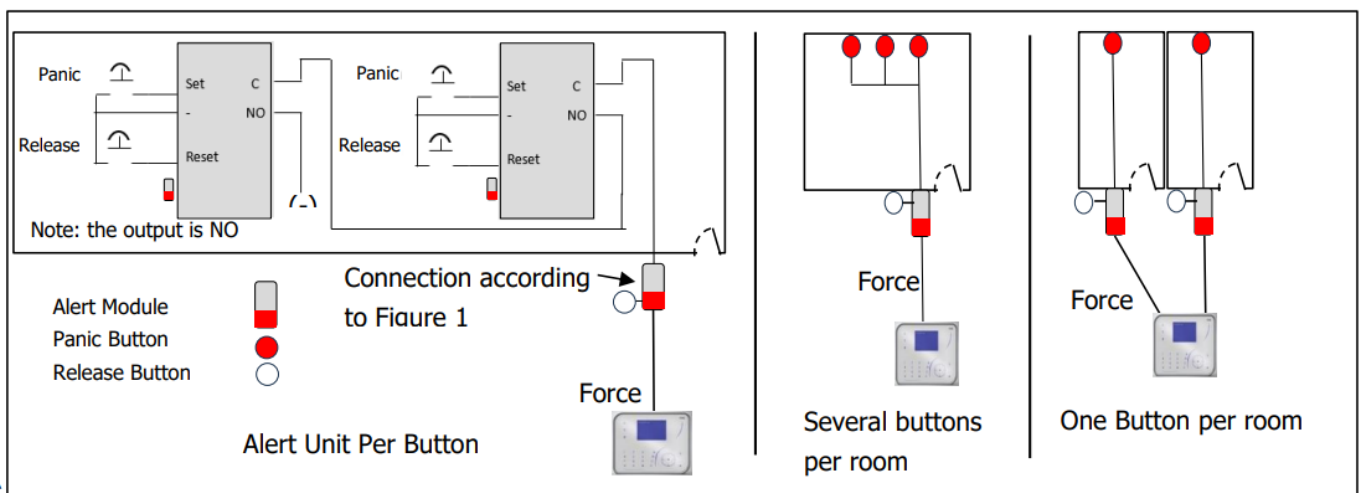

Installation Options

Note: since the buttons are of the Normally Open type, it is possible to connect them in parallel; For example, it is possible to connect several release buttons simultaneously to

the input of one alarm unit. Force system programming and operation. Each zone in the Force system that connects to the alarm unit must be set as follows:

- NC
- 24 hours

After receiving an alarm indication on the keypad, the indication must be deleted by holding down the quit key . If you want an audible warning with a higher volume than the buzzer of the security guard/nurse, you can connect a buzzer/siren to the relay output of the alarm system .

Alarm Controller Software

When connected to the Force system, the alarms appear on the keypad. You can connect the Force system to a computer with software to display the alarms and manage them conveniently on the computer screen. Consult with PIMA on this matter.

Ordering Information

PAM500: P/N 8160004

Limited Warranty

PIMA Electronic Systems Ltd. does not represent that its product may not be compromised and/or circumvented, or that the Product will prevent any death, personal and/or bodily injury and/or damage to property resulting from burglary, robbery, fire or otherwise, or that the Product will in all cases provide adequate warning or protection. The User understands that properly installed and maintained equipment may only reduce the risk of events such as burglary, robbery, and fire without warning, but it is not insurance or a guarantee that such will not occur or that there will be no death, personal damage and/or damage to property as a result. Read this guide in its entirety before attempting to program or operate your system. Should you misunderstand any part of this guide, please contact the supplier or installer of this system.

Produced by:

PIMA Electronic Systems Ltd.

www.pima-alarms.com

5, Hatzoref Street, Holon 5885633, Israel

Tel: +972.3.6506411

Email: support@pima-alarms.com




Link to updated literature

FAQs

Q: Can multiple release buttons be connected to one alarm unit?

A: Yes, since the buttons are of Normally Open type, you can connect several release buttons simultaneously to the input of one alarm unit.

Documents / Resources

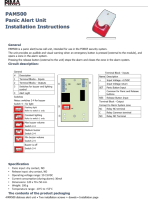	<p>PIMA PAM500 Panic Alert Unit [pdf] Instruction Manual</p> <p>PAM500, PAM500 Panic Alert Unit, Panic Alert Unit, Alert Unit</p>
---	---

References

- [User Manual](#)

Related Posts



[IKEA RÅGRUND Shelving Unit Instruction Manual](#)

IKEA RÅGRUND Shelving Unit PRODUCT
INFORMATION INSTRUCTIONS REQUIRED TOOLS
SAFETY PRECAUTIONS HOW TO FIX TOOLS



[Sanitaire Bathroom Vanity Unit Instruction Manual](#)

Sanitaire Bathroom Vanity Unit Tools List Parts List Wall mounted system Floor standing system Installation & Adjustment of...



[KEMPPI P45MT Transport Unit Instruction Manual](#)

KEMPPI P45MT Transport Unit Instruction PARTS
INSTALLATION INSTRUCTIONS 4 x M8x12 8 x M8x16
4 x...



[IKEA ALEX Drawer Unit Instruction Manual](#)

IKEA ALEX Drawer Unit Instruction Manual Customier
Support Tools Assembly Instructions



[IKEA RÅGRUND Shelving Unit Instruction Manual](#)

IKEA RÅGRUND Shelving Unit PRODUCT
INFORMATION INSTRUCTIONS REQUIRED TOOLS
SAFETY PRECAUTIONS HOW TO FIX TOOLS



[Sanitaire Bathroom Vanity Unit Instruction Manual](#)

Sanitaire Bathroom Vanity Unit Tools List Parts List Wall mounted system Floor standing system Installation & Adjustment of...



[KEMPPI P45MT Transport Unit Instruction Manual](#)

KEMPPI P45MT Transport Unit Instruction PARTS
INSTALLATION INSTRUCTIONS 4 x M8x12 8 x M8x16
4 x...



[IKEA ALEX Drawer Unit Instruction Manual](#)

IKEA ALEX Drawer Unit Instruction Manual Customer Support Tools Assembly Instructions

🔑 Alert Unit, PAM500, PAM500 Panic Alert Unit, Panic Alert Unit,

📁 PIMA PIMA

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

Search

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.