



## MS7693 Game Card Vending Machine



# PIPELINE MS7693 Game Card Vending Machine Instruction Manual

[Home](#) » [PIPELINE](#) » PIPELINE MS7693 Game Card Vending Machine Instruction Manual

## Contents

- [1 PIPELINE MS7693 Game Card Vending Machine](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 How to use](#)
- [6 Parameter settings](#)
- [7 Easy trouble shooting](#)
- [8 Wiring](#)
- [9 Mainboard J6 screen port signal](#)
- [10 Mainboard JP3 function list](#)
- [11 Main board JP1function list](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)



**PIPELINE MS7693 Game Card Vending Machine**



## Specifications

- Mainboard: CV-DBA
- Screen: CV-Display
- Hand Held Programmer: CV-Hand Held Programmer
- Card Dispenser: CV-Card Dispenser
- Power Cord: CV-Power Cord
- Front Overlay: CV-Front Overlay
- Entry/Exit Card Plate: CV-Entry/Exit Card Plate
- Wheels: CV-Wheels
- T Handle Lock/Key: CV-T Handle Lock/Key
- Back Door Lock/Key: CV-Back Door Lock/Key
- Power Supply: CV-Power Supply
- Meter: CV-Meter
- Left/Right Graphics: Left/Right Graphics
- Front Acrylic: CV-Front Acrylic
- On/Off Assembly: CV-On/Off Assembly
- Outlet: CV-Outlet
- Button: CV-Button

## Product Usage Instructions

### How to Use:

1. Insert a coin or bill into the machine.
2. Press the corresponding value button below the desired card.
3. Retrieve the dispensed card from the machine.

### Parameter Settings:

1. Press the enter button to access settings mode.
2. Use the up, down, left, and right buttons to change parameters as needed.
3. Exit settings mode after making all necessary changes.

### Easy Troubleshooting:

#### 1. No Display on Screen:

- Check cables from the main board to the screen for any issues.
- Ensure the main board is functioning properly; if not, consider replacing the display.

#### 2. Coin or Bill Acceptor Not Working:

- Check cables connected to the acceptors.
- Verify if the indicator light for the acceptor is on.
- If needed, replace the malfunctioning acceptor.

#### 3. No Card Dispensed After Inserting Money:

- Check the functionality of the button first.
- Inspect and ensure proper operation of the card dispenser.

#### 4. Continuous Beeping:

- Check the card levels in the dispenser and add more cards if needed.

### D. Wiring:

- Mainboard J6 screen port signal
- Mainboard JP3 function list

### FAQ

#### • Q: What should I do if the machine is not accepting coins or bills?

- A: First, check the cables connected to the acceptors and ensure that the indicator light is on. If the issue persists, consider replacing the malfunctioning acceptor.

#### • Q: How do I change the parameters on the machine?

- A: Press the enter button to access settings mode, then use the directional buttons to make necessary parameter changes before exiting settings mode.

#### • Q: Why is there no display on the screen?

 
- A: Check the cables running from the main board to the screen for any faults. If the main board is

functioning correctly, consider replacing the display if necessary.


## How to use

1. Insert coin or bill
2. Press below corresponding value button
3. Take the dispensed card

## Parameter settings

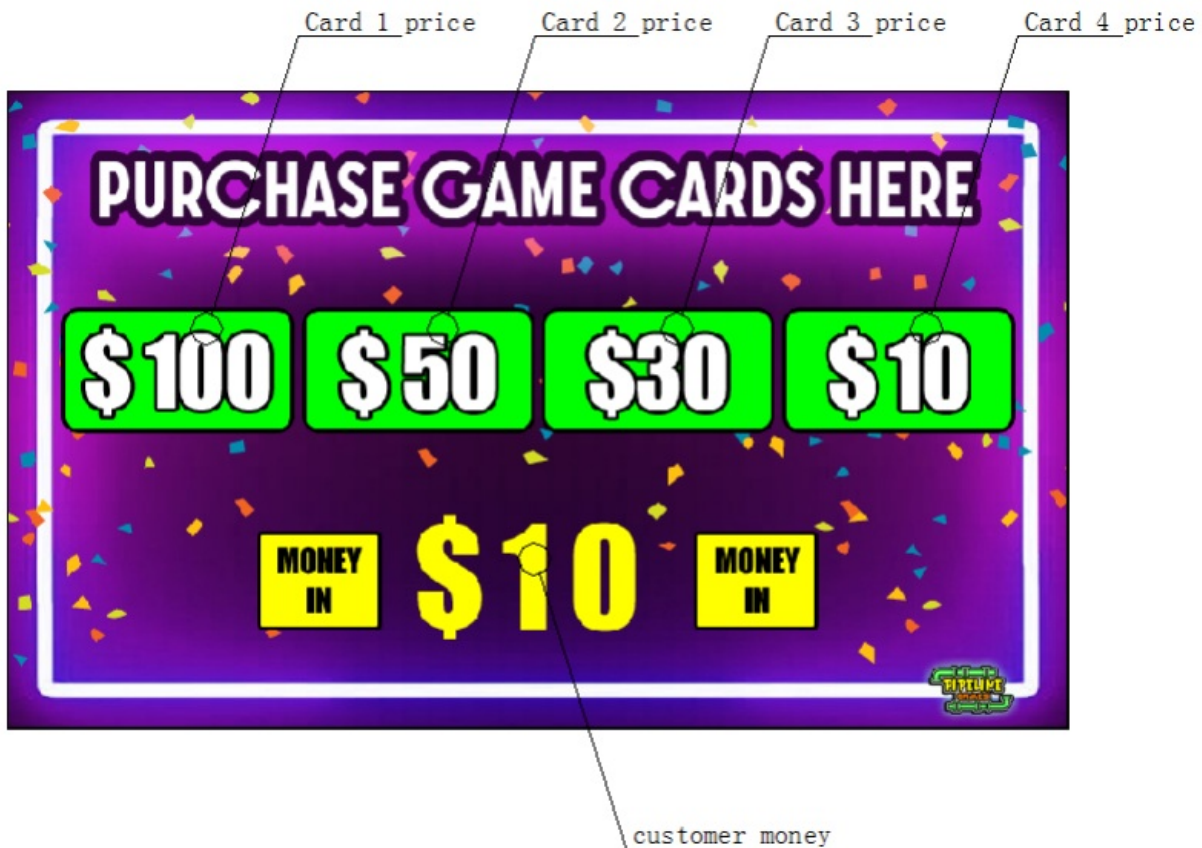


Press enter button for settings: Change parameter by up, down, left and right button. Exit after marking all changes.

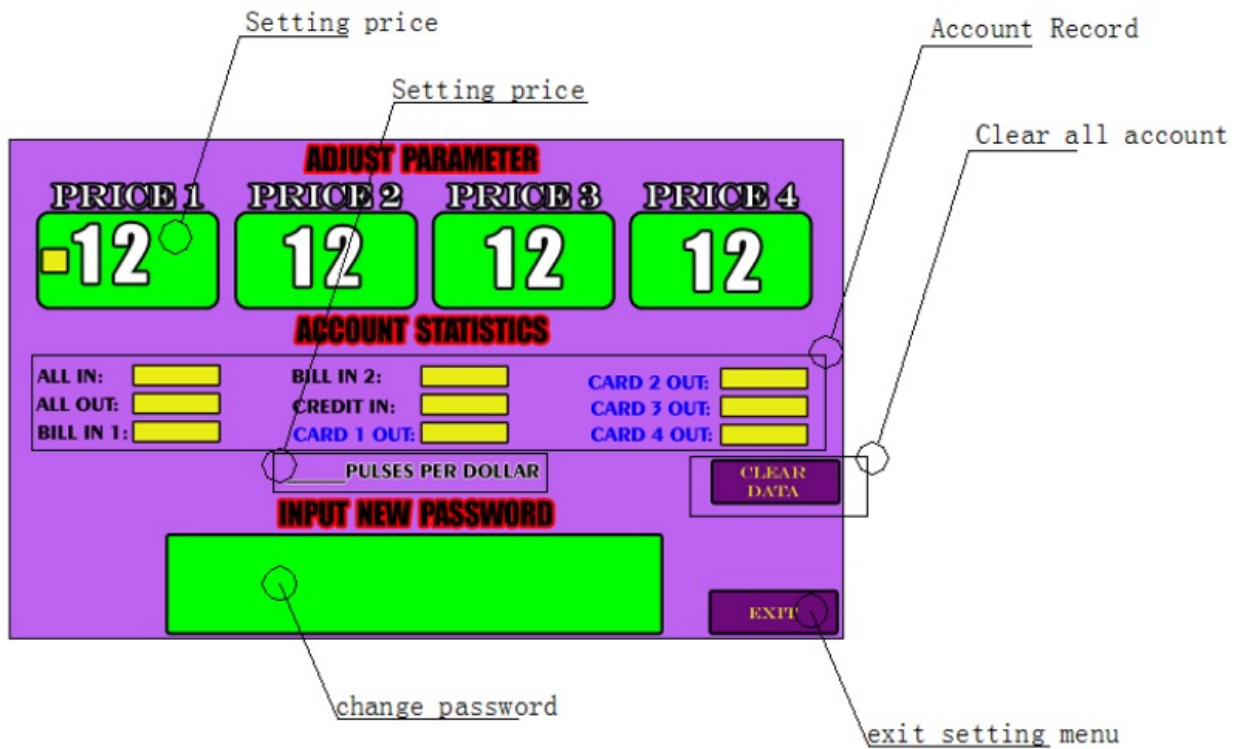

## Easy trouble shooting

1. Nothing on the display screen.
  - Check if cables from main board to scree is no problem.
  - Check if the main board is working, if no problem, replace the display.
2. Coin acceptor or bill acceptor not working.
  - Check cables
  - Check if coin acceptor or bill acceptor indicator light is on
  - Replace bill acceptor or coin acceptor
3. Money was inserted but no card came out.
  - Check button first to see if it's working
  - Check card dispenser
4. Continuous Beeping.
  - Check the levels of the cards in the card dispensers. Add cards to card dispenser.

Wiring

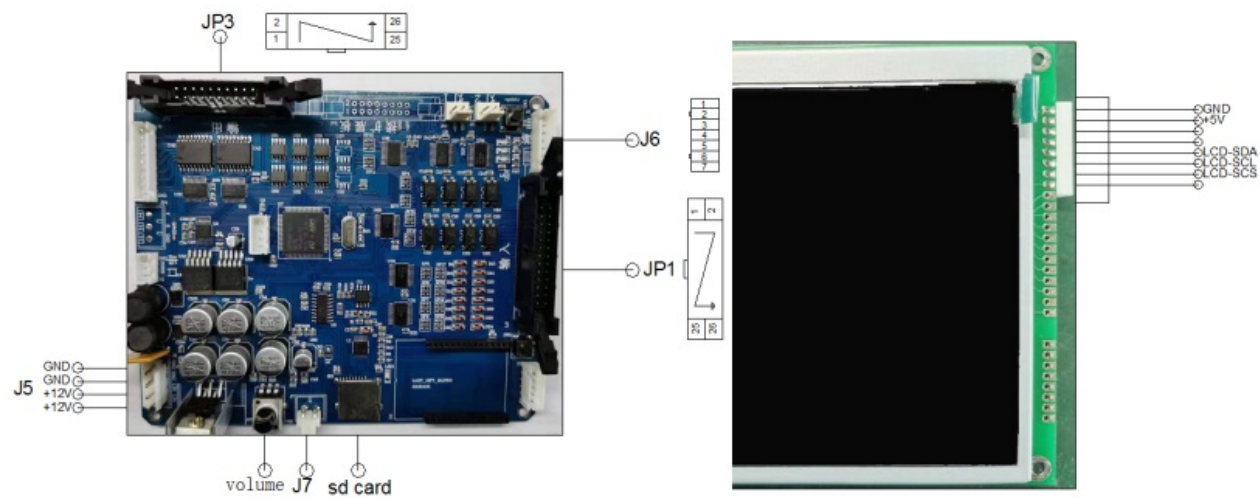

Main board

Screen

Mainboard J6 screen port signal




CON - NO.	PIN - NO.	FUNCTION
J6 LCD	1	+5V
	2	GND
	3	LCD-SCS
	4	LCD-SCL
	5	LCD-SDA
	6	
	7	



Mainboard JP3 function list


CON - NO.	PIN - NO.	FUNCTION	PIN - NO.	FUNCTION
JP3	1	Meter-card 1	2	Meter-card 2
	3	Meter-card 3	4	Meter-card 4
	5	Meter-Bill 1	6	Meter-Bill 2
	7	Meter-Credit reader	8	
	9	Card 1-OUT	10	Card 1-CALLBACK
	11	Card 2-OUT	12	Card 2-CALLBACK
	13	Card 3-OUT	14	Card 3-CALLBACK
	15	Card 4-OUT	16	Card 4-CALLBACK
	17		18	
	19	+12V	20	+12V

#### Main board JP1function list

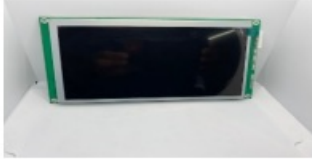 
CON - NO.	PIN - NO.	FUNCTION	PIN - NO.	FUNCTION
JP1	1	Card 1-OUTOK	2	Card 1-EMPTY
	3	Card 1-ERROR	4	Card 1-button
	5	Card 2-OUTOK	6	Card 2-EMPTY
	7	Card 2-ERROR	8	Card 2-button
	9	Card 3-OUTOK	10	Card 3-EMPTY
	11	Card 3-ERROR	12	Card 3-button
	13	Card 4-OUTOK	14	Card 4-EMPTY
	15	Card 4-ERROR	16	Card 4-button
	17	Setting-up	18	Setting-down
	19	Setting-left	20	Setting-right
	21	Setting-enter	22	Bill 1 - IN
	23	Bill 2 - IN	24	Credit - IN
	25	GND	26	GND

1	CV-DBA	
2	CV-Main Board	
3	CV-Display	

4	<b>CV-Hand Held Programmer</b>	
5	<b>CV-Card Dispenser</b>	
6	<b>CV-Power Cord</b>	
7	<b>CV- Front Overlay</b>	
8	<b>CV-Entry/Exit Card Plate</b>	
9	<b>CV-Wheels</b>	
10	<b>CV-T Handle Lock/Key</b>	
11	<b>CV-Back Door Lock/Key</b>	

12	<b>CV-Power Supply</b>	
13	<b>CV-Meter</b>	
14	<b>CV-Left/Right Graphics</b>	
15	<b>CV-Front Acrylic</b>	
16	<b>CV-On/Off Assembly</b>	
17	<b>CV-Outlet</b>	
18	<b>CV-Button</b>	

## Documents / Resources

<p>Game Card Vending Machine Manual</p> <p>A. Introduction</p> <p>1. About this manual</p> <p>2. How to use this manual</p> <p>3. How to use this manual</p> <p>B. Operation settings</p> 	<p><a href="#">PIPELINE MS7693 Game Card Vending Machine</a> [pdf] Instruction Manual</p> <p>MS7693 Game Card Vending Machine, MS7693, Game Card Vending Machine, Vending Machine</p>
---	---

## References

- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.