


Pipishell PIUC08W 4 Tier Rolling Cart Instruction Manual

Home » Pipishell » Pipishell PIUC08W 4 Tier Rolling Cart Instruction Manual

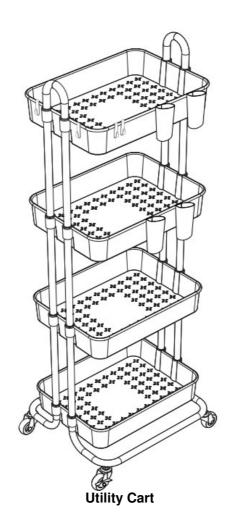







Contents

- 1 Contents
- 2 Installation
- 3 Documents / Resources
 - 3.1 References


Contents

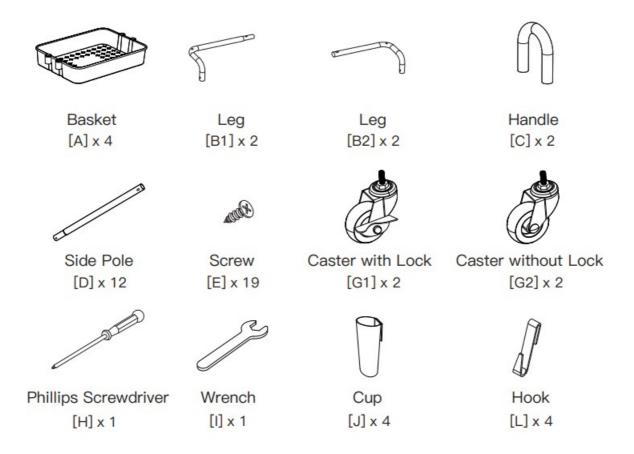


Installation

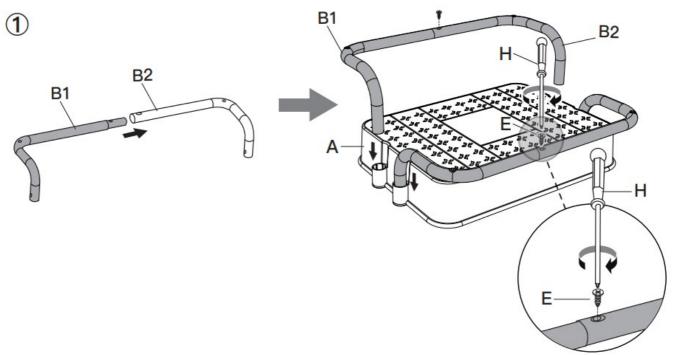


NOTE: Make sure the legs are installed as tightly as possible against the basket. Connect the legs [B1] and [B2] together, but do not screw in screws. Insert the assembled legs [B1] and [B2] into the basket [A] from the bottom of the basket [A], then tighten the screws [E].

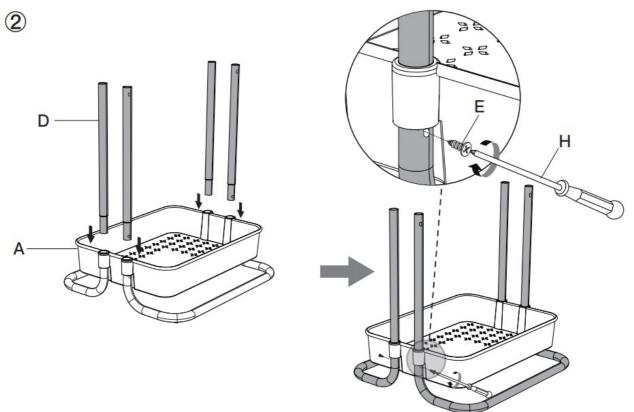

NOTE: Make sure the side poles are installed as tightly as possible against the basket. Insert four side poles [D]. Align the holes of the side poles [D] with the holes on the legs [B1] and [B2], then secure them with the screws [E].

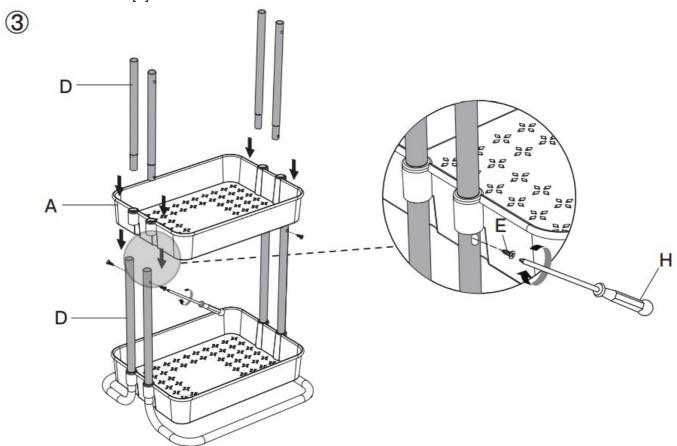

NOTE: Make sure the side poles are installed as tightly as possible against the basket. Slide the basket [A] onto the poles already attached, then insert four more side poles [D]. Align the holes of the upper poles with the holes on lower poles, then secure them with the screws [E].

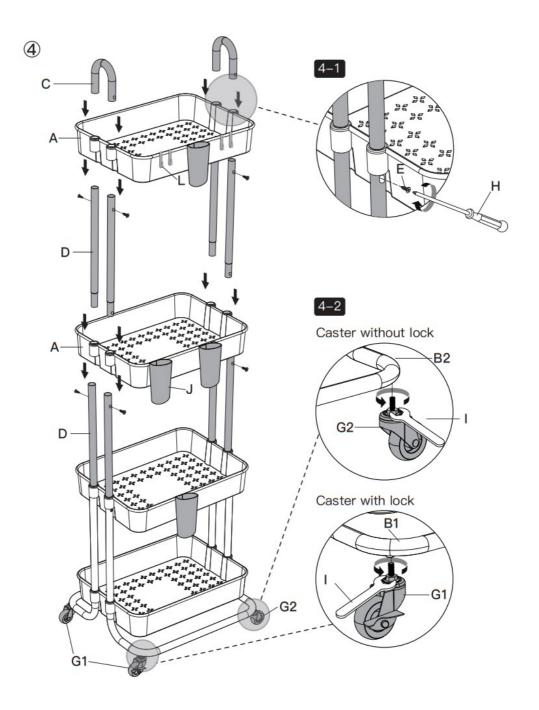

NOTE: If the utility cart is unlevel on the floor, adjust the casters with wrench [I] for leveling. Repeat step ③ to install two more tiers. Then secure the handles [C] by aligning the screw holes and tightening the screws [E]. Attach the casters [G1] and [G2], hooks [L], and cups [J].





<u>Pipishell PIUC08W 4 Tier Rolling Cart</u> [pdf] Instruction Manual PIUC08W 4 Tier Rolling Cart, PIUC08W, 4 Tier Rolling Cart, Rolling Cart

References

- Pipishell Heavy Duty Full Motion TV Wall Mounts Make Your Life Better
- User Manual

Manuals+, Privacy Policy