




Planet Audio PSX18 All-Terrain Sound System User Manual

[Home](#) » [Planet Audio](#) » Planet Audio PSX18 All-Terrain Sound System User Manual 





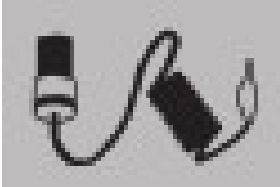
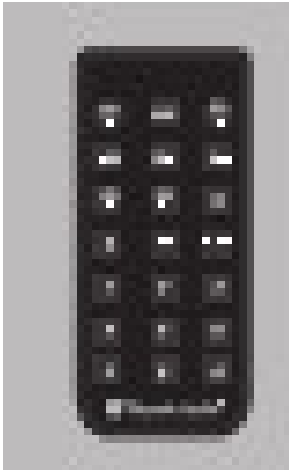
For the latest information about this product please visit www.planetaudio.com

TECH SUPPORT:805-751-4854

www.planetaudio.com/customer-support

Thank you for purchasing this
PSX18 All-Terrain Sound System

Please read through these instructions carefully so you will know how to operate your model properly.
After you have finished reading the instructions, keep this document in a safe place for future reference.

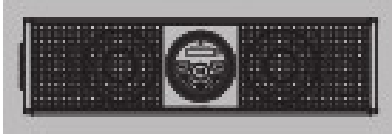THIS PACKAGE CONTAINS	
1- PSX18 All-Terrain Speaker System	
1- Mounting Kit	
1- Power Accessory Extension Adaptor	
1- Remote control	
1- User Manual	USER MANUAL
1- Warranty Card	WARRANTY CARD

Contents

- 1 INFORMATION TO THE USER
- 2 BEFORE YOU START
- 3 GETTING TO KNOW YOUR PSZ18
- 4 BEFORE YOU START
- 5 BLUETOOTH OPERATION
- 6 Aux Input
- 7 USB Input
- 8 Remote Control
- 9 Installation
- 10 Troubleshooting
- 11 Dimensions
- 12 Wire Diagram
- 13 Specifications
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts

INFORMATION TO THE USER



The Bluetooth ®word mark and logos have registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks is under license. Other trademarks and trade names are those of their respective owners.

BEFORE YOU START

IMPORTANT SAFETY PRECAUTIONS

- Do not operate mobile equipment while driving a motorized vehicle – safe driving and safety consideration of Planet Audio Service Center. Using this product in this condition may result in permanent damage to the system. immediately turn off the power and consult your dealer or the nearest authorized
- In the event you should notice smoke, strange noises or odor from this product, or any other abnormal signs, others should always be your highest priority.
- Set your volume control at a low setting, then slowly increase the sound until you can hear it comfortably without distortion, or ear discomfort.
- BE SURE TO OBSERVE THE FOLLOWING GUIDELINES:
 - Do not turn up the volume so high that you can't hear what's around you.
 - Use caution or temporarily discontinue use in potentially hazardous situations.

INSTALLATION PRECAUTIONS

WARNING – Always consult a professional installer

- Do not attempt to install or service this product by yourself. installation or servicing of this product by persons without professional training and experience in electronic equipment and motorized vehicle accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards
- Refer any repairs to a qualified Planet Audio Service Center
- The PSX18 can be powered from a vehicle's cigarette lighter / auxiliary power port, or hard wired directly to the battery through an optional relay/accessory switch when wiring directly to the vehicle's battery, be sure to disconnect the battery negative terminal wire before starting any wiring procedures, it is suggested that an optional fuse and fuse holder (not included) with a minimum rating of 15 Amps be in line with the positive battery terminal
- The ground cable length should not exceed 18-inches (See wiring diagram)
- The PSX18 has a weather-resistant design, it should not be submerged in or under water under any circumstances
- Use only the installation parts provided with the PSX18
- Wash with a mild soap or detergent and lukewarm water using a clean sponge or a soft cloth. Rinse well with clean water.

“Don'ts” – Very important

 
 
- **DON'T** clean in hot sun or on very hot days.
- **DON'T** use abrasive or highly alkaline cleaners on the main body
- **DON'T** scrape the main body with razor blades, or other sharp instruments
- **DON'T** ever use, gasoline, acetone or carbon tetrachloride

CAUTION!!




Using other mounting methods may void this warranty

GETTING TO KNOW YOUR PSX18

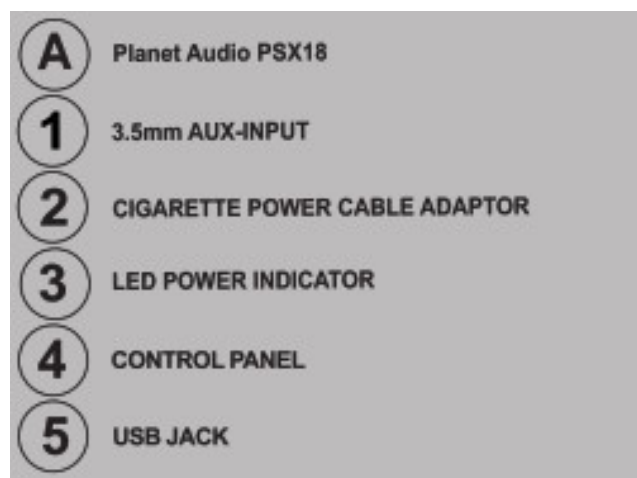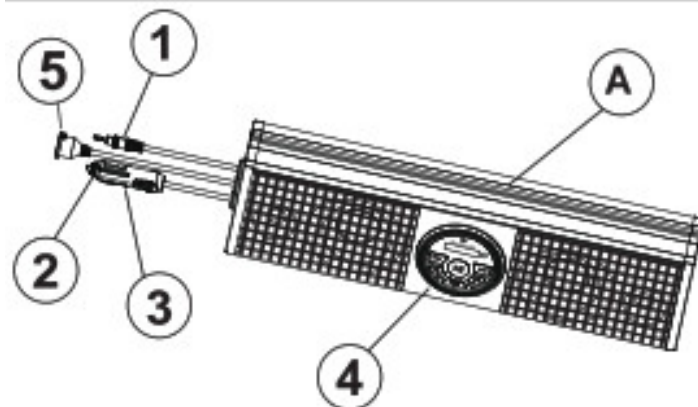

BEFORE YOU START

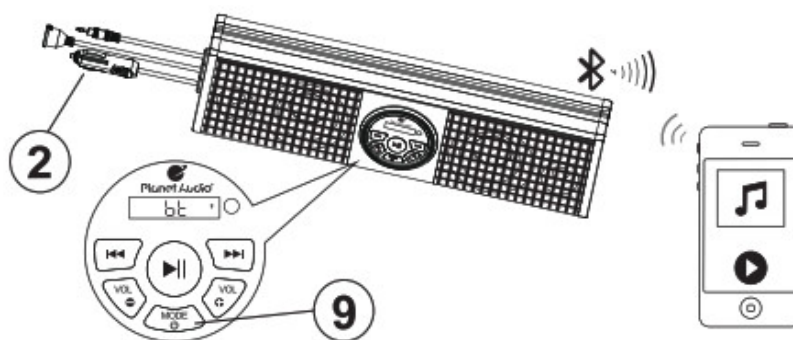 

PAIRING & DISCOVERING A NEW BLUETOOTH CONNECTION

1. Power on the PSX18 by plugging in the male cigarette lighter adaptor into **2** female cigarette lighter receptacles.
2. Press the button. The PSX18 will automatically go into pairing mode: **ANDROID** users: Go into the Settings menu of your device Enter the Bluetooth Menu TURN ON Bluetooth and press SCAN " Planet Audio PSX18" will now be displayed under AVAILABLE DEVICES If prompted, enter passcode: "0000"

iOS users:

 
- Go into the Settings Menu of your iOS device
- Enter the Bluetooth Menu
- TURN ON Bluetooth
- " Planet Audio PSX18" will now be displayed
- If prompted, enter passcode: "0000"

NOTE: You have 2 minutes before you must restart this procedure over again.

3.If Planet Audio PSX18 is not seen, repeat the above steps to refresh the "Device List"

4.When the connection is successful, you are now ready to stream music from your favorite media player to the PSX18

BLUETOOTH OPERATION

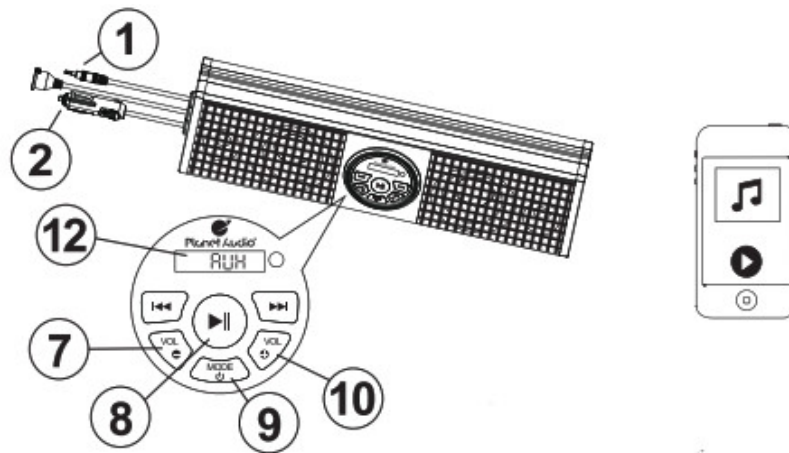

RECONNECTION

 
1. Power on the PSX18 and your last paired Bluetooth device.
2. Press the button **9**.The unit will now automatically reconnect
3. If your device was previously paired with the PSX18, but it wasn't the last paired device:
 - a. Ensure no other devices are currently paired
 - b. Enter the Bluetooth Menu on your device being paired
 - c. "Planet Audio PSX18" will display underAVAILABLE DEVICES
 - d. Choose the "Planet Audio PSX18 "to reconnect
4. If the device is out of range from the PSX18 ,it will disconnect automatically:
 - a. The PSX18 will automatically reconnect to the device once back in range



Tips:

To avoid battery exhaustion, be sure to occasionally run the vehicles engine while using this product.
Using this product without running the engine can drain the battery.

Streaming Music

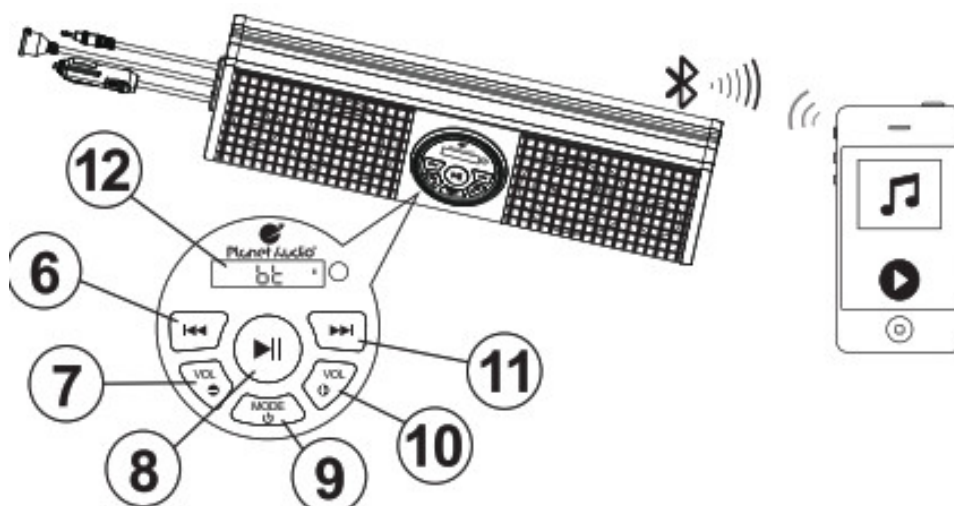

MULTIFUNCTION CONTROLLER BLUETOOTH OPERATION

1. Press the **8** PLAY PAUSE once to start playing music or press the PLAY button from your device's touchscreen
2. To skip songs or advance, press the **11** NEXT TRACK button
3. To select the previous song, press the **6** PREVIOUS TRACK button

VOLUME CONTROL

 
1. To raise the volume press the **10** VOLUME UP button or use your device's controls
2. To lower the volume press the **7** VOLUME DOWN button or use your device's controls



Tips:

For maximum audio performance, ensure your device Bluetooth volume is set to a minimum 75% level before stowing

Aux Input

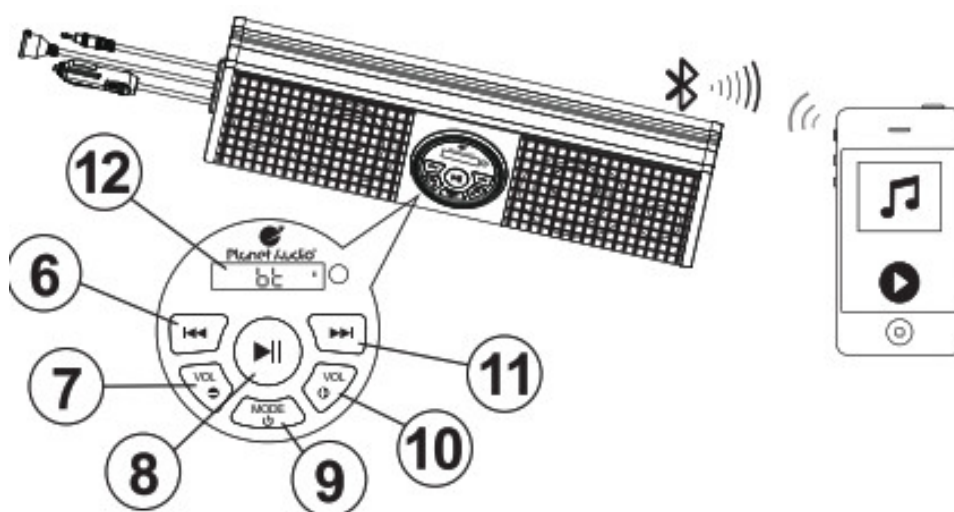

AUX-IN OPERATION

1. Power on the PSX18 by plugging in the male cigarette lighter adaptor into **2** the female cigarette lighter receptacle.

2. Press the button I J **9**. The PSX18 will automatically go into AUX mode:
3. Connect the integrated 3.5mm AUX-IN cable **1** to your device's headphone jack
4. Route the wire back to PSX18, and secure your device

VOLUME CONTROL

 
1. To raise the volume press the VOLUME **10** button or use your device's controls
2. To lower the volume press the **7** VOLUME DOWN button or use your device's controls



Tips:

For maximum audio performance, ensure your device Bluetooth volume is set to a minimum 75% level before stowing


USB Input

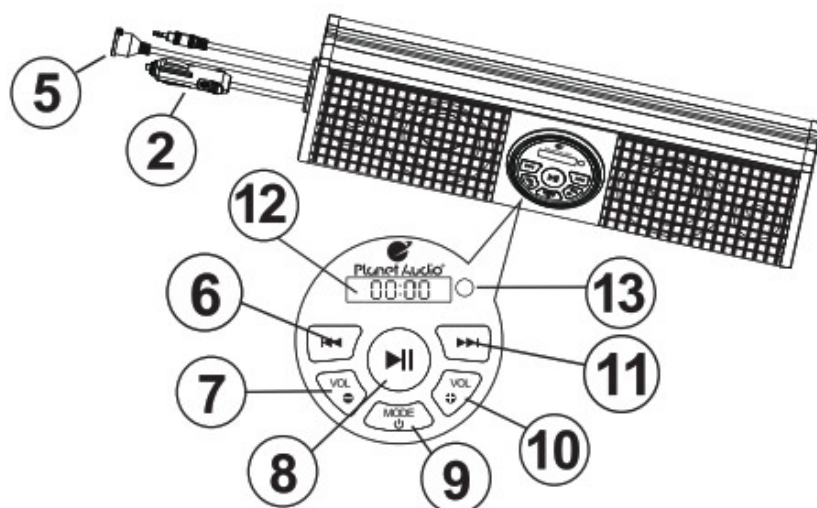

USB IN OPERATION


1. Power on the PSX18 by plugging in the male cigarette lighter adaptor into **2** the female cigarette lighter receptacle.
2. Press the button. **9** The PSX18 will automatically go into the arbitrary pattern
3. Insert the USB Flash drive on **5** and play the music automatically.
4. Press the **8** PLAY/PAUSE once to start playing music or pause
5. To skip songs or advance, press the **11** NEXT TRACK button
6. To select the previous song, press the **6** PREVIOUS TRACK button
7. To raise the volume press the **10** VOLUME UP button or use your device's controls
8. To lower the volume press the **7** VOLUME DOWN button or use your device's controls

 Remote Control

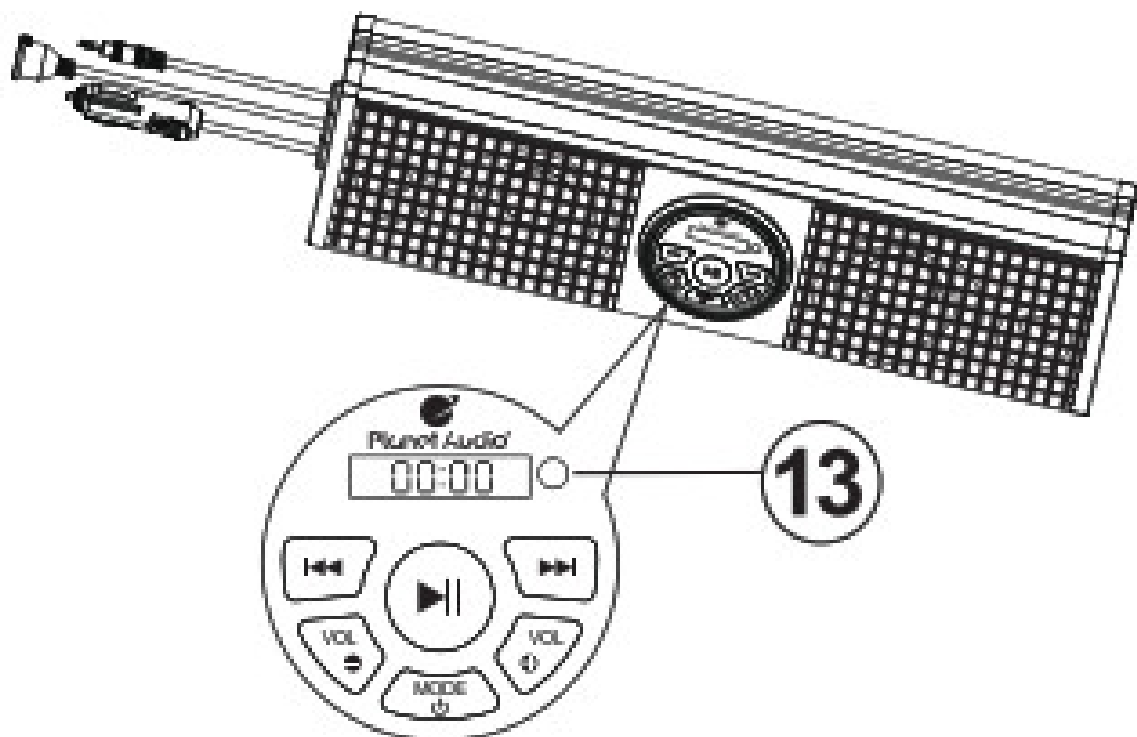

Remote Control operation

 
1. Remote Control Receiver window 13

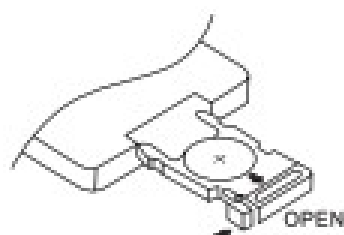

REPLACEMENT BATTERY - CR2025

Installation

 1.

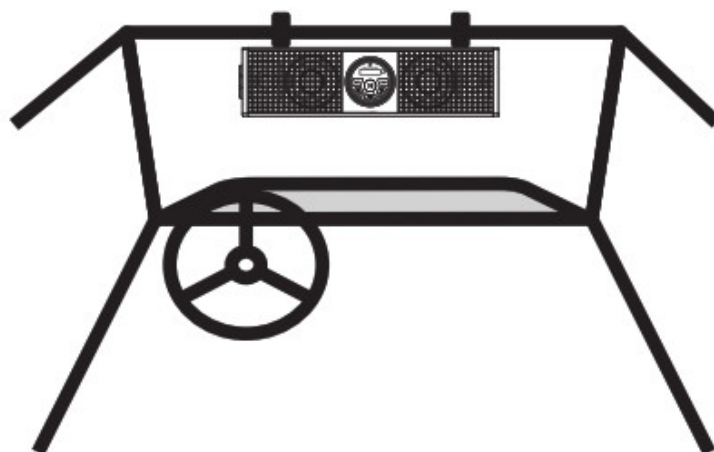

use the supplied adjustable bracket to secure to rails.

2. always recheck bracket before everyride

Troubleshooting

<i>TROUBLE</i>	<i>CAUSE</i>	<i>SOLUTION</i>
Unit will not turn on	The fuse is blown	Check / replace the fuse
	Main acc switch not engaged	Turn switch to on position
No sound is heard	Device volume is low / muted	Turn the volume level up
	Device is paused or muted	Check your devices playing / volume status
Cannot pair Bluetooth	The Bluetooth function of the device is not enabled	Refer to the user manual of the device for how to enable the Bluetooth function
The audio quality is poor after connection with a Bluetooth enabled device	The Bluetooth reception is poor	Move the device closer to the audio system or remove any obstacle between the device
Unit has become unresponsive	Power glitch or interference	Disconnect power for 10 seconds to reset

 
SUPPORT

For the latest information about this product please visit www.planetaudio.com


TECH SUPPORT:805-751-4854

www.planetaudio.com/customer-support

Dimensions

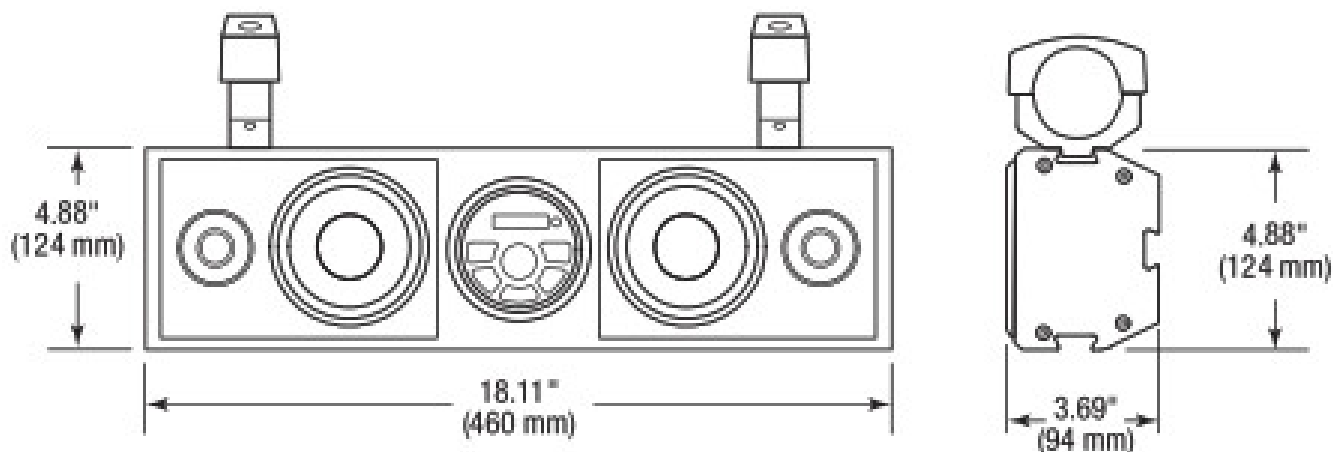

Wire Diagram

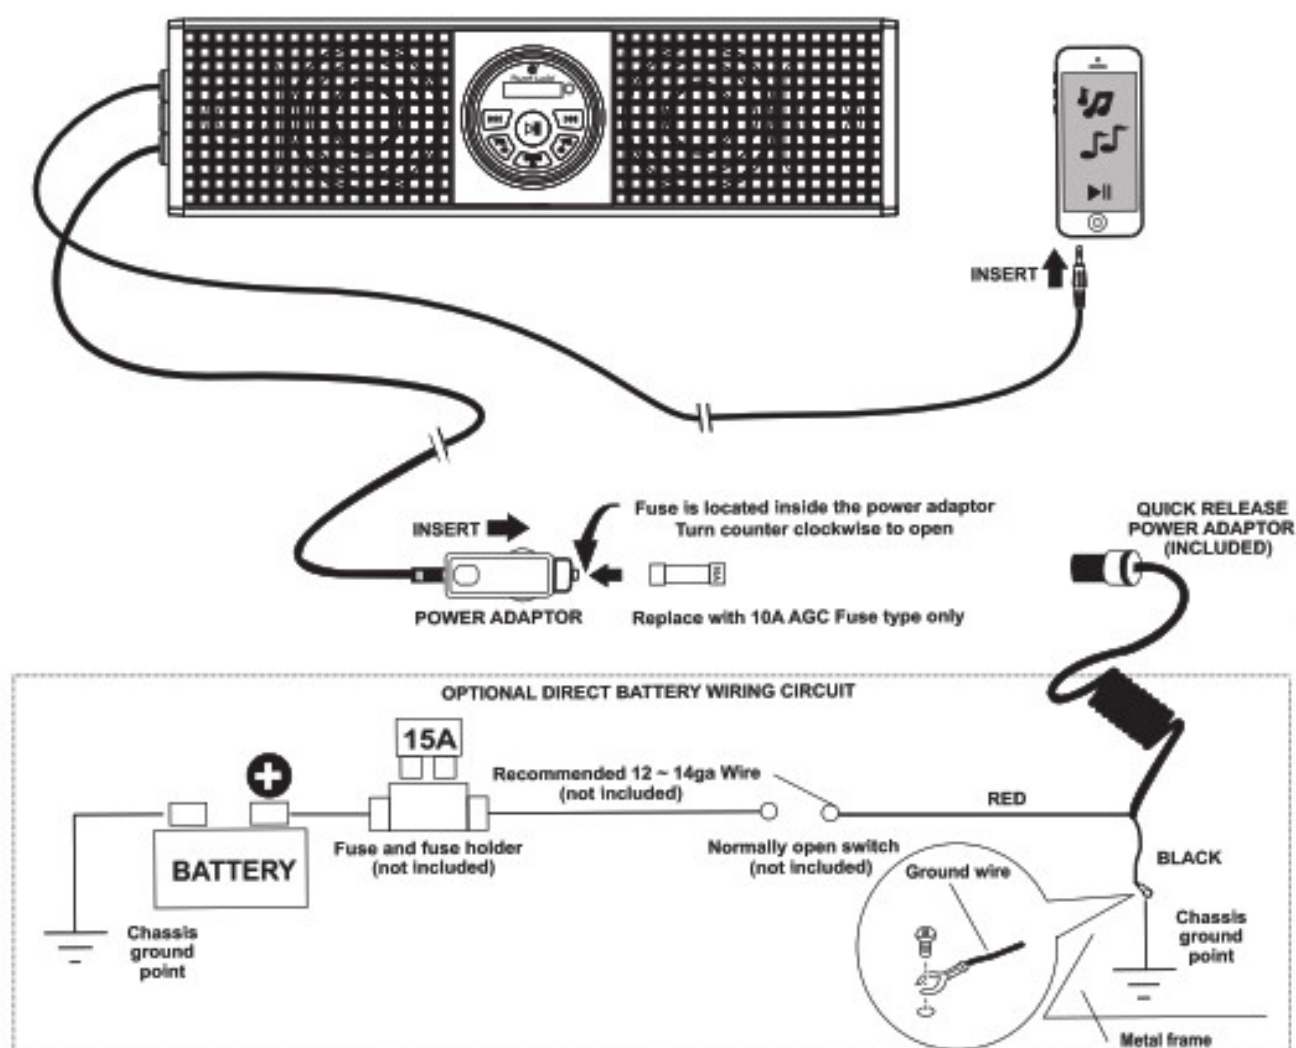 

Specifications

BLUETOOTH

- Version: 5.0w/ EDR
- A2DP

- Range:331610m)**AMPLIFIER**
- Madman Output Paver 500 Watts
- Fresno Response: 451*-22kHz

SPEAKERS

- Dinensions: (2)4/101.9ran
- Tweeter Size: (2) sot Dune


GENERAL

- Operations Power 12VDC (10-16V £1110wable)
- MAX Current Draw 6A
- Replacement Fuse: 10A AGC TYPE
- Color: Black
- Weight: 10.51ln 4.8Kg
- DIMensionS mm WxHxD: 460x124x94
- Dimensions Inches WxHxD: 18.11 x 4.88 x3.69

SPECIFIC VOHS SUBJECT MANGE WHO’ NOTICE



Documents / Resources

	Planet Audio PSX18 All-Terrain Sound System [pdf] User Manual Planet Audio, PSX18, All-Terrain Sound System
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------

References

-  [Home - Planet Audio](#)