

Planet Technology VTS-700WP SIP Indoor Touch Screen PoE Video Intercom Installation Guide

Home » Planet Technology » Planet Technology VTS-700WP SIP Indoor Touch Screen PoE Video Intercom Installation Guide ™



7-inch SIP Indoor Touch Screen PoE
Video Intercom with Built-in Wi-Fi
VTS-700WP
Quick Installation Guide


Contents

- 1 Package Contents
- **2 Physical Specifications**
- **3 Product Appearance Descriptions**
- 4 Wall-mount Installation
- 5 Search VTS-700WP and Web
- **6 Customer Support**
- 7 Documents / Resources
- 7.1 References

Package Contents

Thank you for purchasing PLANET SIP Indoor Touch Screen PoE Video Intercom, VTS-700WP.

Open the box of the SIP Indoor Touch Screen PoE Video Intercom and carefully unpack it. The box should contain the following items:

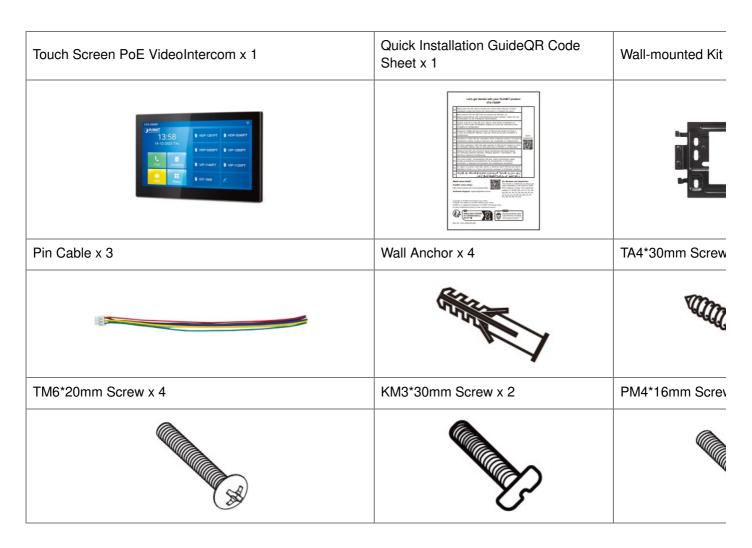


If any item is found missing or damaged, please contact your local reseller for replacement.

Physical Specifications


Model	Dimensions
VTS-700WP	177.38 x 113.99 x 22.5 (mm)

2.1 Wall-mounted Kit Specifications

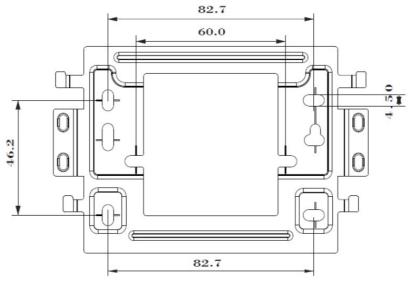


Product Appearance Descriptions

3.1 Panel

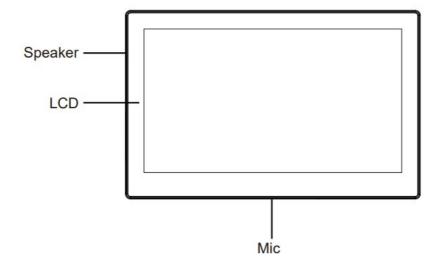

3.2 Interface

There are some interfaces on the back of the device for connecting power supply, alarm, etc. The connections are as follows:

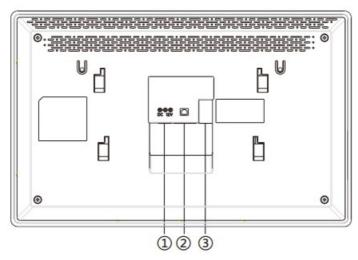

No.	Description	Interface
1	Power interface: 12V/1A input	\odot
2	10/100M adaptive RJ45 interface (It is recommended to use CAT5 or CAT5e network cable.)	
3-1	12V/1A input	○ GND ○ 12V
3-2	1 doorbell interface	ODB_IN1
3-3	3 short-circuit output interfaces can be connected to electric locks, alarm, etc.	ONC1 O COM1 O NO1
3-4	8 alarm input interfaces for connecting switches, infrared sensor, door sensor, vibration sensors, etc.	OALM_IN_1 OALM_IN_2 OALM_IN_3 OALM_IN_4 OALM_IN_5 OALM_IN_6 OALM_IN_7 OALM_IN_8
3-5	2 RS485 interfaces connected to card reader, sensor, etc. (Reserved for futur e use)	O485_B O485_A


3.3 External Device Connection Diagram



Wall-mount Installation


Step 1. Install wall bracket Without embedded box in the wall

- 1. Mark four fixation holes on the wall with the wall bracket
- 2. Remove the bracket, drill the four fixation holes on the wall, and insert the four wall anchors provided
- 3. Tighten the wall bracket on the wall with the four TA4*30mm screws

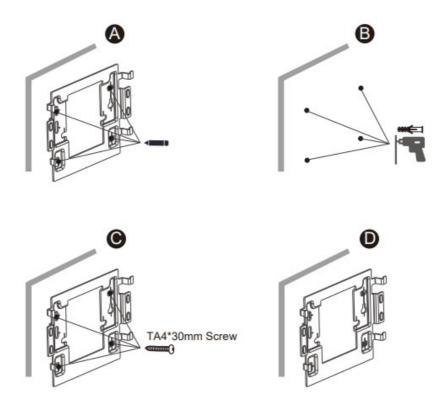

With 86 embedded box in the wall


A. Fix the wall bracket on the 86 embedded box with the two PM4*16mm screws

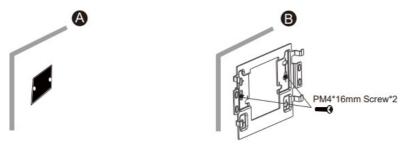

Step 2. Connect peripherals

If you need to connect other input and output devices, please connect to the host through the cable **Step 3.** Power on the device


If the powered device is working properly, align the slot with the rear side of the panel with the pin on the wall bracket and slide the host down to complete the installation.

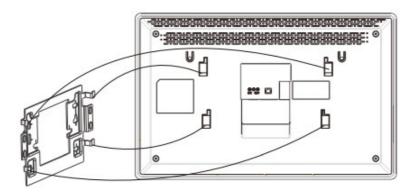

Search VTS-700WP and Web Login

5.1 Search VTS-700WP

Open the Planet SmartDiscoveryLite Utility. Press the Refresh button to search the VTS-700WP and find the IP address.

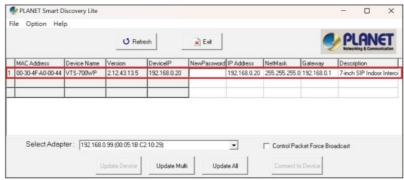

5.2 Starting Web Management and IP Indoor Unit Setting

Step 1: Log in the web setting page of Indoor Unit

Enter the IP address of indoor unit (e.g., https://192.168.0.20) in the address bar using the https method of your PC's web browser.

The default user name and password are both admin



After logging in, you will be required to change the password. The length of the password should not be less than 8 digits and should include numbers, uppercase letters, lowercase letters and special characters. Please create a new password and log in again.

Step 2: Add the SIP account.

Set SIP server address, port, user name, password and SIP user with assigned SIP account parameters.

Select "Activate", and then click Apply to save this setting.



Step 3: Unlock Setting

Application → Door phone Settings Add OK.

Title: Door Phone mode

Number: The SIP account of DoorPhone

Line: The SIP line of Indoor Unit

Access Codec: Consistent with the access code in door phone access table

Password: Same as the doorphone's password



5.3 Local Operation

1. Answer/hang up calls

When the door phone calls the indoor unit, click the button to answer the call, and click the button to hang up the call.

2. Unlock the door

During the call of indoor unit and door phone, click the 💶 button to unlock the door.

3. Volume adjustment

When the indoor unit is talking to other devices like door phone, click the button to increase the volume, and click the button to decrease the volume.

Customer Support

Thank you for purchasing PLANET products. You can browse our online FAQs resource and User's Manual on PLANET Web site first to check if it could solve your issue. If you need more support information, please contact PLANET VoIP support team.

PLANET online FAQs: http://www.planet.com.tw/en/support/faq PLANET VoIP team mail address: support_voip@planet.com.tw

VTS-700WP User's Manual: https://www.planet.com.tw/en/support/downloads?

&method=keyword&keyword=VTS-700WP&view=3#list



Copyright © PLANET Technology Corp. 2024.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp.

All other trademarks belong to their respective owners.



Documents / Resources

7-inch SIP Indoor Touch Screen Poli Video Intercom with Built in WiFi <u>Planet Technology VTS-700WP SIP Indoor Touch Screen PoE Video Intercom</u> [pdf] Installat ion Guide

VTS-700WP SIP Indoor Touch Screen PoE Video Intercom, VTS-700WP, SIP Indoor Touch Screen PoE Video Intercom, Indoor Touch Screen PoE Video Intercom, Touch Screen PoE Video Intercom, Screen PoE Video Intercom, PoE Video Intercom, Video Intercom, Intercom

References

- FAQ PLANET Technology
- Downloads Support PLANET Technology
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.