

**PLANET IGS-5225-4T2S Multi Port Full Gigabit Managed Ethernet Switch**



# PLANET IGS-5225-4T2S Multi Port Full Gigabit Managed Ethernet Switch Installation Guide

[Home](#) » [PLANET](#) » PLANET IGS-5225-4T2S Multi Port Full Gigabit Managed Ethernet Switch Installation Guide



## Contents

- [1 PLANET IGS-5225-4T2S Multi Port Full Gigabit Managed Ethernet Switch](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Package Contents](#)
- [6 Requirements](#)
- [7 Wiring the Power Inputs](#)
- [8 Terminal Setup](#)
- [9 Starting Web Management](#)
- [10 Recovering Back to Default Configuration](#)
- [11 Customer Support](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)



**PLANET IGS-5225-4T2S Multi Port Full Gigabit Managed Ethernet Switch**



## Product Information

### Specifications:

- Model: IGS-5225 Series
- Port Types:
  - GbE Copper Ports: 4, 5, 8, 10
  - PoE Ports: 4, 8
  - GbE SFP Ports: 2, 2.5
- Power Input: Varies by model
- Compatible with: 802.3at/af PoE, 1000BASE-SX/LX/BX SFP transceiver

## Product Usage Instructions

### 1. Package Contents

Upon purchasing the PLANET L2+ Industrial Managed Switch, ensure that the package contains the following items based on the specific model:

- Industrial Managed Switch
- Quick Installation Guide Sheet
- Wall Mounting Kit
- DB9 to RJ45, RS232 Console Cable
- RJ45 Dust Cap
- SFP Dust Cap

## 2. Requirements

Before setting up the Industrial Managed Switch, ensure you have the following equipment:

- Workstations running compatible operating systems with TCP/IP Protocols
- Workstations with Ethernet NIC
- Serial Port Connection with terminal emulator software
- Network cables with RJ45 connectors
- Web browser (Google Chrome, Microsoft Edge, or Firefox)

If facing accessibility issues, try turning off anti-virus software or firewall.

## 3. Wiring the Power Inputs

Follow the instructions in the manual to wire the power inputs of the Industrial Managed Switch according to the specific model you have.

## 4. Terminal Setup

Set up the terminal connection between your workstation and the Industrial Managed Switch using the provided cables and accessories. Ensure proper grounding as per guidelines.

## FAQ

- **Q: What should I do if any items are missing or damaged from the package?**
  - A: Contact your dealer immediately. Retain the original packing materials for possible product return.
- **Q: Which web browsers are recommended for accessing the Industrial Managed Switch?**
  - A: It is recommended to use Google Chrome, Microsoft Edge, or Firefox for accessing the switch's web interface. If facing issues, try disabling anti-virus software or firewall.

Industrial L2+ Multi-Port Full Gigabit

## Managed Ethernet Switch

- IGS-5225-4T2S/IGS-5225-4P2S/IGS-5225-4UP1T2S
- IGS-5225-8P4S/IGS-5225-8P4S-12V/IGS-5225-8P2T2S
- IGS-5225-8P2T4S

Quick Installation Guide

## Package Contents

Thank you for purchasing PLANET L2+ Industrial Managed Switch, IGS-5225 Series. The number of the ports of these models is as follows:

	GbE Copper Ports	PoE Ports		GbE SFP Ports	
		at/af	bt*	1G	2.5G*
IGS-5225-4T2S	4	-	-	-	2
IGS-5225-4P2S	4	4	-	-	2
IGS-5225-4UP1T2S	5	-	4	-	2
IGS-5225-8P4S	8	8	-	2	2
IGS-5225-8P4S-12V	8	8	-	2	2
IGS-5225-8P2T2S	10	8	-	-	2
IGS-5225-8P2T4S	10	8	-	2	2

- bt: Compatible with 802.3at/af PoE
- 2.5G: Compatible with 1000BASE-SX/LX/BX SFP transceiver “Industrial Managed Switch” mentioned in this Quick Installation Guide refers to the above models

Open the box of the Industrial Managed Switch and carefully unpack it. The box should contain the following items for each model of the Industrial Managed Switches:

	The Industrial Managed Switch	Quick Installation Guide Sheet	Wall Mounting Kit	DB9 to RJ45, RS232 Console Cable	RJ45 Dust Cap	SFP Dust Cap
IGS-5225-4T2S	■	■	■	■	5	2
IGS-5225-4P2S	■	■	■	■	5	2
IGS-5225-4UP1T2S	■	■	■	■	6	2
IGS-5225-8P4S	■	■	■	■	9	4
IGS-5225-8P4S-12V	■	■	■	■	9	4
IGS-5225-8P2T2S	■	■	■	■	11	2
IGS-5225-8P2T4S	■	■	■	■	11	4

If any of these are missing or damaged, please contact your dealer immediately. If possible, retain the carton including the original packing materials to enable you to repack the product in case there is a need to return it to us for repair.

## Requirements

The Industrial Managed Switch provides a remote login interface for management purposes. The following equipment is necessary for further management:

- Workstations running Windows 7/8/10/11, mac OS 10.12 or later, Linux
- Kernel 2.6.18 or later, or other modern operating systems are compatible with TCP/IP Protocols.
- Workstations are installed with Ethernet NIC (Network Interface Card).
- Serial Port Connection (Terminal)
  - The above Workstations come with COM Port (DB9) or USB-to-RS232 converter.
  - The above Workstations have been installed with terminal emulators, such as putty or tera term.
  - Serial cable — one end is attached to the RS232 serial port, while the other end to the console port of the Industrial Managed Switch.
- Ethernet Port Connection
  - Network cables — Use standard network (UTP) cables with RJ45 connectors.

- The above PC is installed with Web browser

## Note

It is recommended to use Google Chrome, Microsoft Edge or Firefox to access the Industrial Managed Switch. If the Web interface of the Industrial Managed Switch is not accessible, please turn off the anti-virus software or firewall and then try it again.

## Wiring the Power Inputs

The Upper Panel of the Industrial Managed Switch comes with one 6-contact terminal block. Please follow the steps below to insert the power wire.

1. Insert positive/negative DC power wires into Contacts 1 and 2 for Power 1, or Contacts 5 and 6 for Power 2.

- **IGS-5225-8P4S/IGS-5225-8P2T2S/IGS-5225-8P2T4S: DC 48~54V**

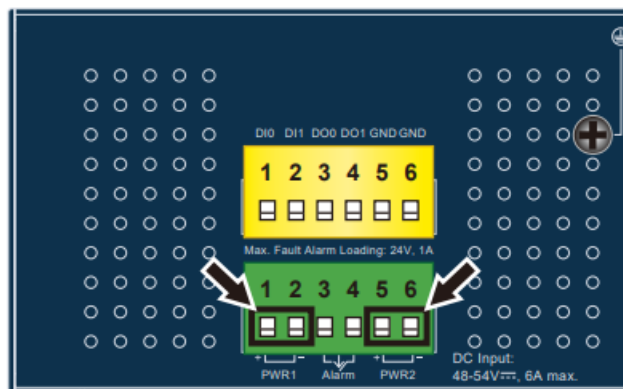


Figure 3-1: IGS-5225-8P4S/IGS-5225-8P2T2S/IGS-5225-8P2T4S Upper Panel

- **IGS-5225-4UP1T2S: DC 48~54V**

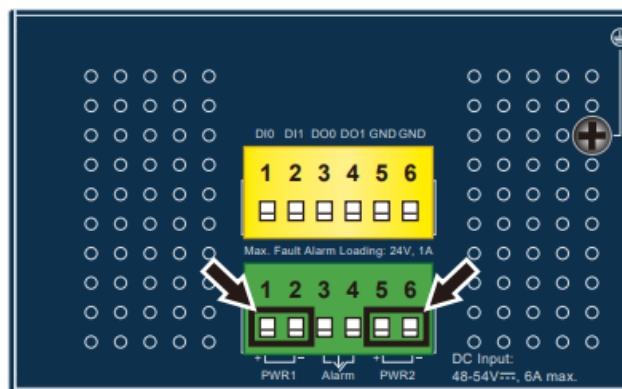


Figure 3-1: IGS-5225-8P4S/IGS-5225-8P2T2S/IGS-5225-8P2T4S Upper Panel

- **IGS-5225-4T2S: DC 12~48V, AC 24V**


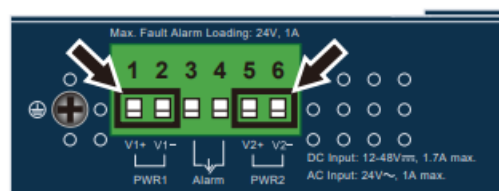



Figure 3-3: IGS-5225-4T2S Upper Panel

- **IGS-5225-4P2S: DC 48~54V**

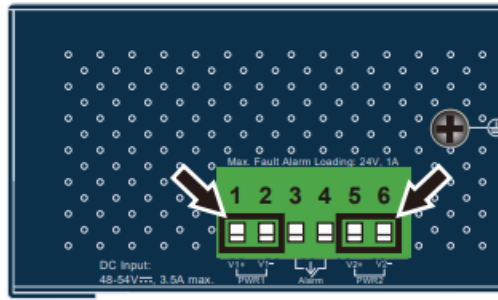


**Figure 3-4:** IGS-5225-4P2S Upper Panel

- IGS-5225-8P4S-12V: DC 12~54V

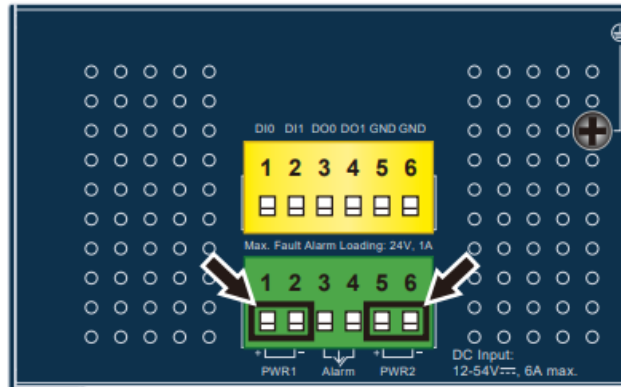

**Figure 3-5:** IGS-5225-8P4S-12V Upper Panel

2. Tighten the wire-clamp screws for preventing the wires from loosening.

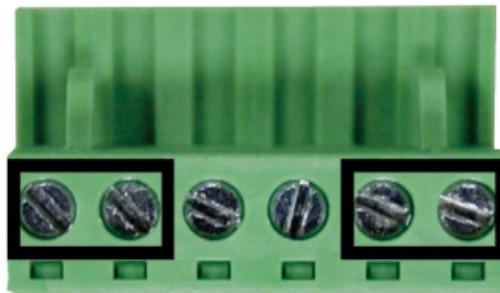

1 2 3 4 5 6  
V+ V- V+ V-  
Power 1 Power 2

	Positive (+) Pin	Negative (-) Pin
IGS-5225 Series	Pin 1/5	Pin 2/6

#### Note


1. The wire gauge for the terminal block should be in the range from 12 to 24 AWG.
2. Please check the wire AWG Ampere specification before connecting PLANET Industrial Managed Switch.

#### Caution

PWR1 and PWR2 must provide the same DC voltage for power load balance while operating with dual power input.

## Grounding the Device

Users MUST complete grounding wired with the device; otherwise, sudden lightning could cause fatal damage to the device.

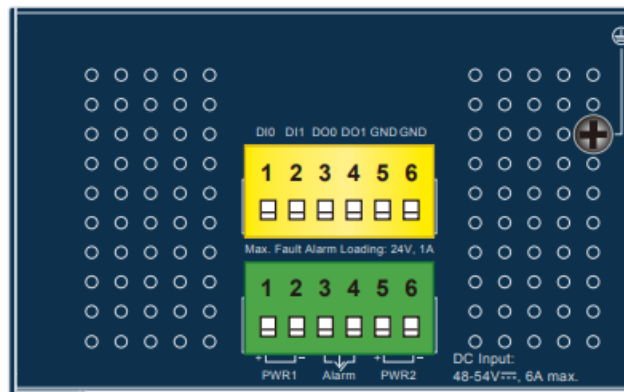


### Note

EMD (Lightning) damage is not covered under warranty

## Terminal Setup

To configure the system, connect a serial cable to a COM port on a PC or notebook computer and to RJ45 type serial (console) port of the Industrial Managed Switch. The console port of the Industrial Managed Switch is DCE already, so that you can connect the console port directly through PC without the need of null modem.


### IGS Industrial Managed Switch

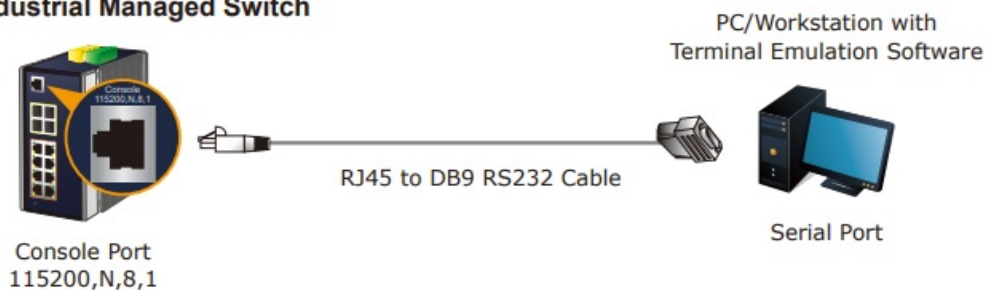

A terminal program is required to make the software connected to the IGS-5225 series Industrial Managed Switch.

1. Run the terminal program on the OS.
2. When the following screen appears, make sure that the COM port should be configured as:

- Baud: 115200
- Parity: None
- Data bits: 8
- Stop bits: 1
- Flow control: None

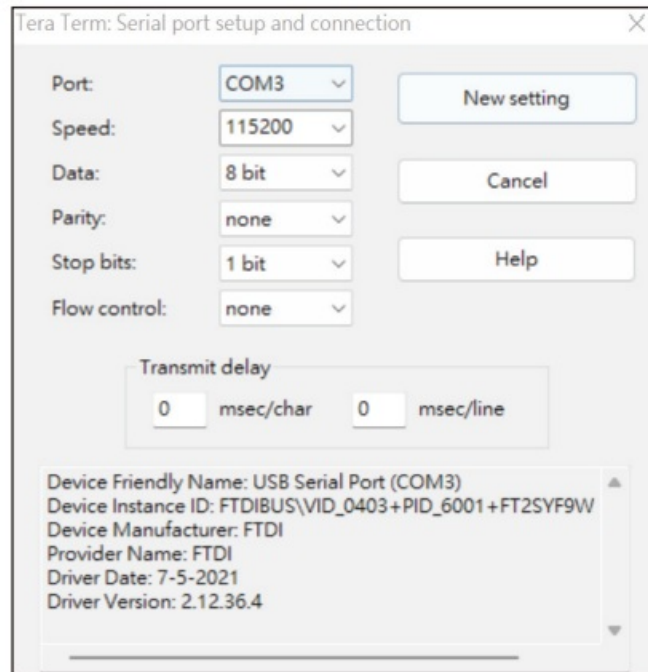

## Logging on to the Console

Once the terminal has been connected to the device, power on the Industrial Managed Switch and the terminal will display “running testing procedures”.

### Note

The following console screen is based on the IGS-5225-4P2S. The display of the other IGS-5225 series is the same as that of the IGS-5225-4P2S.

Then, the following message asks to log in user name and password. The default user name and password are shown as follows and the login screens in Figure 4-1 & Figure 4-3 appears.

### Note

The following console screen is based on the firmware version dated before February of 2024.

Username: **admin**

Password: **admin**

```
Now booting linux kernel:
Base address 0x80080000 Entry 0x80100000
Cmdline : init=/usr/bin/stage2-loader loglevel=4
Active fis: linux
[ 0.371610] mx35 spi0.3: NAND Flash Disable (Caracal)
00:00:00 Stage 1 booted
00:00:01 Loading stage2 from NOR flash partition 'linux'
00:00:10 Overall: 9792 ms, ubifs = 530 ms, rootfs 9236 ms of which xz = 0 ms of
which untar = 0 ms
00:00:21 Starting application...
Using existing mount point for /switch/

Press ENTER to get started

Username: █
```

**Figure 4-1:** Console Login Screen

#### Note


1. For security reasons, please change and memorize the new password after this first setup.
2. Only accept commands in the lowercase letters under the console interface.

#### Note

The following console screen is based on the firmware version dated February of 2024 or after

- Username: admin
- Password: sw + the last 6 characters of the MAC ID in lowercase

Find the MAC ID on your device label. The default password is “sw” or “mc” followed by the last six lowercase characters of the MAC ID.

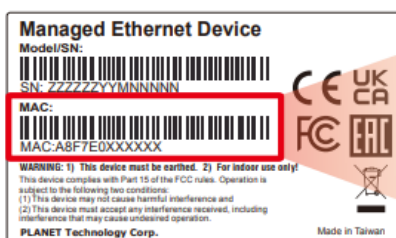

MAC ID: A8F7E0XXXXXX

Default Password: swxxxxxx

("x" means the last 6 digits of the MAC address.  
All characters should be in lowercase.)

**Figure 4-2:** Industrial Managed Switch MAC ID Label

Enter the default username and password, then set a new password according to the rule-based prompt and confirm it. Upon success, press any key to return to the login prompt. Log in with “admin” and the “new password” to access the CLI

```

Username: admin
Password:

You are required to change and store a new password to be able to
get into the switch.
Please store your new password in a safe, retrievable place for sa
fe keeping.
Once configured, also store a copy of your Config File in a safe,
retrievable place for safe keeping.
Password: The password must contain 8-31 characters, including upp
er case, lower case, numerals, and other symbols. Please note, spac
es (blanks) are not accepted.

(New)Password:
Verify (New)Password:
The password is set successfully.

Press ENTER to get started

Username: admin
Password:
IGS-5225-4P2S#

```

**Figure 4-3: Create a New Password and Login Again**

The user can now enter commands to manage the Industrial Managed Switch. For a detailed description of the commands, please refer to the following chapters.

### Configuring IP address

The Industrial Managed Switch is shipped with the default IP address shown below:

- IP Address: 192.168.0.100
- Subnet Mask: 255.255.255.0

To check the current IP address or modify a new IP address for the Switch, please use the procedure as follows:

### Display of the current IP Address

1. At the “#” prompt, enter “show ip interface brief”.
2. The screen displays the current IP address shown in Figure 4-4.

```

IGS-5225-4P2S# show ip interface brief
Interface Address                Method Status
-----
VLAN 1    192.168.0.100/24    Manual DOWN
IGS-5225-4P2S#

```

**Figure 4-4: IP Information Screen**

### Configuration of the IP Address

3. At the “#” prompt, enter the following command and press <Enter> as shown in Figure 4-5.
  - IGS-5225-4P2S# configure terminal

- IGS-5225-4P2S(config)# interface vlan 1
- IGS-5225-4P2S(config-if-vlan)# ip address 192.168.1.100 255.255.255.0

The previous command would apply the following settings for the Industrial Managed Switch.

IP Address: **192.168.1.100**  
Subnet Mask: **255.255.255.0**

```
Press ENTER to get started
Username: admin
Password:
IGS-5225-4P2S# configure terminal
IGS-5225-4P2S(config)# interface vlan 1
IGS-5225-4P2S(config-if-vlan)# ip address 192.168.1.100 255.255.255.0
IGS-5225-4P2S(config-if-vlan)#
```

**Figure 4-5: Configuring IP Address Screen**

- Repeat step 1 to check if the IP address has changed.
  - Store the current switch configuration
- At the “#” prompt, enter the following command and press <Enter>.

**# copy running-config startup-config**

```
Press ENTER to get started
Username: admin
Password:
IGS-5225-4P2S# configure terminal
IGS-5225-4P2S(config)# interface vlan 1
IGS-5225-4P2S(config-if-vlan)# ip address 192.168.1.100 255.255.255.0
IGS-5225-4P2S(config-if-vlan)# exit
IGS-5225-4P2S(config)# exit
IGS-5225-4P2S# copy running-config startup-config
Building configuration...
% Saving 2736 bytes to flash:startup-config
IGS-5225-4P2S#
```

**Figure 4-6: Saving Current Configuration Command Screen**

If the IP is successfully configured, the Industrial Managed Switch will apply the new IP address setting immediately. You can access the Web interface of the Industrial Managed Switch through the new IP address.


#### Note

If you are not familiar with the console command or the related parameter, enter “help” anytime in console to get the help description

#### Starting Web Management

The following shows how to start up the Web Management of the Industrial Managed Switch. Note the Industrial

Managed Switch is configured through an Ethernet connection. Please make sure the manager PC must be set to the same IP subnet address. For example, the default IP address of the Industrial Managed Switch is 192.168.0.100, then the manager PC should be set to 192.168.0.x (where x is a number between 1 and 254, except 100), and the default subnet mask is 255.255.255.0.

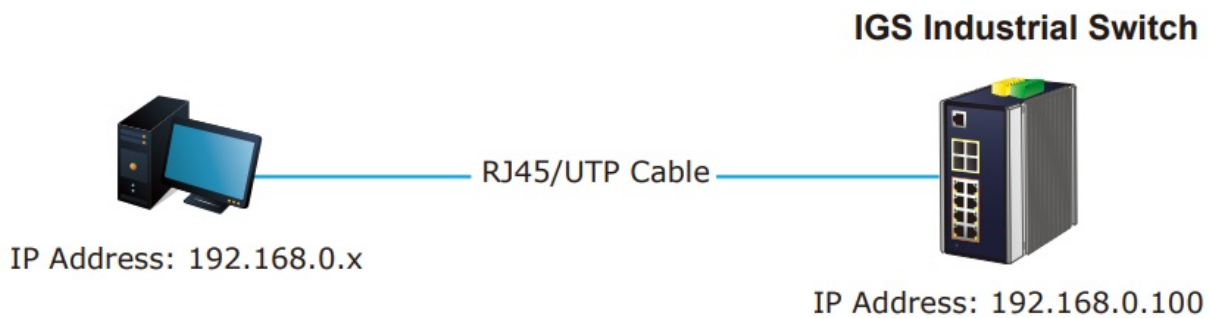

**Figure 5-1: IP Management Diagram**

### Logging in to the Industrial Managed Switch

1. Use a modern Web browser and enter IP address <https://192.168.0.100> (the factory-default IP address) to access the Web interface.

#### **Note**

The following web screen is based on the firmware version dated before February of 2024.

2. When the following dialog box appears, please enter the default user name “admin” and password “admin” (or the password you have changed before) as shown in Figure 5-2.
3. After entering the password, the main screen appears as shown in Figure 5-4.
  - Default IP Address: 192.168.0.100
  - Default User Name: admin
  - Default Password: admin

#### **Note**

The following web screen is based on the firmware version dated February of 2024 or after.

4. When the following dialog box appears, please enter the default user name “admin” and and password. Refer to Section 4.1 to determine your initial login password
  - Default IP Address: 192.168.0.100
  - Default User Name: admin
  - Default Password: sw + the last 6 characters of the MAC ID in lowercase

**Authentication required**

https://192.168.0.100

Your connection to this site is not private

Username

Password

**Log in** **Cancel**

**Figure 5-2: Login Screen**

- After logging in, you will be prompted to change the initial password to a permanent one.

**Change Password**

New Password	
Password	<input type="password"/> <input type="checkbox"/> show password
Retype Password	<input type="password"/>

**Apply** **Reset**

The password must contain 8-31 characters, including upper case, lower case, numerals and other symbols. Please note, spaces (blanks) are not accepted.

**Figure 5-3: Create a New Password**

- Once the password change is complete, re-enter the web interface using your new password and the main screen appears as Figure 5-4 shows.



**Figure 5-4: Web Main Screen of Industrial Managed Switch**

The Industrial Managed Switch Menu on the top left of the Web page lets you access all the functions and status the Industrial Managed Switch provides. The Switch Menu always contains one or more buttons, such as “System”, “Switching”, “QoS”, “Security”, “PoE”, “Ring”, “ONVIF” and “Maintenance”.



**Figure 5-5: Switch Menu**

Now, you can use the Web management interface to continue the Switch management. Please refer to the user manual for more.

#### **Note**

If you are not familiar with Switch functions or the related parameter, press “Help icon” on the Web page to get the help description

#### **Saving Configuration via Web**


To save all applied changes and set the current configuration as a startup configuration, the startup-configuration file will be loaded automatically across a system reboot.

1. Click the Save icon on the top Switch Menu bar.




**Figure 5-6: Save Config -- Hot Key**

2. Press the “Save Configuration” button.

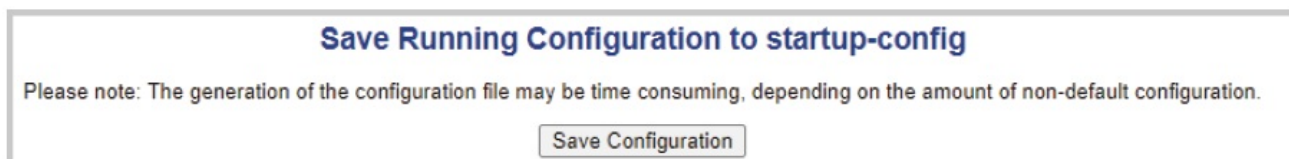


3. Or the other way to save the setting is to Click Maintenance, Save Startup Config.

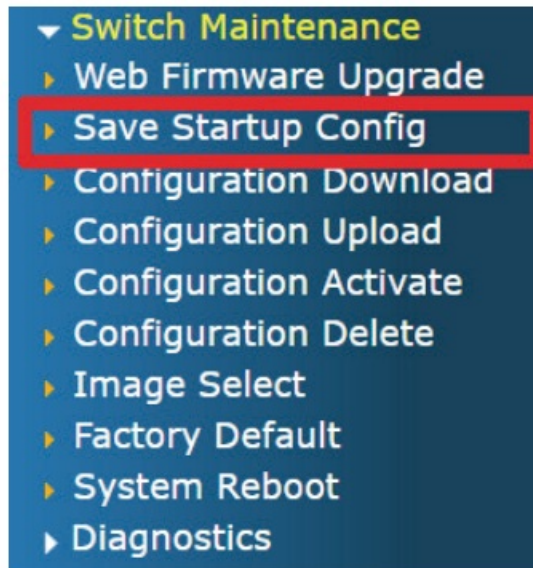


**Figure 5-7: Save Config – Maintenance**

### Recovering Back to Default Configuration


To reset the IP address to the default IP address “192.168.0.100” and the user hardware-based to factory default mode (default password is admin or sw + the last 6 characters of the MAC ID in lowercase), press the hardware-based reset button on the front panel for about 10 seconds. After the device is rebooted, you can log in the management Web interface within the same subnet of 192.168.0.xx and default password. Be noted that all the previous setups will be disappeared after the factory default reset is made

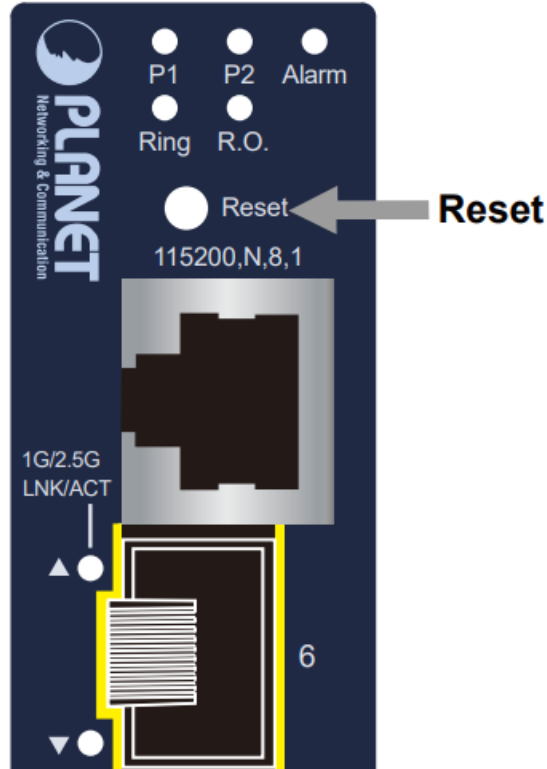


**Figure 6-1: IGS-5225-4T2S Reset Button**

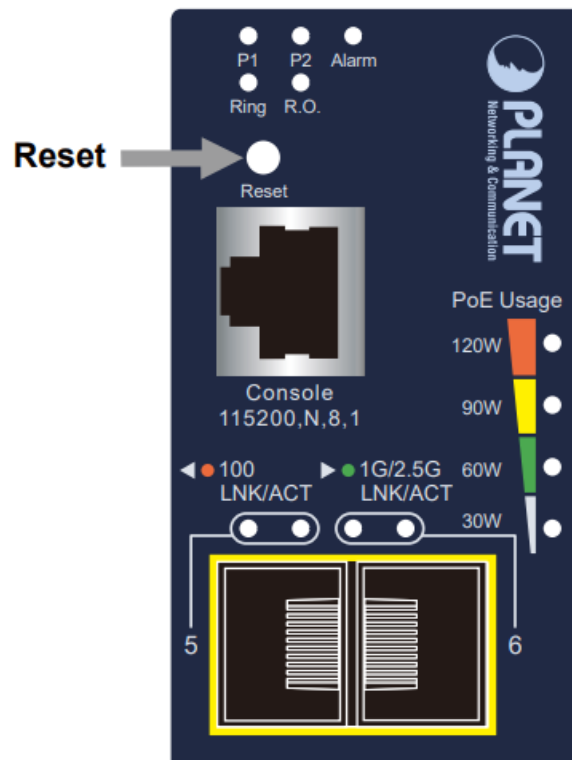

**Figure 6-2:** IGS-5225-4P2S Reset Button

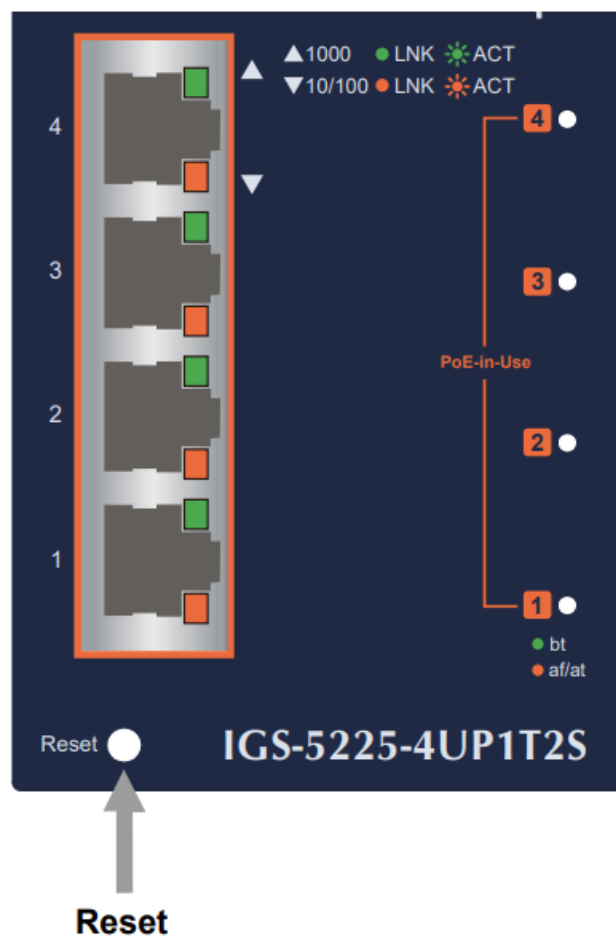

**Figure 6-3:** IGS-5225-4UP1T2S Reset Button

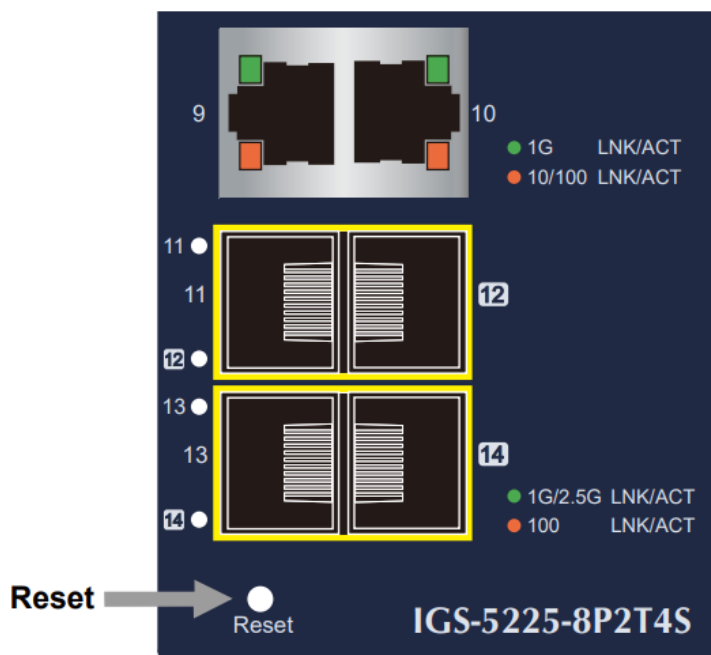

**Figure 6-4:** IGS-5225-8P4S/IGS-5225-8P4S-12V/IGS-5225-8P2T2S/IGS-5225-8P2T4S  
Reset Button

## Customer Support

Thank you for purchasing PLANET products. You can browse our online FAQ resource on PLANET web site first to check if it could solve your issue. If you need more support information, please contact PLANET switch support team.

### PLANET online FAQs:

- <https://www.planet.com.tw/en/support/faq>
- Switch support team mail address:
- [support@planet.com.tw](mailto:support@planet.com.tw)
- IGS-5225-4T2S/IGS-5225-4P2S/IGS-5225-8P2T4S/IGS-5225-8P4S/IGS-5225- 8P4S-12V/IGS-5225-8P2T2S/IGS-5225-4UP1T2S User's Manual:
- <https://www.planet.com.tw/en/support/downloads?&method=keyword&keyword=IGS-5225&view=3#list>



(Please select your switch model name from the Product Model drop-down menu)

<div><div>Industrial 12-1680-Port Full Gigabit Managed Ethernet Switch</div><div>IGS-5225-4T2S-6S-5225-4P2S-6S-5225-4P1T2S IGS-5225-8P4S-6S-5225-8P1S-12V6S-5225-8P1T2S IGS-5225-8P1S-6S Quick Installation Guide</div></div>	<div><div>PLANET IGS-5225-4T2S Multi Port Full Gigabit Managed Ethernet Switch</div><div>[pdf] Installation Guide</div><div>IGS-5225-4T2S Multi Port Full Gigabit Managed Ethernet Switch, IGS-5225-4T2S, Multi Port Full Gigabit Managed Ethernet Switch, Full Gigabit Managed Ethernet Switch, Managed Ethernet Switch, Ethernet Switch, Switch</div></div>
---	---

References

- [🌐 Downloads - Support - PLANET Technology](#)
- [🌐 FAQ - PLANET Technology](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.