



# PlayCool Master Pro Wireless Controller Instruction Manual

[Home](#) » [PlayCool](#) » PlayCool Master Pro Wireless Controller Instruction Manual 


## PlayCool Master Pro Wireless Controller Instruction Manual



### Contents

- [1 Key description](#)
- [2 Product description](#)
- [3 Instructions](#)
- [4 Specifications](#)
- [5 Programming function settings](#)
- [6 Gamepad power on/off/charge/sleep](#)
- [7 Reset the Gamepad](#)
- [8 Notes](#)
- [9 Service and Warranty](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)

### Key description

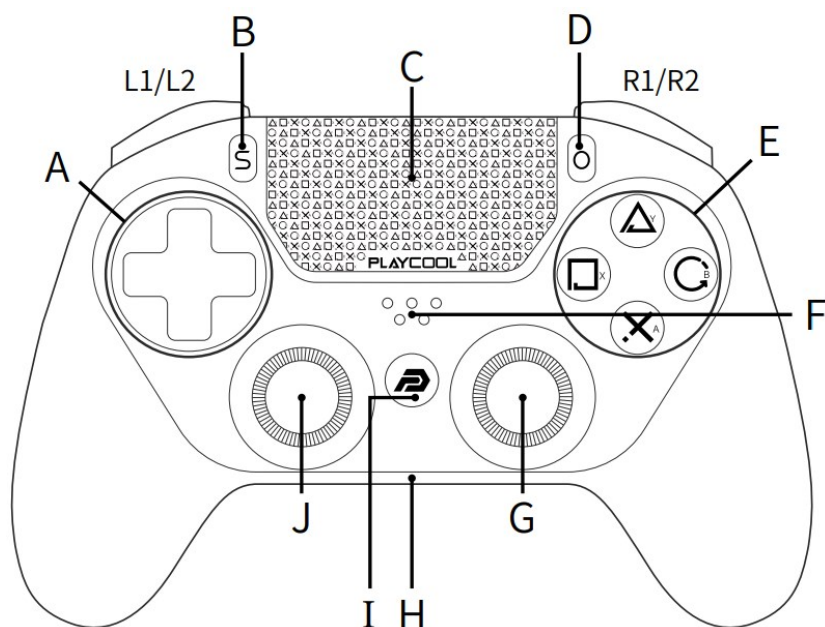

- **A)** Directional buttons
- **B)** SHARE button
- **C)** Touchpad button
- **D)** OPTIONS button
- **E)** button/ button/ button/ button
- **F)** Speaker
- **G)** Right stick/R3 button
- **H)** Stereo headset jack
- **I)** PS button
- **J)** Left stick/L3 button

## Product description

1. This product perfectly supports all versions of PS4 consoles and console games.
2. The Gamepad consists of 16 digital buttons ( Up, Down, Left, Right, L3, R3, Option, Share, P4, touch, L1, R1), two analog buttons (L2/ R2), two programming buttons (Fn=F1/F2) and two analog 3D joysticks.
3. The Gamepad supports touch function, six-axis control, audio headset, motor, RGB light display.
4. Connection methods: Pairing with console via type-C cable, Bluetooth wireless connection.

## Instructions

The first time you use the gamepad, or when you want to use the gamepad on another PS4 console, Use the Type-C cable to connect with the console. After about two seconds, the Gamepad is successfully paired with the console; and the next connection can be connected to the console automatically by pressing the P4 button.



To a Type-C port on the PS4 system. Type-C cable (supplied in the gift box).

#### **HINT:**

For details on using the gamepad, refer to the user's guide of the PS4 system.

### **Specifications**

- **Input power rating:** 5V 800 mA
- **Battery type:** Built-in rechargeable Lithium-Ion battery
- **Voltage:** 3.7 V
- **Battery capacity:** 1000 Mah
- **Operating temperature:** 0 °C – 40 °C (32 °F- 104 °F)
- **Bluetooth Version:** V 4.2

### **Programming function settings**

1. **Programming function setting:** F1 and F2 are the two rear programming buttons. The specific settings are as follows: When the Gamepad is connected, press and hold the combination key SHARE + Fn key for two seconds (Fn key can be any key of F1-2), it will enter programming mode, the channel light flashes quickly, at this time, press the programming button and function button to complete the programming, after the setting is completed, the channel light will be on for a long time (for example: after entering the programming mode, press the key, and then press the F1 key, the light will be on for a long time, then The function of F1 becomes the key); if no programming operation is performed in the programming mode, the programming mode will be exited after 10 seconds, the last programming function will be restored, and the channel light will be on.
2. **Clear programming button operation:** When the gamepad is in the Bluetooth online state, press and hold the key combination SHARE+Fn key for 5 seconds, the channel light flashes quickly, after 5 seconds the light stays on, the programming function is cleared at this time, and the Fn key restores the default function (F1=R1, F2 = L1).
3. **Programming button memory function:** After the Gamepad is programmed, the last programmed function is still retained after the shutdown and restart, and Fn initially defaults to(L1, R1).

4. **Programmable buttons are:** Up, Down, Left, Right, L3, R3, L1, R1, L2, R2

## **Gamepad power on/off/charge/sleep**

1. Pressing the P4 button on the Gamepad shortly , it will be turned on; Pressing the P4 button for 10 seconds, the Gamepad light will be turned off, then shut down, or log out of the Gamepad on the console side to shut down.
2. When the battery power of the Gamepad is low, the console will display the battery level as 0 and flashing; at this time, when charging through the Type-C cable, the console will display the charging progress bar, and three grids will be displayed when it is fully charged.
3. When the Gamepad is charged in the off state, the indicator light will display an orange breathing light, and it will be displayed cyclically. When it is fully charged, the light will go out.
4. When the Gamepad is turned on and re-connected to the console, if the connection is not successful for more than 1 minute, the Gamepad will automatically shut down.
5. When the Gamepad is online, you can set the shutdown time of the Gamepad through the console, usually 10 minutes/30 minutes/60 minutes/do not turn off the power

## **Reset the Gamepad**

When there is an abnormality in the Gamepad, such as disordered keys, crash, failure to connect, etc., you can try to restart it.

Reset method: Insert a slender object into the Reset hole on the back of the Gamepad, and press the Reset button to reset its state.

## **Notes**

1. Please do not store product in humid or high temperature places .
2. Do not knock, beat, puncture, or try to disassemble. Avoid unnecessary damage to the product.
3. The product will not be covered by after-sales warranty if the product has been disassembled by non-professionals.
4. If some games cannot be played because of official game platform software upgrades or source code changes we are not responsible


## **Service and Warranty**

If you need service or information regarding your product , please contact us at [contacta@elite-store.nl](mailto:contacta@elite-store.nl)

PlayCool provides a 1 year warranty on its products . The products needs to be returned with a proof of purchase and the defects need to be reported within one year from the date of purchase.This warranty does not cover :

- Damages caused by misuse or incorrect repair;
- Damages by wearable goods.
- Defects that the customer was aware of at the time of purchase.
- Damages or defects caused by costumer neglect.
- Damages or defects caused by third parties .

Documents / Resources

|   |  |
|---|--|
|  | <p><a href="#">PlayCool Master Pro Wireless Controller</a> [pdf] Instruction Manual</p> <p>Master Pro Wireless Controller fo PS4 PS4 Slim PS4 Pro PC PS3 Android iOS, Master Pro Wireless Controller for PS4, Master Pro Wireless Controller for PS4 Slim, Master Pro Wireless Controller for PS4 Pro, Master Pro Wireless Controller for PC, Master Pro Wireless Controller for PS3, Master Pro Wireless Controller for Android, Master Pro Wireless Controller for iOS, Master Pro Controller, Wireless Controller, Controller</p> |
|---|--|

References

-  [Coolblue - alles voor een glimlach](#)