



PLAYTEK 08810929 Remote Control Buggy Instruction Manual

 
[Home](#) » [PLAYTEK](#) » PLAYTEK 08810929 Remote Control Buggy Instruction Manual 



PLAYTEK


Class 1 LED Product

1. Remove the screw counterclockwise and slide the battery compartment door off.
2. Insert 3.1AA" (1.5V) batteries (not included) as illustrated.
3. Replace the battery compartment door and secure the screw clockwise.

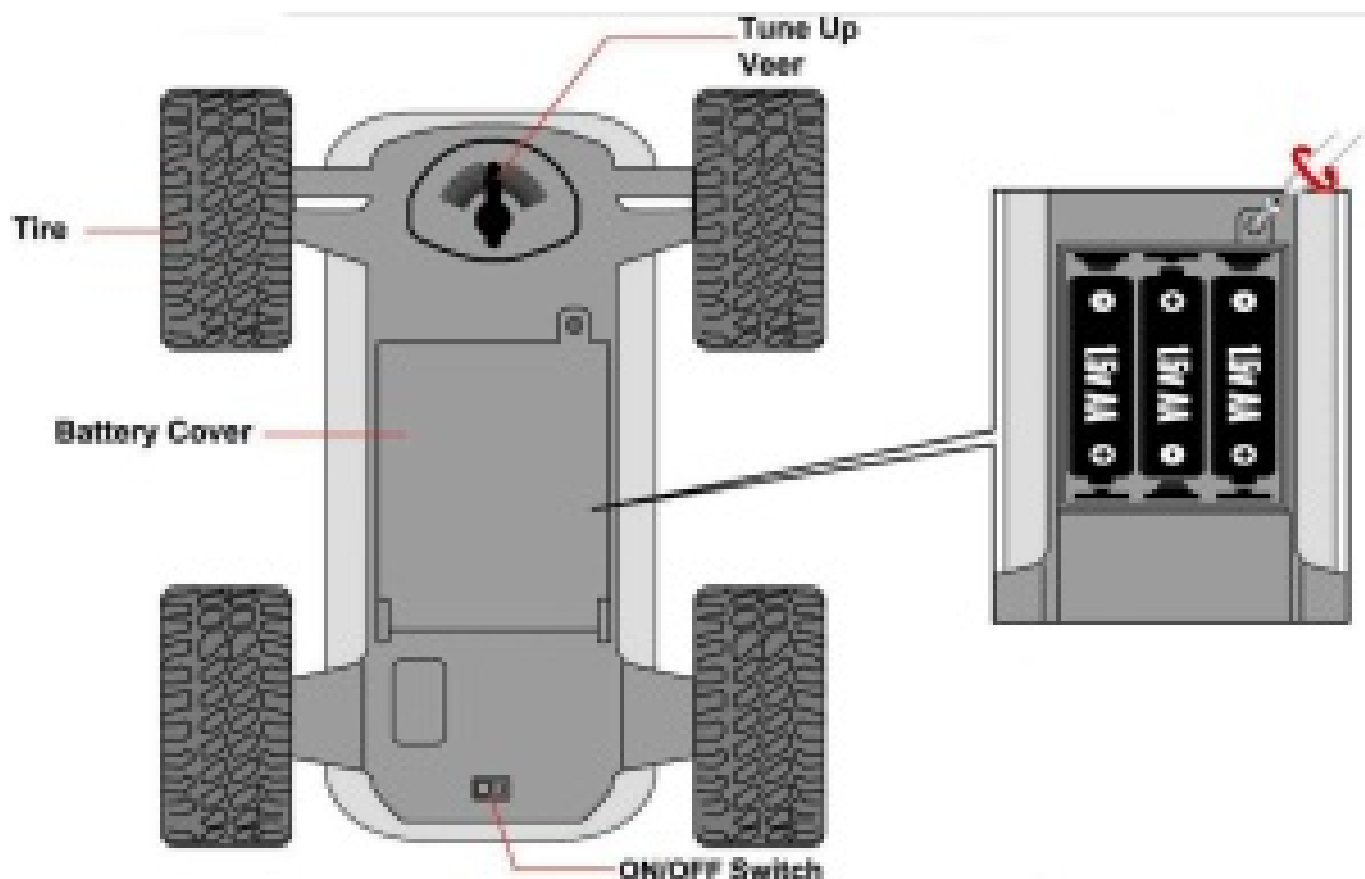

WARNING: TO AVOID BATTERY LEAKAGE

 1. Be sure to insert the batteries correctly, and always follow the toy/game and battery manufacturers' instructions.
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
3. Always remove weak or dead batteries from the product.
4. Remove the battery if the product is left unused for a long period of time.

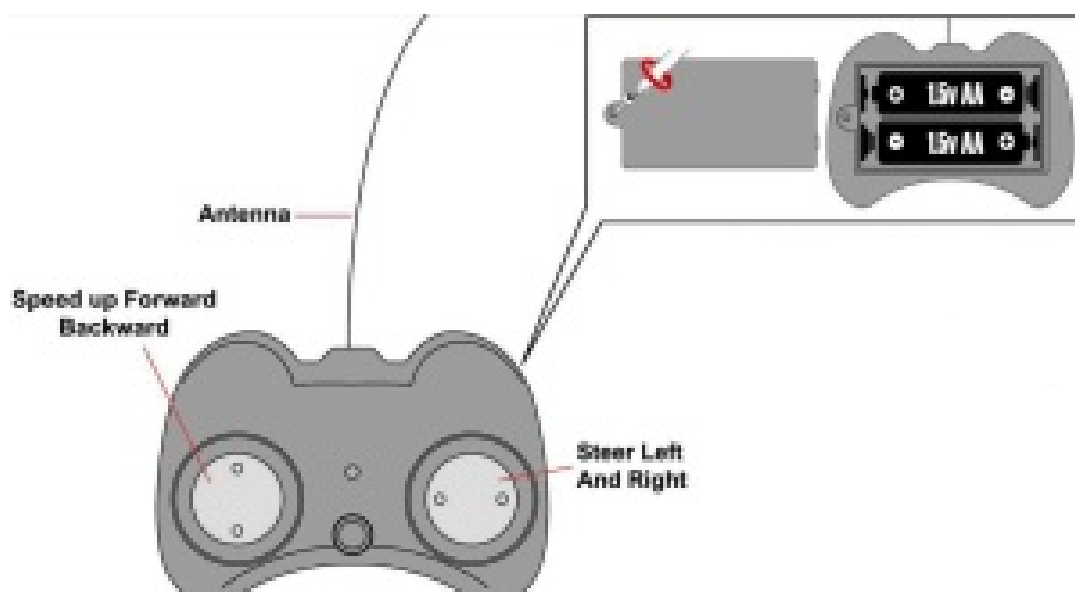

1. Remove the screw counterclockwise and slide the battery compartment door off.
2. Insert 2"AA" (1.5V) batteries (not included) as illustrated.

3. Replace the battery compartment door and secure the screw clockwise.

FCC ID: 2A154-08810929

Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Contents

[1 Documents / Resources](#)

[2 Related Posts](#)

Documents / Resources

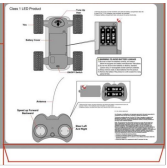	<p>PLAYTEK 08810929 Remote Control Buggy [pdf] Instruction Manual</p> <p>08810929, 2A154-08810929, 2A15408810929, 08810929, Remote Control Buggy</p>
---	--