


PLEXGEAR X1 Wired Controller



PLEXGEAR X1 Wired Controller Instructions

[Home](#) » [plexgear](#) » PLEXGEAR X1 Wired Controller Instructions 

Contents

- [1 PLEXGEAR X1 Wired Controller](#)
- [2 Product Usage Instructions](#)
- [3 Specifications](#)
- [4 Use](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

PLEXGEAR®

PLEXGEAR X1 Wired Controller



Specifications:

- **For use with:** Windows, PlayStation 3
- **Connection:** USB-A
- **Cable length:** 1.8 m
- **In the box:** Controller with fixed USB-A cable, manual

Product Usage Instructions

Connecting to a PC:

1. Connect the controller's USB connector to a free USB port on your PC or PS3.
2. Turn on your device; the LED indicators will light up.
3. The controller is automatically installed, and the drivers show as Xbox 360 controller for Windows on your PC.
4. To turn off the controller, disconnect it or turn off your device.

Switching to DirectInput Modes:

1. Use the switch on the back of the controller to change the mode.
2. Set the switch to 'D' for DirectInput and 'X' for X-input.
3. Your computer will play a chime sound for USB device connected, and a new driver for PS3/PC wired gamepad will be installed.
4. In DirectInput mode, you can switch between digital and analog by pressing the Home button.

Turbo Mode:

- Turbo is used to send a command automatically and repeatedly while holding down a button.
- Turbo can be enabled for multiple buttons simultaneously.

- **Turbo mode is compatible with buttons:** Y, X, B, A, L1, L2, R1, and R2.
- **Turbo mode is not compatible with:** Select, Start, Clear, Home, the analog stick directions, or pad buttons.

To enable turbo mode for a button:

1. Press and hold the Turbo button.
2. While holding the Turbo button, press the button you want to activate turbo mode for.
3. Release the buttons to confirm.

Turning Off Turbo Mode:

To turn off turbo mode on a button:

1. Press and hold the Clear button.
2. While holding the Clear button, press the button you want to turn off turbo for.

Frequently Asked Questions (FAQ):

1. Q: Can I use this controller with Xbox consoles?

A: No, this controller is designed for use with Windows and PlayStation 3 only.

2. Q: How do I know if turbo mode is active?

A: The LED indicators on the controller will provide feedback on the current mode, including turbo mode activation.

WIRED CONTROLLER

X1

Specifications

- **For use with:** Windows, PlayStation 3
- **Connection:** USB-A
- **Cable length:** 1.8 m
- **In the box:** Controller with fixed USB-A cable, manual

Use

• Connecting to a PC

- Connect the controllers USB connector to a free USB port on your PC or PS3. Turn on your device, the LED indicators light up. The controller is automatically installed, and the drivers show as "Xbox 360 controller for Windows" on your PC.
- Disconnect the controller, or turn off your device, to turn the controller off.

• Controller modes

- This controller supports Input mode and DirectInput mode.
- Input is the default mode and the controller automatically starts in this mode. It is designed by Microsoft for their Xbox controllers and is compatible with most platforms on PC.
- DirectInput mimics the earlier types of controllers for systems such as Nintendo 64 and Nintendo

Entertainment System (NES). DirectInput mode also has two sub-settings, analog and digital. Analog has joystick functions like the N64 controller. Digital has only directional button functions like the NES controller.

- Switch to DirectInput modes (analog and digital)
- Use the switch on the back of the controller to change the mode. Set the switch to “D” for DirectInput, and “X” for X-input. Your computer plays a chime sound for USB device connected, and that a new driver for “PS3/PC wired gamepad” has been installed.
- In DirectInput mode, you can switch between digital and analog by pressing the Home button (). The LED indicators (from left to right) light up to show the current mode:
- **Digital mode:** first indicator lights up.
- **Analog mode:** first and second LED indicator light up.


• Turbo mode

- Turbo is used to send a command automatically and repeatedly while holding down a button. Turbo can be enabled for multiple buttons at the same time.
- **Note! Turbo mode is compatible with buttons:** Y, X, B, A, L1, L2, R1 and R2. Turbo mode is not compatible with: Select, Start, Clear, Home, the analog stick directions or pad buttons.
- To enable turbo mode for a button, press and hold the Turbo button while pressing the button you want to activate turbo mode for. Release the buttons to confirm.
- To turn off turbo mode on a button, press and hold the Clear button and press the button you want to turn off turbo for.

www.plexgear.com Box 50435 Malmö Sweden 2024-01-19



Documents / Resources

	<p>PLEXGEAR X1 Wired Controller [pdf] Instructions 61887, X1 Wired Controller, X1, Wired Controller, Controller</p>
---	---

References

- [Plexgear | Kjell.com](https://www.plexgear.com)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.