



PLIANT TECHNOLOGIES MicroCom 2400XR Wireless Intercom User Guide

[Home](#) » [PLIANT TECHNOLOGIES](#) » PLIANT TECHNOLOGIES MicroCom 2400XR Wireless Intercom User Guide



PLIANT TECHNOLOGIES MicroCom 2400XR Wireless Intercom



Contents

- [1 IN THIS BOX](#)
- [2 ACCESSORIES](#)
 - [2.1 OPTIONAL ACCESSORIES](#)
- [3 PRODUCT DESCRIPTION](#)
- [4 SETUP](#)
- [5 OPERATION](#)
 - [5.1 Multiple MicroCom Systems](#)
- [6 Battery](#)
 - [6.1 Menu Options](#)
 - [6.2 Recommended Settings by Headset](#)
- [7 CUSTOMER SUPPORT](#)
 - [7.1 Additional Documentation](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

IN THIS BOX

WHAT'S INCLUDED WITH MICROCOM 2400XR?

- BeltPack
- Li-Ion Battery (Installed during shipment)
- USB Charging Cable
- BeltPack Antenna (Reverse-threaded; attach to belt-pack prior to operation.)

- Quick Start Guide
- Product Registration Card

ACCESSORIES

OPTIONAL ACCESSORIES

- PAC-USB6-CHG: MicroCom 6-Port USB Charger
- PAC-MCXR-5CASE: IP67-rated MicroCom Hard Carry Case
- PAC-MC-SFTCASE: MicroCom Soft Travel Case
- PBT-XRC-55: MicroCom XR 5+5 Drop-In BeltPack and Battery Charger
- ANT-EXTMAG-01: MicroCom XR 1dB External Magnetic 900MHz / 2.4GHz Antenna
- PAC-MC4W-IO: Audio In/Out Headset Adapter for MicroCom XR series
- Selection of compatible headsets (see Pliant website for more details)

PRODUCT DESCRIPTION





SETUP

1. Attach the beltpack antenna. It is reverse threaded; screw counter-clockwise.
2. Connect a headset to the beltpack. Press firmly until it clicks to make sure the headset connector is seated properly.
3. Power on. Press and hold the Power button for 2 seconds until the screen turns on.
4. Access the menu. Press and hold the Mode button for 3 seconds until the screen changes to . Short-press Mode to scroll through the settings, and then scroll through setting options using Volume +/- . Press and hold Mode to save your selections and exit the menu.
 - a. Select a group. Select a group number from 00–39. **IMPORTANT:** BeltPacks must have the same group number to communicate.
 - b. Select an ID. Select a unique ID number.
 - Repeater* Mode ID options: M, 01–08, S, or L.
 - One beltpack must always use the “M” ID and serve as the master beltpack for proper system function.
 - Listen-only beltpacks must use the “L” ID. You may duplicate ID “L” on multiple beltpacks.
 - Shared beltpacks must use the “S” ID. You may duplicate ID “S” on multiple beltpacks, but only one shared beltpack may talk at a time.
 - When using “S” IDs, the last full-duplex ID cannot be used (“08” in Repeater Mode).
 - c. Confirm beltpack’s security code. All beltpacks must use the same security code to work together as a system.

*Repeater Mode is the default setting. See the MicroCom 2400XR Manual for information about modes, how to change the mode, and each mode’s settings.

OPERATION

- **LED Modes** – Blue (double blink) when logged in. Blue (single blink) when logged out. Red when battery charging is in progress (LED turns off when charging is complete).
- **Lock** – To toggle between Lock and Unlock, press and hold the Talk and Mode buttons simultaneously for 3 seconds.
“Lock” appears on the OLED when locked.
- **Volume Up and Down** – Use the + and – buttons to control the headset volume. “Volume” and a stair-step indicator display the beltpack’s current volume setting on the OLED. You will hear a beep in your connected headset when volume is changed. You will hear a different, higher-pitched beep when maximum volume is

reached.

- Talk – Use the Talk button to enable or disable talk for the device. “TALK” appears on the OLED when enabled.
 - » Latch talking: A single, short press of the button.
 - » Momentary talking: Press and hold the button for 2 seconds or longer; talk will remain on until the button is released.
 - » Shared users (“S” ID) utilize momentary talking. Only one Shared user can talk at a time.
- Mode – Short-press the Mode button to toggle between the channels enabled on the beltpack. Long-press the Mode button to access the menu.

Multiple MicroCom Systems

Each separate MicroCom system should use the same Group and Security Code for all beltpacks in that system. Pliant recommends that systems operating in proximity to one another set their Groups to be at least ten (10) values apart.

For example, if one system is using Group 03, another system nearby should use Group 13.

Battery

- Battery life: Approx. 12 hours
- Charge time from empty: Approx. 3.5 hours (USB port connection) or approx. 6.5 hours (drop-in charger)
- Charging LED on the beltpack will illuminate red while charging and will turn off when charging complete.
- The beltpack may be used while charging, but doing so may lengthen charge time.

Menu Options

Aside from Group and User ID, the following settings are adjustable from the beltpack menu.

Menu Setting	Default	Options
Side Tone	On	On, Off
Mic Gain	1	1–8
Channel A	On	On, Off
Channel B*	On	On, Off
Security Code	0000	Alpha-numeric

***Channel B not available in Roam Mode.**

Recommended Settings by Headset

Headset Type	Recommended Setting
	Mic Gain
SmartBoom LITE and PRO	1
MicroCom in-ear headset	7
MicroCom lavalier microphone and eartube	5

CUSTOMER SUPPORT

Pliant Technologies offers technical support via phone and email from 07:00 to 19:00 Central Time (UTC-06:00), Monday through Friday.

1.844.475.4268 or +1.334.321.1160

customer.support@plianttechnologies.com

You may also visit our website (www.plianttechnologies.com) for live chat help. (Live chat available 08:00 to 17:00 Central Time (UTC-06:00), Monday through Friday.)

Additional Documentation

This is a quick start guide. For additional details on menu settings, device specifications, and product warranty, view the full MicroCom 2400XR Operating Manual on our website. (Scan this QR code with your mobile device to navigate there quickly.)





[PLIANT TECHNOLOGIES MicroCom 2400XR Wireless Intercom](#) [pdf] User Guide
MicroCom 2400XR Wireless Intercom, MicroCom 2400XR, Wireless Intercom, Intercom

References

-  [Pliant Technologies Wireless Intercom Solutions](#)