

PLT SOLUTIONS LS-PLTS-12336 Plug In Outdoor Mechanical Timer Instruction Manual

Home » PLT SOLUTIONS » PLT SOLUTIONS LS-PLTS-12336 Plug In Outdoor Mechanical Timer Instruction

Manual ™



Instruction Manual

Contents

1 LS-PLTS-12336 Plug In Outdoor Mechanical

Timer

- **2 Installation Instructions**
- 3 Troubleshooting
- 4 Documents / Resources
- **5 Related Posts**

LS-PLTS-12336 Plug In Outdoor Mechanical Timer



- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Toreduce the risk of death, personal injury, or property damage from fire, electric shock, falling parts,

cuts/abrasions, and other hazards, read all warnings and instructions included with and on the fixture box and all fixture labels.

- Proper grounding is required to ensure safety.
- Power must be turned off at the breaker before installation or maintenance.
- Installation, service, and maintenance of luminaires should be performed by a qualified licensed electrician.
- Wear gloves and eye protection at all times while installing, servicing, or performing maintenance on the luminaire, and avoid direct eye exposure to the light source while it is on.
- Do not install damaged product. Inspect luminaire for damage that may have occurred during transit. If damaged, contact the manufacturer immediately.
- These instructions do not purport to cover all details or variations in equipment nor to provide every possible
 contingency to meet in connection with installation, operation, or maintenance. Should further information be
 desired or should particular problems arise which are not covered sufficiently for the purchaser's or owner's
 purposes, contact the manufacturer.

WARNING

- The device must be mounted in a vertical position with the receptacle facing downward and with the receptacle at least 2 ft. above the ground level to prevent water immersion.
- Do not exceed the maximum amperage rating of 15 Amps, or maximum wattage rating of 1,000 Watts.
- Cancer and reproductive harm <u>www.P65Warnings.ca.gov</u>

CAUTION

- This product should be plugged into a 3-conductor GFCI receptacle.
- Suitable for outdoor use.
- Rain-tight when mounted vertically with the receptacle facing downward.
- · Do not immerse in water.

Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Installation Instructions

- The device must be mounted in a vertical position with the receptacle facing downward and with the receptacle at least 2 ft. above the ground level to prevent water immersion.
- Turn the Timer Dial (1) to the "OFF" setting to turn off all attached devices.
- Turn the Timer Dial (1) to the "ON" setting to turn on all attached devices.
- Turn the Timer Dial (1) to the "Dusk-Dawn" setting to turn on the attached devices at dusk and turn off the attached devices at dawn. Temporary light sources like headlights, porch lights, streetlights and other external light sources will not interfere with the photocell function unless the external light source is on for more than 15 minutes. In that case, the receiver will shut off until darkness is restored. This function has been implemented to avoid flickering or constant on/off for all connected devices.
- Turn the Timer Dial (1) to the 2Hrs, 4Hrs, 6GHrs or 8Hrs setting to specify the amount of time the connected devices will be on after dusk. The program cycle will complete before the timer resets.
 Headlights, porch lights, streetlights and other external light sources will not interfere with the active program.
- The chosen setting will repeat every 24 hours.
- Plug the power cord into a 3-conductor GFCI receptacle. The power cord is a Ginch 14/3 SJTW cord.

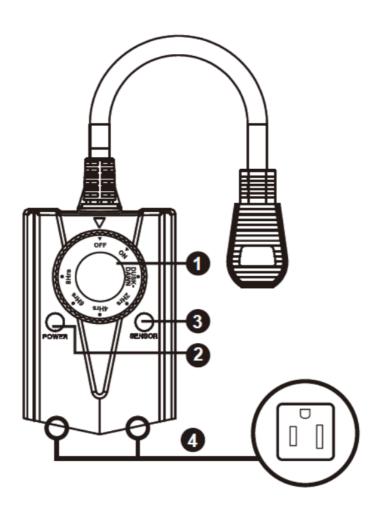

1. Timer dial:

2 to 8 hours or dusk to dawn and daily repeat function.

2. Power:

Power indicator light indicates if the timer is turned on or off.

3. Sensor:

Sensor will turn timer on at dusk and off at dawn.

4. 2 Outlets: Plug the lights or devices to be controlled by the timer into outlet.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Lights do not turn on, even when ti mer is in "ON" position.	Lights are not in "ON" position, light s are not functioning, or timer is not receiving power.	Be sure that lights are functional by plugging them directly into the outle t. Be sure that lights are in "ON" position if they have their own switch. Be sure that the outlet that the timer is plugged into is active.

972-535-0926 pltsolutions.com ver 021423

Documents / Resources



PLT SOLUTIONS LS-PLTS-12336 Plug In Outdoor Mechanical Timer [pdf] Instruction Manual

LS-PLTS-12336, Plug In Outdoor Mechanical Timer, LS-PLTS-12336 Plug In Outdoor Mechanical Timer, Outdoor Mechanical Timer, Timer

Manuals+,