

**PLT Dual UFO Hanger Bracket**



## PLT Dual UFO Hanger Bracket Installation Guide

[Home](#) » [PLT](#) » PLT Dual UFO Hanger Bracket Installation Guide 

### Contents

- [1 PLT Dual UFO Hanger Bracket](#)
- [2 Installation Instructions](#)
- [3 Safety Warning](#)
- [4 Contact Information](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)



**PLT Dual UFO Hanger Bracket**




#### **WARNING**

Installation, service, and maintenance of luminaries should be performed by a qualified licensed electrician.

#### **Installation Instructions**


1. Use 4 M5\*16 hex screws to lock the u-bracket on the UFO fixture.

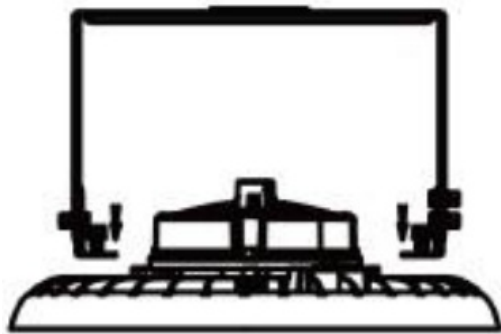


2. Attach the UFO with the u-bracket to the connecting rod using 2 M12\*30MM screw assemblies.

**Note:** M 12\*33mm screw assembly consists of:


- 2 M 12\*30 screws
- 2 M 12 spring washers
- 2 M 12 flat washers
- 2 M12 nuts
- 2 mounting plates

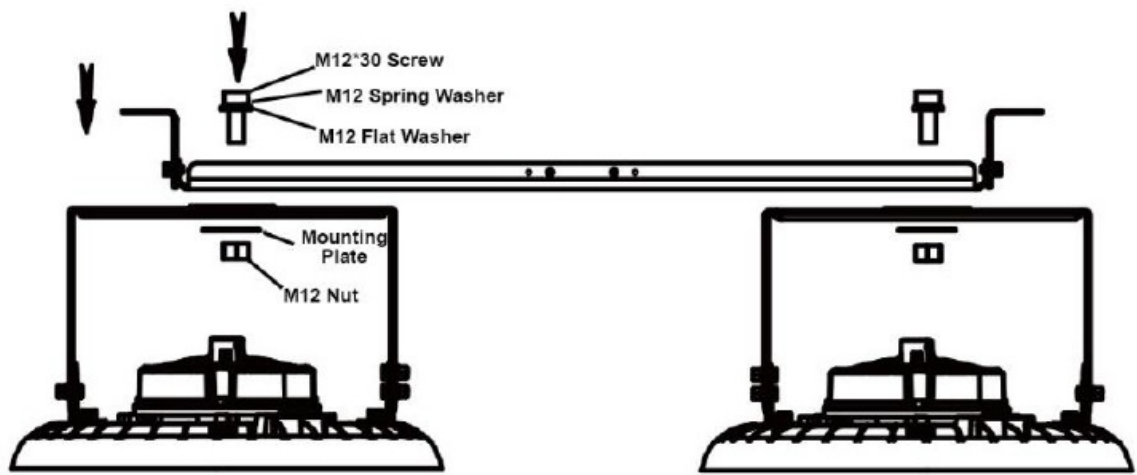

3. Use 2 KM3\*6MM screws to lock the junction box on the side (as shown in Figure 3-1) or the bottom ( as shown in Figure 3-2) of the mounting bar.

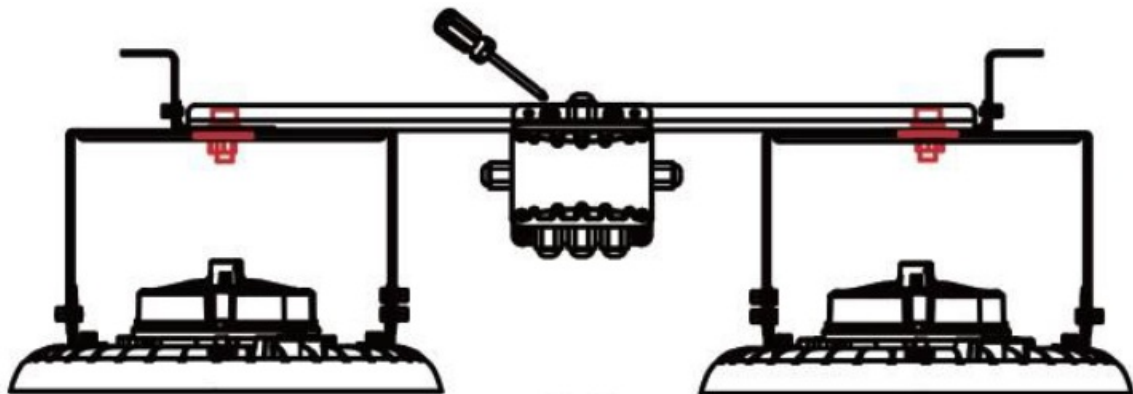


3-1

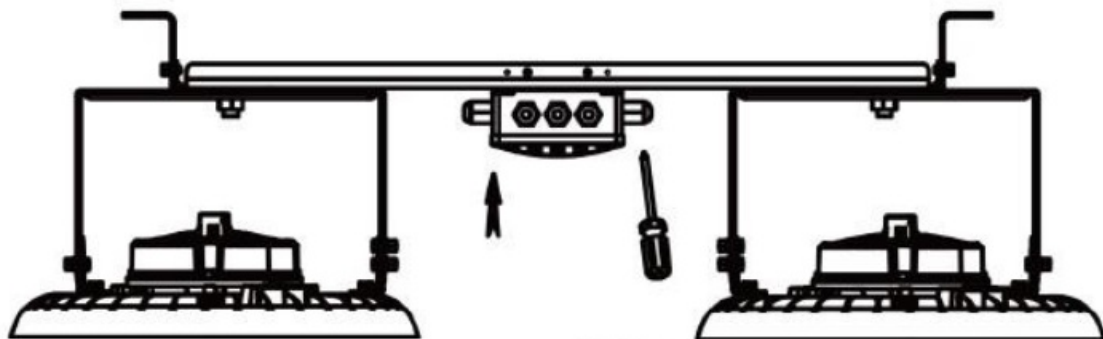


3-2


4. Connect the AC line of the lamp power supply with the wiring terminal of the light module and put it into the junction box.

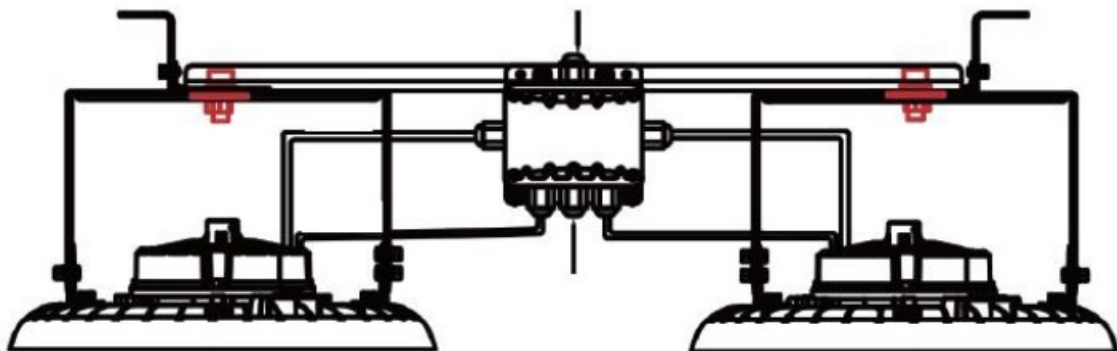


5. Insert each cable clip into the holes on the mounting plates at both ends of the support.

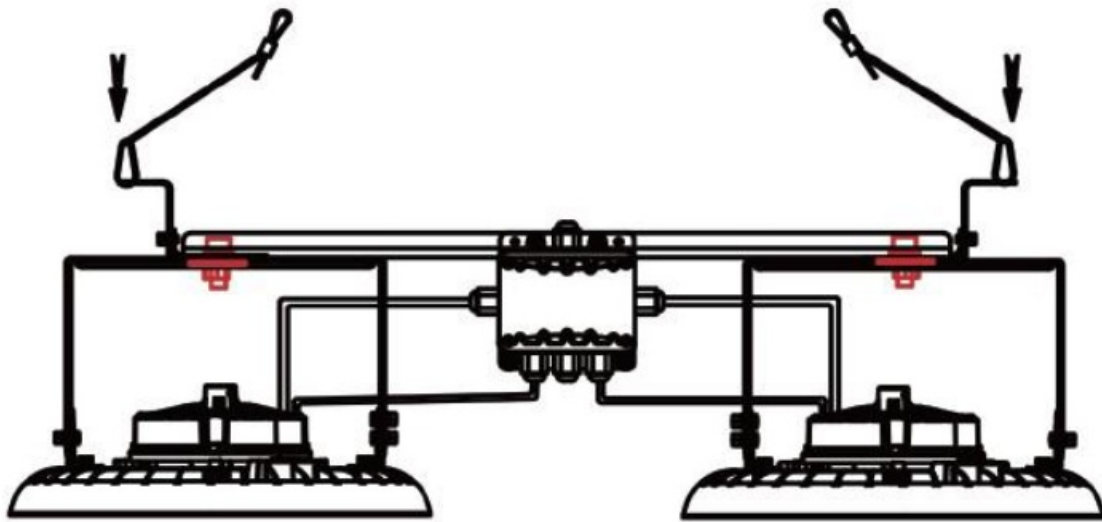

6. Hang the cables on the ceiling hooks, then adjust the dual hanger mount by pressing the cylinder on the cable gripper. Push or pull the cable until the hanger is properly balanced.

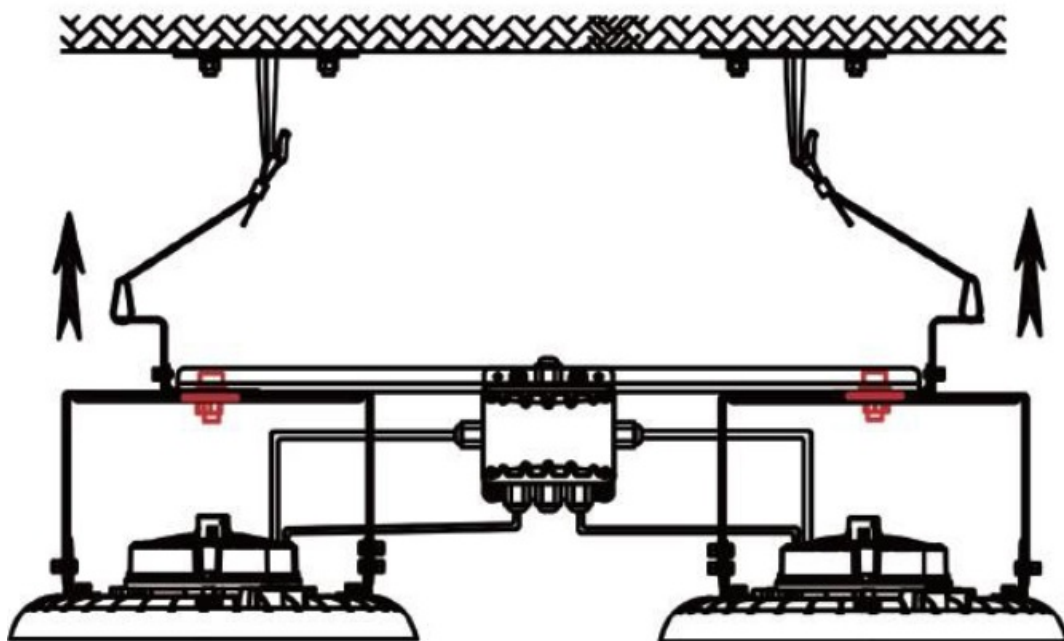

7. Turn OFF the power, connect the AC line, and adjust the light.

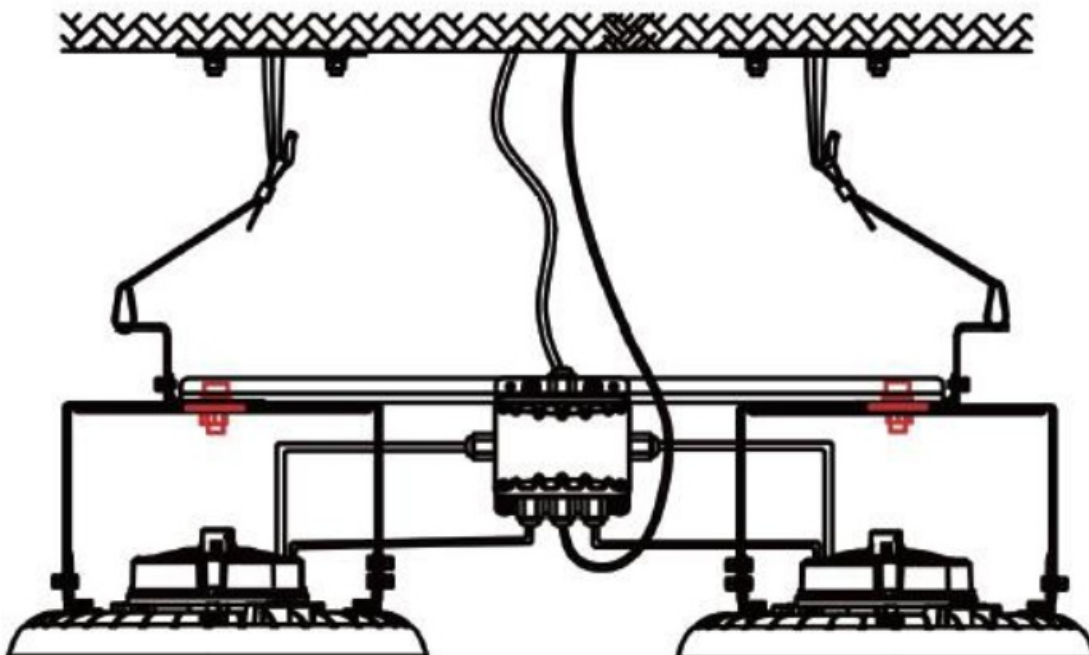


## Safety Warning

- Before installing, servicing, or performing routine maintenance on this equipment, follow these general precautions.
- To reduce the risk of death, personal injury, or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards, read all warnings and instructions included with and on the fixture box and all fixture labels.
- Proper grounding is required to ensure safety.
- Power must be turned off at the breaker before installation or maintenance.
- This product must be installed under the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- Wear gloves and eye protection at all times while installing, servicing, or performing maintenance on the luminaire, and avoid direct eye exposure to the light source while it is on.
- To prevent wiring damage or abrasion, do not expose wiring to the edges of sheet metal or other sharp objects.
- Do not install damaged products. Inspect the luminaire for damage that may have occurred during transit. If damaged, contact the manufacturer immediately.
- These instructions do not purport to cover all details or variations in equipment nor to provide every possible contingency to meet in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise that are not covered sufficiently for the purchaser's or owner's purposes, contact the manufacturer.

## Contact Information

- [972-535-0926](tel:972-535-0926)
- [pltsolutions.com](http://pltsolutions.com).

## Documents / Resources

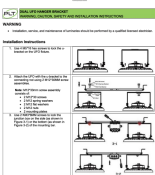	<p><a href="#">PLT Dual UFO Hanger Bracket</a> [pdf] Installation Guide PLT-13072, Dual UFO Hanger Bracket, Dual UFO Bracket, Hanger Bracket, Dual UFO Hanger, Hanger, Bracket</p>
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.