



PNi Robo One Robot User Manual

[Home](#) » [PNi](#) » PNi Robo One Robot User Manual 

Contents

 
- 1 PNi Robo One Robot
- 2 BUTTONS AND FUNCTIONS
- 3 VOICE COMMANDS
- 4 BATTERY INSTALLATION
- 5 PRODUCT MAINTENANCE
- 6 Documents / Resources
- 7 Related Posts

PNi

PNi Robo One Robot



BUTTONS AND FUNCTIONS

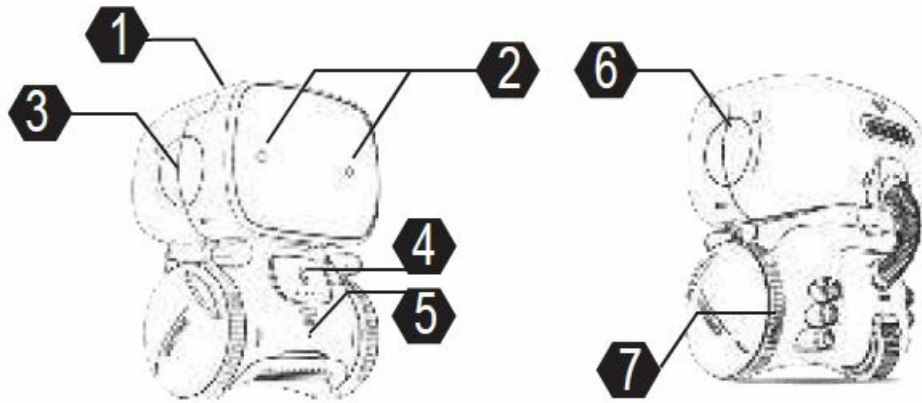

ACTIONS IMMEDIATELY AFTER THE ROBOT IS STARTED:

GOES FORWARD + SOUNDS + TURNS LEFT + TURNS RIGHT + SOUNDS + GOES BACKWARD

1. TOUCH BUTTON

- SHORT PRESS ACTIONS:
 - THE ROBOT DANCES ON THE MUSIC
 - THE ROBOT WALKS IN CIRCLE
 - THE ROBOT SINGS “BIPOBIPO” AND GOES FORWARD
 - THE ROBOT LAUGHS AND GOES BACKWARD

2. THE ROBOT’S EYES

- LONG PRESS TO ENTER VOICE REPEAT MODE, SHORT PRESS TO EXIT.
- EYE COLOR CHANGES AS THE ROBOT PERFORMS CERTAIN ACTIONS
- WHEN THE ROBOT ENTERS STANDBY MODE, THE EYES TURN OFF

3. TOUCH BUTTON

- SHORT PRESS: THE ROBOT EMITS SOUNDS AND GOES BACKWARDS, THEN TURNS LEFT;
- LONG PRESS: VOLUME DOWN. IN TOTAL THERE ARE 7 VOLUME LEVELS (DEFAULT: LEVEL 5)

4. VOICE RECORDING BUTTON

- WHEN IN RECORDING MODE, PRESS BRIEFLY TO PAUSE.
WHEN IN STANDBY MODE, PRESS BRIEFLY TO REACTIVATE THE ROBOT.
- PRESS AND HOLD FOR ~ 2 SECONDS UNTIL YOU HEAR A CONFIRMATION SOUND TO ENTER THE REGISTRATION MODE. A RECORDING CAN LAST UP TO 8 SECONDS. IN TOTAL YOU CAN SAVE UP TO 3 RECORDS.

5. MICROPHONE

- WHEN YOU GIVE THE ROBOT COMMANDS, SPEAK AT A DISTANCE OF UP TO 50CM FROM THE MICROPHONE.
- TO ENSURE THE QUALITY OF THE RECORDING, RECORD IN A QUIET ENVIRONMENT USING A CLEAR TONE OF VOICE.

6. TOUCH BUTTON

- SHORT PRESS: THE ROBOT EMITS SOUNDS AND GOES FORWARD, THEN TURNS RIGHT;
- LONG PRESS: VOLUME UP. IN TOTAL THERE ARE 7 VOLUME LEVELS (DEFAULT: LEVEL 5)

7. WHEELS WITH INDEPENDENT MOVEMENT

VOICE COMMANDS







 


GIVE THE ROBOT ONE OF THE COMMANDS BELOW:

VOICE COMMAND


-  HI AT
-  COME HERE
-  GO BACK
-  TURN LEFT
-  TURN RIGHT
-  I LOVE YOU
-  ARE YOU HAPPY?
-  YOU KNOW HOW TO DANCE?
-  MUSIC
-  MUSIC

ROBOT ACTION

-  SHAKES “HERE” + GOES FORWARD + SOUNDS “HEY GUY ” + TURNS LEFT AND RIGHT

-  "YES " + GOES FORWARD + SOUNDS
-  "YES" + GOES BACKWARD + SOUNDS
-  "YES" + TURNS LEFT + SOUNDS
-  "YES " + TURNS RIGHT+ SOUNDS
-  SOUNDS + GOES FORWARD SOUNDS + GOES IN CIRCLE SOUNDS + 'I LOVE YOU TOO' + " KISS"
-  SOUNDS + LAUGHTER SOUNDS SOUNDS + SINGS + DANCE MOVES "MMM....." + LIGHTS TURN OFF
-  "NO PROBLEM" + RANDOMLY PLAYS ONE DANCE MUSIC+ SOME DANCE MOVES.
-  "OK, MUSIC" + RANDOM PLAYS ONE MUSIC
-  "SEE YOU" + GOES BACKWARD

 BATTERY INSTALLATION

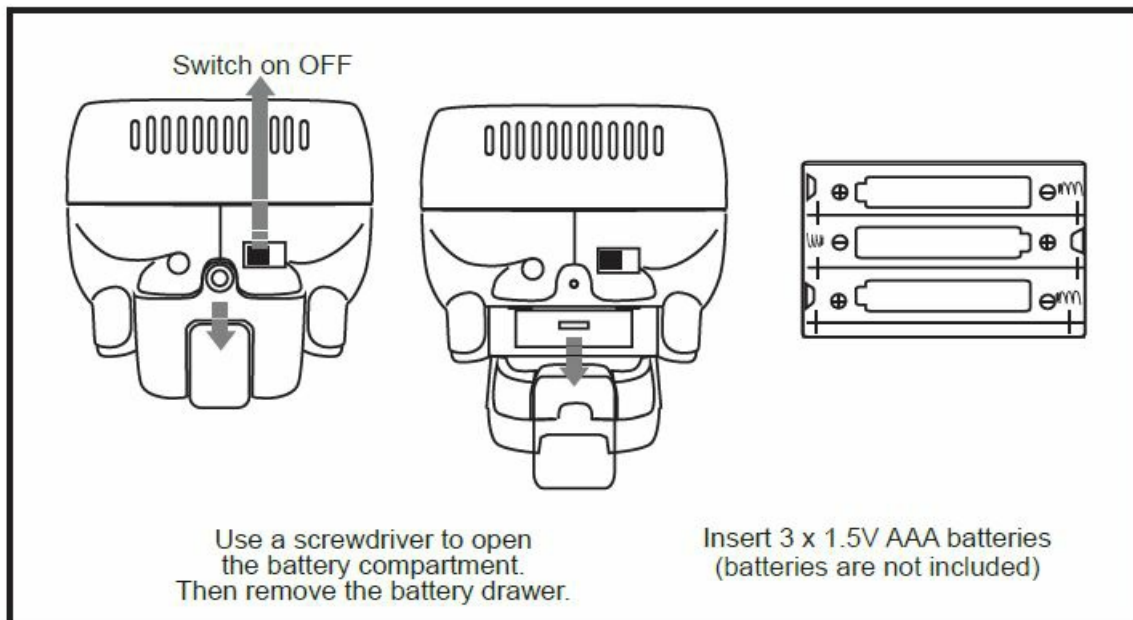

WARNINGS:

1. THIS PRODUCT IS A PHONETIC RECOGNITION ROBOT. THE PRODUCT MAY NOT WORK PROPERLY IN A NOISY ENVIRONMENT;
2. DO NOT PRESS SEVERAL TOUCH BUTTONS SIMULTANEOUSLY. IF YOU DO SO, THE PRODUCT MIGHT WORK IN AN INCORECT WAY IF THE ROBOT EMITS A 'DIDIDI' SOUND FOR A LONG TIME, PRESS ANY TOUCH BUTTON TO EXIT.
3. FOR A GOOD EXPERIENCE IN USE, WE RECOMMEND USING GOOD QUALITY BATTERIES;
4. AFTER YOU GIVE THE ROBOT A COMMAND, WAIT FOR THE ROBOT TO EXECUTE THE COMMAND AND THEN YOU CAN GIVE A NEW COMMAND.
5. WHEN THE BATTERIES ARE DISCHARGED, THE ROBOT COULD SPEAK OR PERFORM CERTAIN ACTIONS AUTOMATICALLY. PLEASE REPLACE THE BATTERIES IMMEDIATELY.
6. THIS PRODUCT IS NOT RECOMMENDED FOR CHILDREN UNDER 36 MONTHS. DANGER OF INJURY.
7. WE RECOMMEND THAT YOU KEEP THIS PRODUCT IN A SAFE PLACE AND IN AN EXTRA PACKAGE.


PRODUCT MAINTENANCE

KEEP PRODUCT AWAY FROM MOISTURE AND DUST.

USE A DRY CLOTH TO CLEAN THE PRODUCT CASING.

THE PRODUCT USES BATTERIES. THEREFORE, DO NOT EXPOSE IT TO SOURCES OF STRONG HEAT.

Documents / Resources

	<p>PNi Robo One Robot [pdf] User Manual</p> <p>Robo One Robot, One Robot, Robo Robot, Robo One, Robot</p>
---	---