

# **POLAR ASPECY PRO Spectrogram Analysis Instruction** Manual


Home » Polar » POLAR ASPECY PRO Spectrogram Analysis Instruction Manual

### **Contents**

- 1 POLAR ASPECY PRO Spectrogram
- **Analysis**
- 2 user instructions
- 3 Led Button Functions
- 4 Led Home Screen
- **5 Setting Screen**
- **6 Setting Icon**
- 7 Home Icon
- 8 Refresh Icon
- 9 Color Temp
- 10 RGB COLOR
- 11 RGB SAVE COLOR
- **12 THEME**
- 13 THEME COLOR DISPLAY
- 14 STROBE
- 15 BRIGHTNESS
- 16 PRESETS
- 17 DELETE A PRESET
- 18 Documents / Resources
- **19 Related Posts**



**POLAR ASPECY PRO Spectrogram Analysis** 

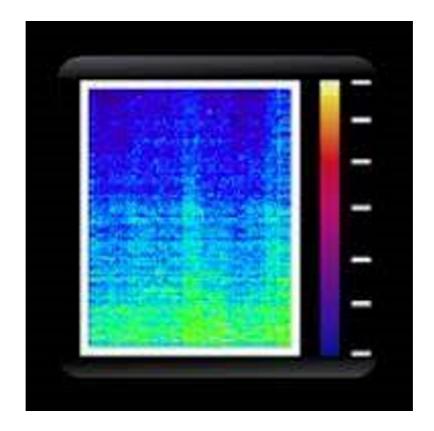

# user instructions



**Led Button Functions** 



Power Button:

Push and hold for 2 seconds to power on

-Navigation joystick:

Push and hold for 2 seconds to power on Push and hold for 2 seconds to power off

Up, down, left, right, diagonal, push-to enter

Hard reset: Hold power button for 10 seconds.
Will cause LED to Restart and Reset to all Default settings.

# **Led Home Screen**



# **Setting Screen**



# **Setting Icon**



Setting Screen: WHEN youS SELECT SETTING ICON IT WILL DISPLAY SETTING SCREEN.



# **Home Icon**



Home Screen: WHEN youS SELECTS HOME ICON IT WILL DISPLAY THE HOME SCREEN.



# **Refresh Icon**





REFRESH: ALLOWS you TO SET RESET ALL HOME SCREEN FUNCTIONS BACK TO DEFAUL



# **Color Temp**



- 1. To select color; First Make sure COLOR TEMP is selected.
- 2. Press on the (bronze) joystick to select.
- 3. Once in the color temp screen. Color temp slot will highlight green, this indicates the you can move joystick Left or Right to set desired Led temperature.
- 4. Once the you has selected their desired color temperature you must press the joystick to lock temperature.
- 5. The action of pressing the joystick will return the you to the home screen and display the selected COLOR TEMP.



When  $COLOR\ TEMP$  is selected and in use, RGB COLOR, THEME, and PRESETS selection will dim by 70% and be unavailable for use.

(you must select oso you can adjust desired functions.)

#### **RGB COLOR**



- 1. To select RGB COLOR; First navigate to RGB COLOR.
- 2. Then press on the (bronze) joystick to select.
- 3. Once in the RGB screen. Move the joy stick Left or Right to select desired RGB. Press on the joystick to lock in selected RGB.
- 4. The action of pressing the joystick will return the you to the home screen and display the selected RGB.



### **RGB SAVE COLOR**



- 1. To select RGB COLOR; First make sure RGB COLOR is selected.
- 2. Press on the (bronze) joystick to select.
- 3. RGB Color slot will be highlighted, make sure to navigate downward.
- 4. Navigate downward to highlight Save Color Preset . Once highlighted press the joystick.



- 5. You will see Save Color Preset screen. It is on this screen where the you will select desired color. Once the you selects color you must press on the joystick to enter.
- 6. The action of pressing the joystick will return the you to the home screen and display the selected saved preset

### THEME



- 1. To select THEME; First Navigate to THEME.
- 2. Press on the (bronze) joystick to select.
- 3. Once within the THEME screen. Theme icons will highlight green, this indicates the YOU can move joystick to set desired THEME.
- 4. Once the YOU has selected you desired color THEME you must press on the joystick to lock THEME.
- 5. Once THEME is set, the you will only be able to adjust Brightness.



When *THEME* is selected and in use, COLOR TEMP, RGB COLOR, STROBE, and PRESETS selection will dim by 70% and be unavailable for

(YOU must select so you can adjust desired functions.)

### THEME COLOR DISPLAY



### **STROBE**



- 1. To select STROBE; First Navigate to STROBE.
- 2. Press on the (bronze) joystick to select.
- 3. Once within the STROBE screen. STROBE slot will highlight green, this indicates the you can move joystick to set desired STROBE.
- 4. Once the you has selected their desired STROBE you must press on the joystick to lock STROBE.
- 5. Once Strobe is set, the you will be returned to the home screen.



# **BRIGHTNESS**



- 1. To select BRIGHTNESS; First Navigate to BRIGHTNESS.
- 2. Press on the (bronze) joystick to select.
- 3. Once within the BRIGHTNESS screen. BRIGHTNESS slot will highlight green, this indicates the you can move joystick to set desired BRIGHTNESS.
- 4. Once the you has selected their desired BRIGHTNESS you must press on the joystick to lock BRIGHTNESS.
- 5. Once BRIGHTNESS is set, the you will be returned to the home screen.

### **PRESETS**



- 1. To select PRESETS; First make sure PRESETS is selected.
- 2. Press on the (bronze) joystick to select.
- 3. Once within the PRESETS SCREEN. The Built in PRESET color (CYAN) will be highlighted in white.
- 4. Use the joystick to move and highlight the (Add icon). Once highlighted double press the joystick.



- 5. you will then use the joystick to move left or right to select desired PRESET color.
- 6. Once the you has selected there desired PRESET color you will navigate downward using the joystick and highlight . Once the you highlights you must press on the joystick to enter and save color selected.

When RGB COLOR is selected and in use, COLOR TEMP, PRESETS, and THEMES selection will dim by 70% and be unavailable for use.

(you must select so you can adjust desired functions.)

7. The action of pressing on the option will return the you to the home screen and display the saved preset.

\*If you wants to select a color already saved in there presets you will have to Double click on the color cube for the LED to display desired color.

### **DELETE A PRESET**



- To select Delete a PRESET;
   First make sure PRESETS is selected.
- 2. Press on the (bronze) joystick to select.
- 3. Once within the PRESETS SCREEN. Select the Preset color you would like to delete. (Press joystick once to select color cube)
- 4. After using the Joystick to press and select color the you wishes to delete. Use the joystick to navigate downward and press on the highlighted edit color .This will take the you to the next step.
- 5. Once in this screen the you will navigate downward to the highlighted delete preset option. Then press enter on the joystick, This will take the you to the next step.



- 6. After selecting the delete preset option. The you will need to select and press the yes option option using the joystick. This will ensure the selected color is deleted.
  - 1. Once the you deletes the selected color. The Icon will auto populate, allowing the you to add a new color preset if you desire.
- 7. After that the you can either choose: Click on the home icon to take them to the Home Screen. Or Click on a preset color already saved to display said color on the LED.
  - \*What the Preset screen will look like if the you has multiple Color presets.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

#### **Documents / Resources**



POLAR ASPECY PRO Spectrogram Analysis [pdf] Instruction Manual PROMINI, 2AZQ4-PROMINI, 2AZQ4-PROMINI, ASPECY PRO Spectrogram Analysis, ASPECY PRO, ASPECY, Spectrogram Analysis, Spectrogram, Analysis

Manuals+