

POLARIS

GPS OBDII
Reader and
Torque App



Polaris GPS OBDII Reader and Torque App Instructions

[Home](#) » [POLARIS GPS](#) » Polaris GPS OBDII Reader and Torque App Instructions 

Contents

- [1 Polaris GPS OBDII Reader and Torque App](#)
- [2 Specifications](#)
- [3 A53 Dash Camera](#)
- [4 FAQs](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

POLARIS

Polaris GPS OBDII Reader and Torque App



Specifications

- **OBDII Reader:** Compatible with most vehicles with OBDII ports
- **Torque App:** Real-time vehicle performance monitoring
- **A53 Dash Camera:** Records high-quality video footage

Step 1: Plug in the OBDII Reader

- Locate your vehicle's OBDII port (usually found under the dashboard, near the driver's seat).
- Plug the OBDII reader into the OBDII port.

Step 2: Connect the OBDII Reader to Bluetooth on the Head Unit

- On the head unit, go to Settings > Bluetooth and ensure Bluetooth is turned on.
- Select Manage Devices.
- Wait for the head unit to detect the OBDII reader.
- When prompted for a password, enter 1234 and select Connect.

Step 3: Configure the Torque App

- The Torque app should already be preinstalled on your head unit. If not, please email us at sales@polarisgps.com.au, and we will send you the APK file for installation.
- Open the Torque app.
- Tap the Settings icon in the bottom left-hand corner.
- Select OBDII Adapter Settings.
- Tap Choose Bluetooth Device and select your OBDII reader.
- Press the Return arrow to go back.

