

Polaris PX300CPR PIXEL Compact Cordless Robotic Cleaner User Guide


[Home](#) » [Polaris](#) » Polaris PX300CPR PIXEL Compact Cordless Robotic Cleaner User Guide 



Contents

- [1 Polaris PX300CPR PIXEL Compact Cordless Robotic Cleaner User Guide](#)
- [2 Setup and Charging](#)
- [3 Start Cleaning](#)
- [4 Remove from Pool](#)
- [5 Cleaning and Storage](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

Polaris PX300CPR PIXEL Compact Cordless Robotic Cleaner User Guide



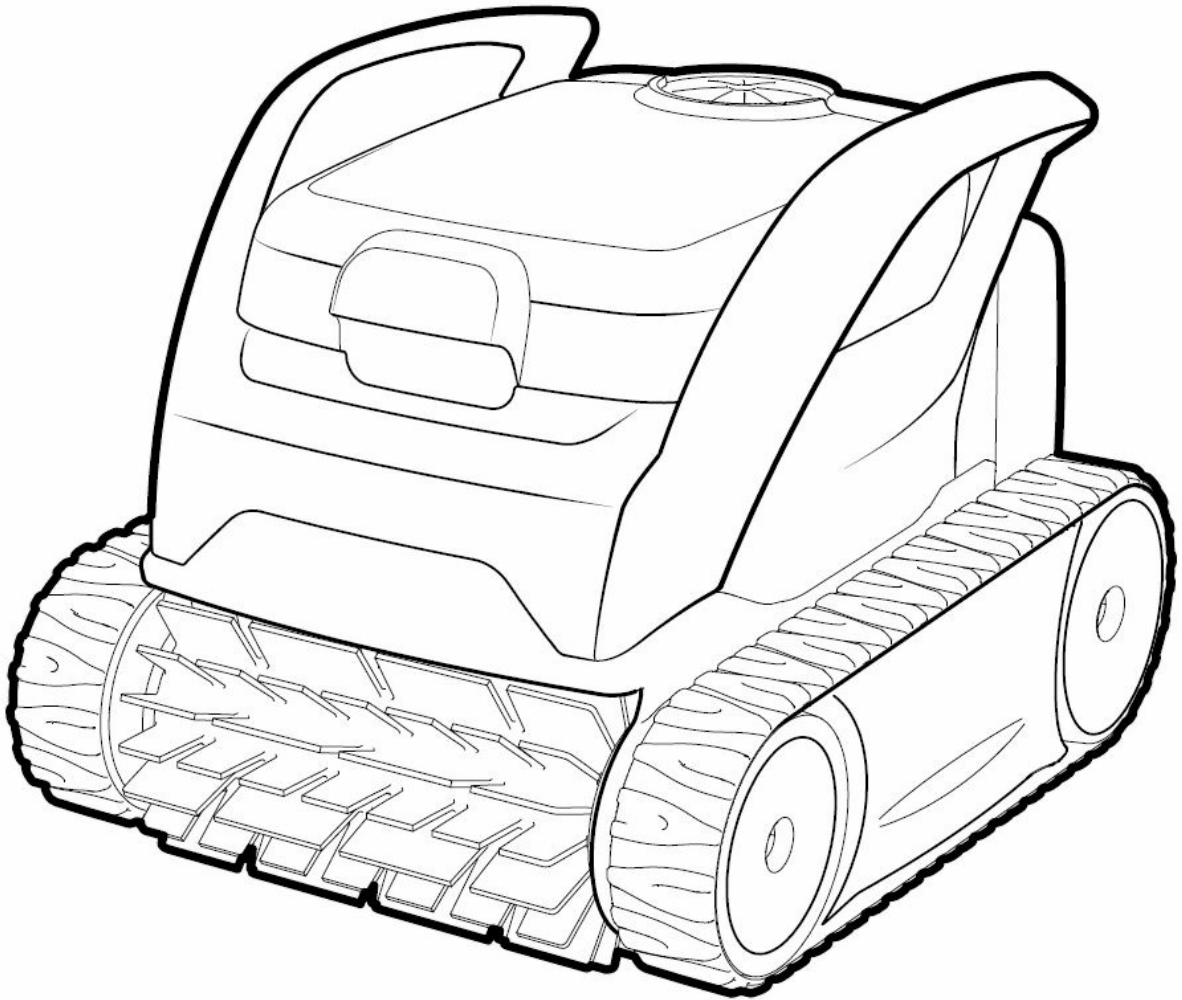


TYPE ET37-



Before You Start


This Quick Start Guide contains essential installation and startup instructions. Read the complete manual and all safety warnings before commencing installation.

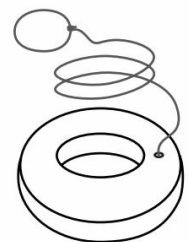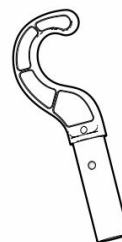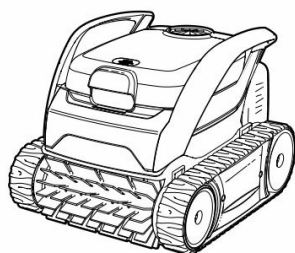

Status LED

Voyants d'État

Indicadores LED de Estado

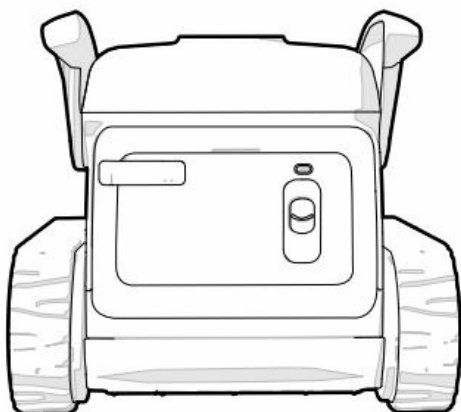

After 8 days of inactivity, the cleaner enters Deep Sleep Mode. Plug in again to wake up.

Après 8 jours d'inactivité, le nettoyeur passe en mode de sommeil profond. Brancher le chargeur pour l'activer.

Después de 8 días de inactividad, el limpiador activa el modo de suspensión profunda. Enchúfelo de nuevo para activarlo.

While Charging

Solid Green: Fully Charged

Blinking Green: Ready to run a full cycle (1 h 30 min)

Blinking Orange: Low Battery, charging

Blinking Red: Error

Ready to Start (unplugged)

Solid Green: Ready to immerse

Solid Orange: Low Battery

Blinking Orange: Very low battery, cannot run

Blinking Red: Error

During Cycle

Solid Green: In progress

Solid Orange: Low Battery

Blinking Red: Error

Off: Cycle complete


Setup and Charging



WARNING: Do not use extension cord.

Fully charge the cleaner before the first cleaning.


- Open protective cap covering charging port
- Ensure charging port is dry
- Connect to an indoor GFCI outlet
- Only use the charger supplied
- Charging Temperature Range: 40°F – 109°F (5°C – 43°C)

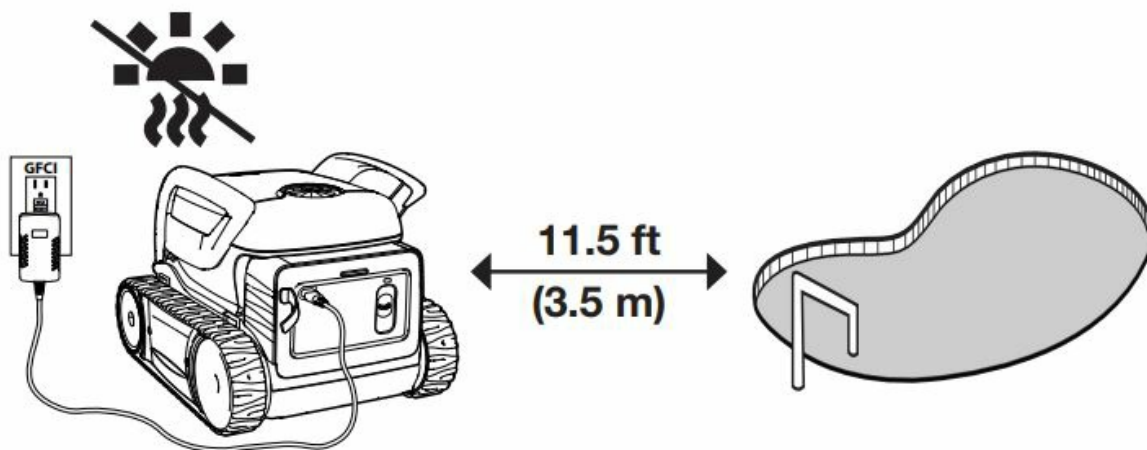

OPTIONAL: Attach the floating leash to the handle to assist with removal of the cleaner from above-ground pools.

OPTIONNEL : Fixer la laisse de flottaison à la poignée pour aider au retrait des piscines hors terre.

OPCIONAL: Ate la correa flotante a la manija para ayudar a retirar el limpiador de las piscinas elevadas del suelo.

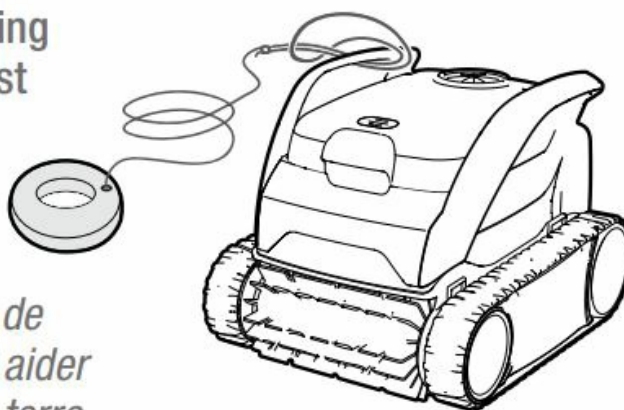


Start Cleaning



GREEN Blinking (< 3h) = Ready to run full cycle
 VERT clignotant (< 3 h) = Prêt à effectuer un cycle complet
 VERDE parpadeante (< 3 h) = Listo para realizar un ciclo complet

GREEN Solid = Fully Charged
 VERT fixe = Complètement chargé
 VERDE fijo = Carga completa

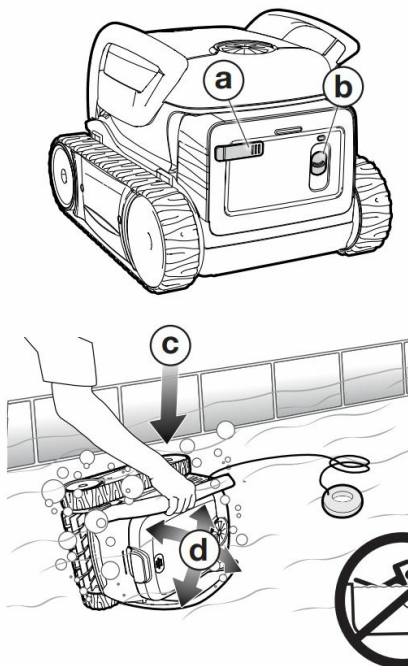

(a)

Replace the protective cap over the charging port.
Remplacer le couvercle de protection sur le port de charge.
Colóquela la tapa protectora al puerto de carga.

(b)

Start the cleaner. Slide the power switch down and release.
Mise en marche du nettoyeur. Glisser l'interrupteur vers le bas et relâcher.

Ponga en marcha el limpiador. Deslice el interruptor de encendido hacia abajo y suéltelo.

(c)

Submerge the cleaner.
Immerger le robot nettoyeur.
Sumerja el limpiador.

(d)

Wait for bubbles to stop completely, then let the cleaner sink to the bottom of the pool. Cleaning cycle will start as soon as the cleaner detects the pool floor.


Attendre l'arrêt complet des bulles, puis laisser le nettoyeur s'enfoncer au fond de la piscine. Le cycle de nettoyage démarrera dès que le nettoyeur détecte le fond de la piscine.

Espera a que las burbujas se detengan por completo y deje que el limpiador se sumerja hasta el fondo de la piscina. El ciclo de limpieza comenzará ni bien el limpiador detecte el fondo de la piscina.

Remove from Pool


– Using the Hook or Floating Leash

OR | O | OU

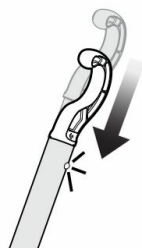


- Attach the hook provided to a standard pool pole (not included).
- Secure the hook to the cleaner handle and lift to the surface.
- Grab the handle to remove from water.

- *Fixer le crochet à une perche de piscine standard (non comprise).*
- *Fixer le crochet à la poignée du nettoyeur et soulever jusqu'à la surface.*
- *Saisir la poignée pour sortir de l'eau.*

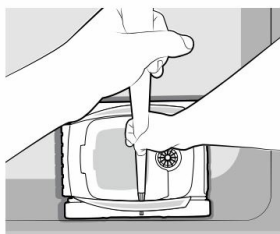


- Fije el gancho suministrado a un palo para piscinas estándar (no incluido).
- Fije el gancho a la manija del limpiador y levántelo hacia la superficie.
- Saque el limpiador del agua sujetándolo de la manija.

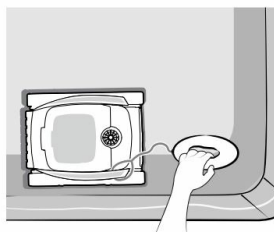

- Grab the floating ring and pull cleaner toward the surface
- Remove the cleaner from the water by the handle



- *Saisir l'anneau de flottaison et tirer le nettoyeur vers la surface*
- *Retirer le nettoyeur de l'eau en utilisant la poignée*

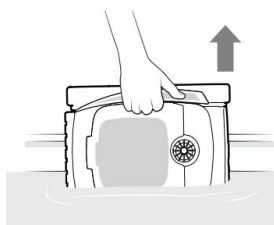

- Sujete el anillo flotante y tire del limpiador hacia la superficie
- Quite el limpiador del agua usando la manija

Cleaning and Storage

- Remove filter canister and rinse.
- *Retirer la cartouche filtrante et rincer.*
- Retire el cartucho del filtro y enjuáguelo.

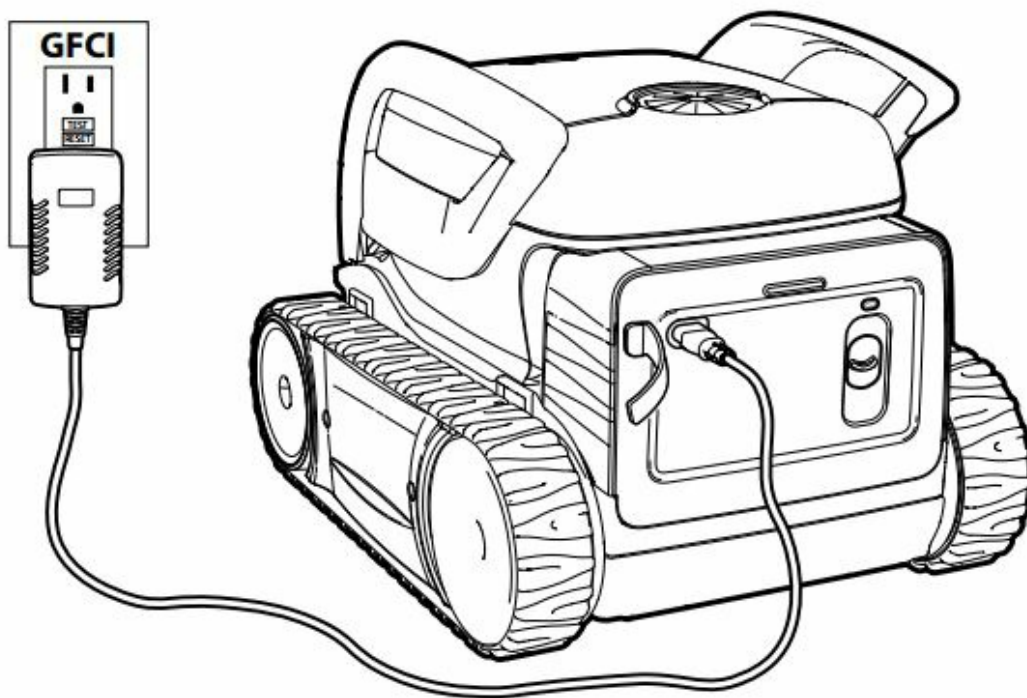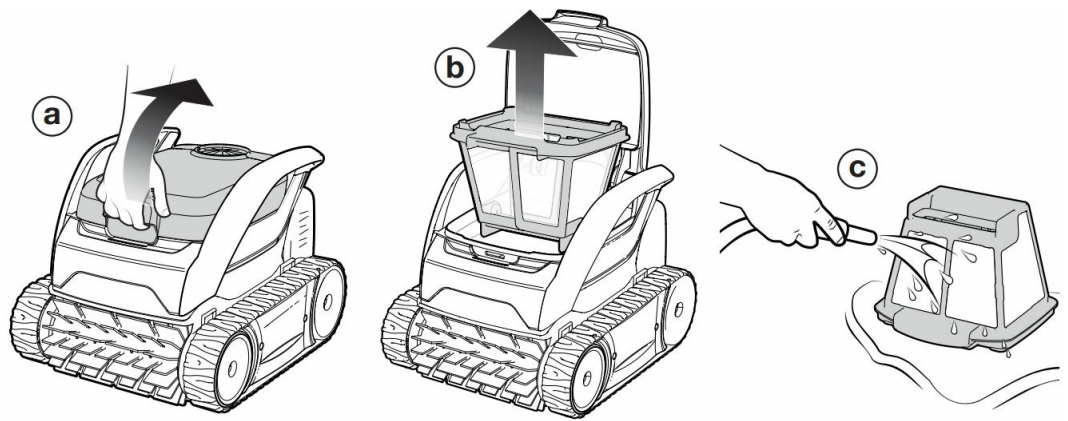

IMPORTANT: Dry the cleaner before charging.

- Charge after each use and store out of direct sunlight.
- Replace the protective cap when cleaner is not charging
- Fully charge cleaner before winterizing. Do not leave cleaner drained of charge for excessive periods of time.

For complete instructions and troubleshooting steps, please read the owner's manual.

Zodiac Pool Systems LLC

2882 Whiptail Loop # 100
Carlsbad, CA 92010, USA
PolarisPool.com | 1.800.822.7933

Zodiac Pool Systems Canada, Inc.


2-3365 Mainway
Burlington, ON L7M 1A6, Canada
PolarisPool.ca | 1.800.822.7933

A Fluidra Brand

©2024 Zodiac Pool Systems LLC. All rights reserved. ZODIAC® is a registered trademark of Zodiac International, S.A.S.U., used under license. All other trademarks are the property of their respective owners.

Read More About This Manual & Download PDF:

Documents / Resources

 <p>POLARIS PIXEL™ Compact Cordless Robotic Cleaner Robot nettoyeur autonome filaire compact Robot limpiador autónomo compacto</p>	<p>Polaris PX300CPR PIXEL Compact Cordless Robotic Cleaner [pdf] User Guide PX300CPR PIXEL Compact Cordless Robotic Cleaner, PX300CPR, PIXEL, PX300CPR Compact Cordless Robotic Cleaner, PIXEL Compact Cordless Robotic Cleaner, Compact Cordless Robotic Cleaner, Compact Cordless Cleaner, Robotic Cleaner, Cleaner</p>
---	---

References

- [Home | Polaris Pool](#)
- [Home | Polaris Pool](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.