

Polaroid
polaroid
Generat
ion 2 Go
Instant
Camera



polaroid Generation 2 Go Instant Camera User Guide

[Home](#) » [Polaroid](#) » polaroid Generation 2 Go Instant Camera User Guide 

Contents

- 1 [polaroid Generation 2 Go Instant Camera](#)
- 2 [Installation instruction](#)
- 3 [Instant Camera](#)
- 4 [Documents / Resources](#)
 - 4.1 [References](#)
- 5 [Related Posts](#)

Polaroid

polaroid Generation 2 Go Instant Camera



Installation instruction

- A Shutter Button
- B Lens

- C Viewfinder & Selfie Mirror
- D Flash | Self-timer | Double Exposure Button
- E Film Door Button
- F Flash
- G ON OFF Button
- H Film Counter Display
- I Wrist Strap Loop
- J Photo Eject Slot
- K USB-CTM Charging Port & Battery Level Indicator



Have a problem or question?

Contact our Customer Support Team

USA/Canada

usa@polaroid.com +1-212-219-3254 or visit polaroid.com/help

EU/Rest of World

Made in China for, and distributed by, Polaroid International B.V. 1013 AP, Amsterdam, The Netherlands. POLAROID, the Color Spectrum, and the Classic Border Logo are protected trademarks of Polaroid. ©2023 Polaroid. All rights reserved.

Polaroid Go

Instant Camera

Generation 2

Quick Start Guide

1. Turn on the Polaroid Go camera by pressing the ON / OFF button. The film counter display will show you how many photos you have left. It should be at '0'.
2. Slide the film door button across and pull the door open.
3. Match the arrows on the film cassette with the arrows indicated in the camera. Slide the thick end of the cassette in first and let it drop into place. Leave the pull tab on as you will need that later to remove the empty film pack.



4. Close the film door until it clicks. The dark slide covered by the film shield will eject.
5. Remove the dark slide and allow the film shield to roll back in.
6. Aim at your subject and press the shutter button. The flash will trigger automatically. Be careful you don't cover the flash with your finger.



7. Try a selfie. The viewfinder has its own reflective selfie mirror. Place yourself in the middle of it then take the photo.
8. The photo will eject underneath the film shield. Leave it there for 5 seconds. Then gently lift the film shield and let it roll back in. Remove the photo.
9. Don't shake the photo! Place your photo in a dark place or face down on a flat surface to shield it from light. Follow the development time on the film pack.



Documents / Resources



[polaroid Generation 2 Go Instant Camera](#) [pdf] User Guide
Generation 2 Go Instant Camera, Generation 2, Go Instant Camera, Instant Camera, Camera

References

- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.