



polk Audio React Sub 7 Inch Wireless Subwoofer for React Series Soundbars User Guide

[Home](#) » [polk](#) » polk Audio React Sub 7 Inch Wireless Subwoofer for React Series Soundbars User Guide 

Contents

- [1 polk Audio React Sub 7 Inch Wireless Subwoofer for React Series Soundbars](#)
- [2 TECHNICAL ASSISTANCE](#)
- [3 What's in the Box](#)
- [4 Connect Your Subwoofer](#)
- [5 Connect the subwoofer](#)
- [6 I Do Not Hear Sound from My Subwoofer](#)
- [7 Updating your subwoofer](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

The logo for Polk Audio, featuring the word "polk" in a bold, lowercase, sans-serif font, followed by a registered trademark symbol (®).

polk Audio React Sub 7 Inch Wireless Subwoofer for React Series Soundbars





TECHNICAL ASSISTANCE

- North America:
- The United Kingdom and Ireland:
- Netherlands customers: Other countries:
- Email: polkcs@polkaudio.com
- Polk FAQs: polk.custhelp.com
- 800-377-POLK(7655)+44 2890279830
- +31 402507800
- + 1-410-358-3600
- In all other countries, refer to polk-eu@mailmw.custhelp.com for support contact details.

Polk Audio is a DEi Holdings, Inc. company. Polk Audio and Polk are registered trademarks of Polk Audio, LLC. All other trademarks, product names, logos, and brands referenced herein are the property of their respective owners.


What's in the Box

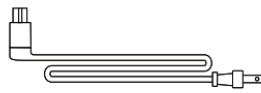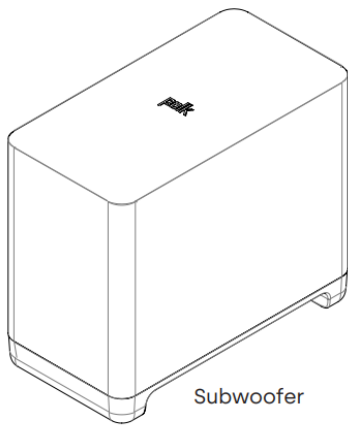

Documentation


Position your subwoofer

 1. Unpack the subwoofer and power cable.
2. Place the subwoofer along the same wall as the TV, no more than 30 ft (10m) from the soundbar.
3. Connect the power cord to the back of the subwoofer.
4. Connect the other end of the power cord to an AC power outlet.

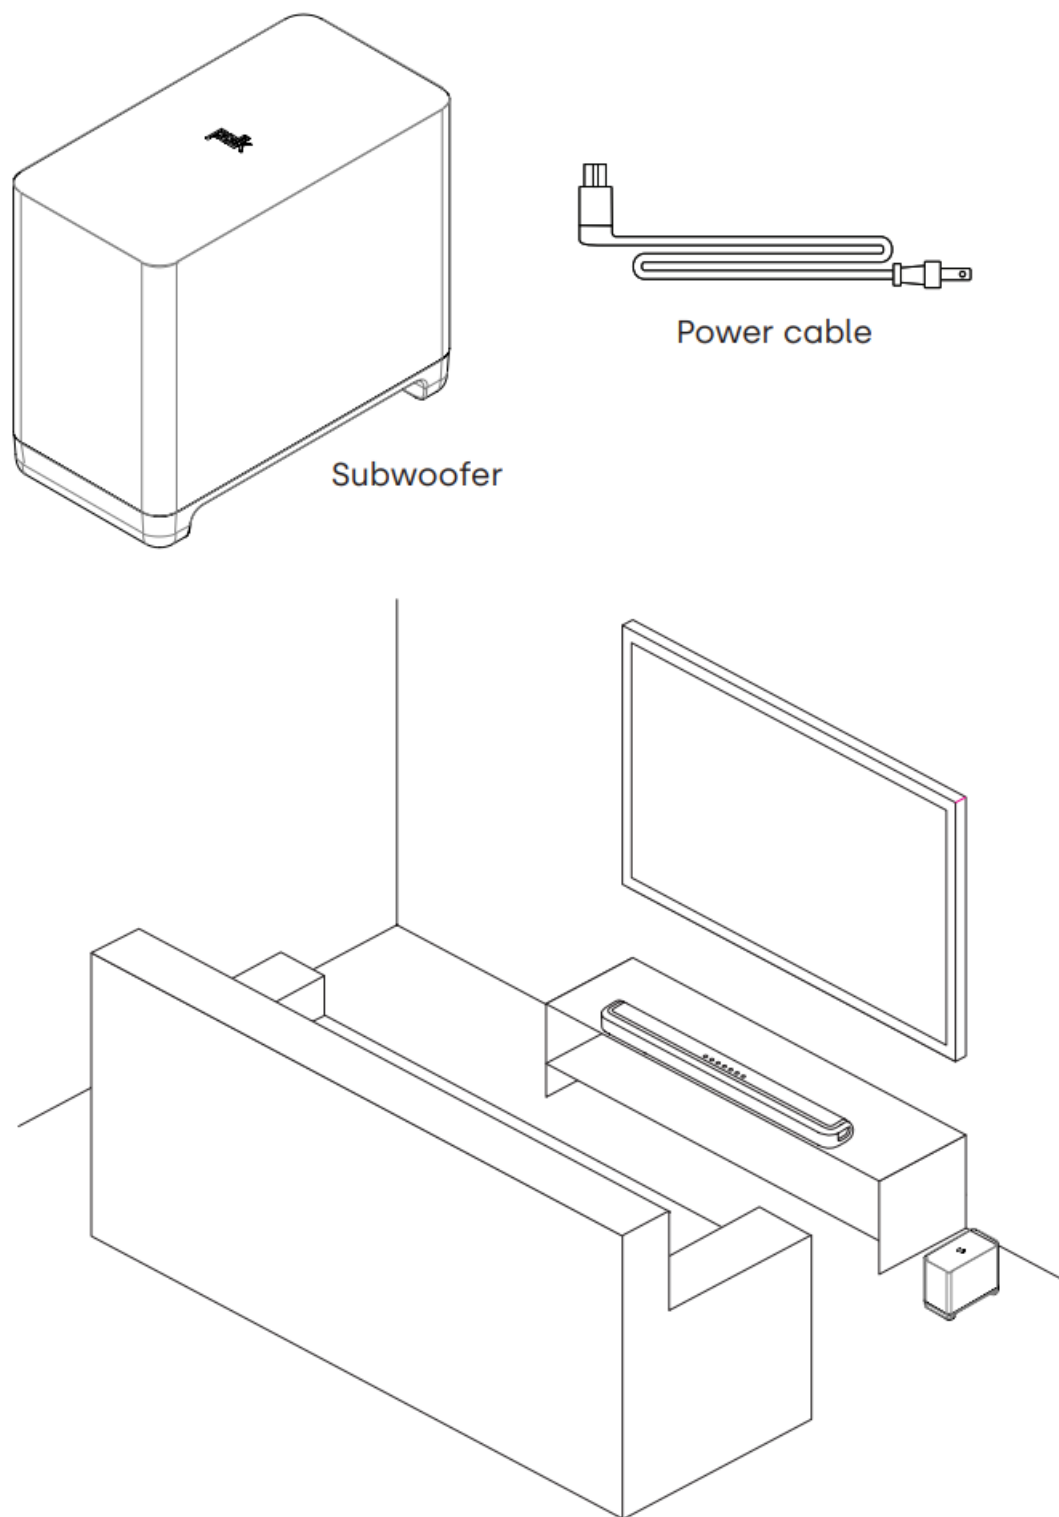


Connect Your Subwoofer

- Enter pairing mode on the soundbar
- Press and hold the CONNECT button on the back of the soundbar for about four seconds.

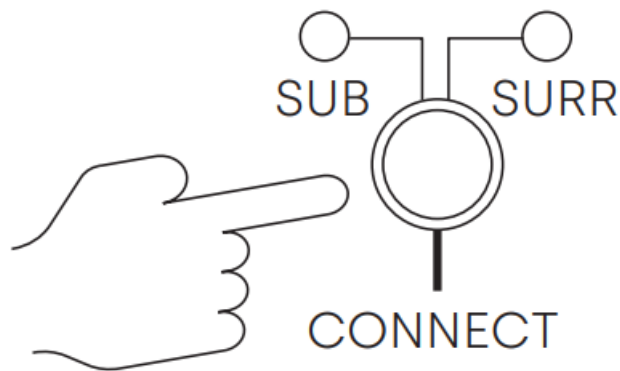

Connect the subwoofer

- Press and hold the CONNECT button on the back of the subwoofer for about four seconds.

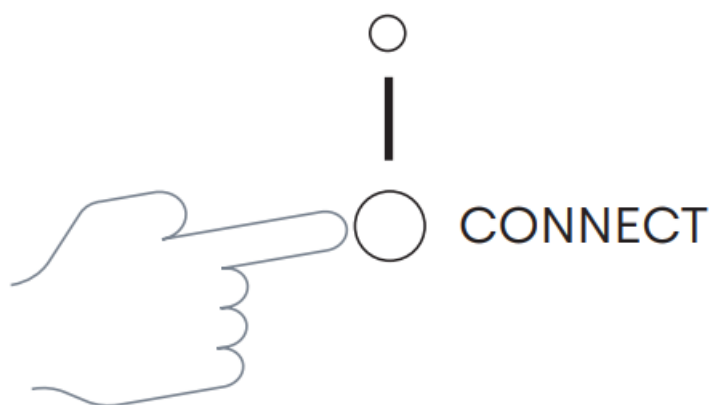

- Press and release the CONNECT button on the back of the soundbar to complete the pairing.

I Do Not Hear Sound from My Subwoofer

- Check that the soundbar is powered on and playing audio.
- Turn up the bass using the provided Polk remote.
- Check that the power cable is secure in the back of the subwoofer and wall outlet.
- Check that a solid green light is visible on the back of the subwoofer.
- Unplug power from the subwoofer for 30 seconds and then plug back in.
- If the light on the back of the subwoofer is flashing green, you will need to reconnect the subwoofer to the soundbar using the instructions below.

Updating your subwoofer

- The subwoofer is automatically updated whenever your soundbar is connected to
- the Internet and receives an update. Refer to your sound bar's Quick Start Guide and make sure your soundbar is properly connected to your home network.

- For more troubleshooting and information, please visit polkaudio.com/support.

5541 Fermi Court
 Carlsbad, CA 92008
 U.S.A.
www.polkaudio.com
 800-377-7655(POLK)

Documents / Resources



[polk Audio React Sub 7 Inch Wireless Subwoofer for React Series Soundbars](#) [pdf] User Guide
 REACTSUB, WLQREACTSUB, Audio React Sub 7 Inch Wireless Subwoofer for React Series Soundbars

References

-  [Polk Audio® | Great Sound for All](#)

[Manuals+.](#)