



Polk S2 Sound Bar with Wireless Subwoofer User Guide

[Home](#) » [polk](#) » Polk S2 Sound Bar with Wireless Subwoofer User Guide 

Contents

- [1 Polk S2 Sound Bar with Wireless Subwoofer](#)
- [2 Technical Assistance](#)
- [3 What's in the Box](#)
- [4 Connecting Your Signa S2 to Your TV](#)
- [5 Remote Control](#)
- [6 Sound Bar Top Panel](#)
- [7 Sound Bar Back Panel](#)
- [8 Sound Bar LEDs](#)
- [9 Optimizing Your Listening Experience](#)
- [10 Music Listening](#)
- [11 Bluetooth button.](#)
- [12 Auto Standby](#)
- [13 Bluetooth standby](#)
- [14 Specifications](#)
- [15 Specifications:](#)
- [16 FAQ:](#)
 - [16.1 Q: How do I re-establish the connection between the sound bar and wireless subwoofer?](#)
- [17 Documents / Resources](#)
 - [17.1 References](#)
- [18 Related Posts](#)

Polk S2 Sound Bar with Wireless Subwoofer

USER GUIDE

Thank you for your Polk purchase. If you have a question or comment, please feel free to call or email us.

Technical Assistance

 
In North America, call Polk Customer Service at
800-377-POLK(7655) (M–F, 9 a.m.–5:30 p.m. EST)

Outside the US, call +1-[410-358-3600](tel:410-358-3600)
Email: polkcs@polkaudio.com

Polk Audio
1 Viper Way
Vista, CA 92081

The complete owner's manual can be found online at www.polkaudio.com


What's in the Box

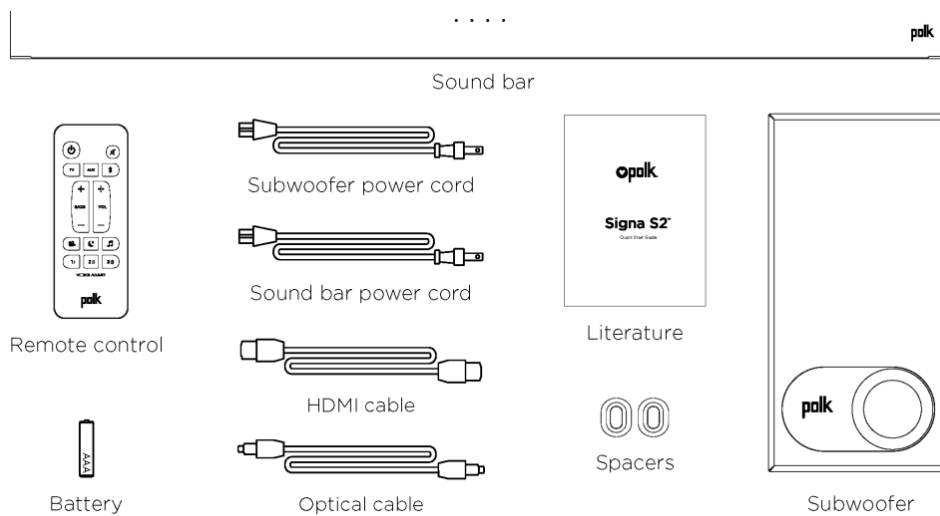


- Sound bar
- Subwoofer
- Remote control
- Sound bar power cord
- Subwoofer power cord
- HDMI cable
- Optical cable
- AAA Battery
- Literature
- Spacers

Connecting Your Signa S2 to Your TV

 1. Is an HDMI port on your TV labeled "ARC"?

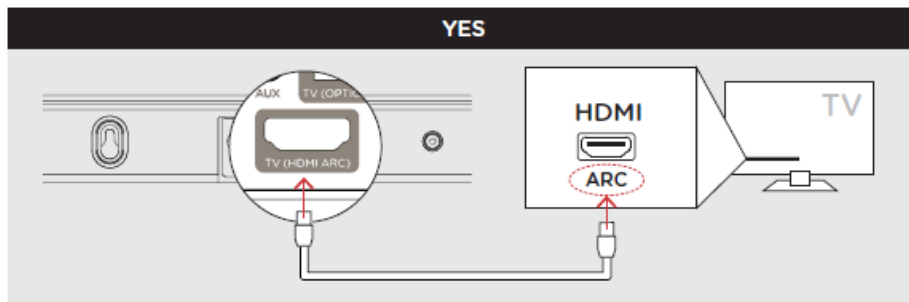

 Connect the included HDMI cable to the HDMI ports labeled with “ARC” on both the TV and the sound bar.

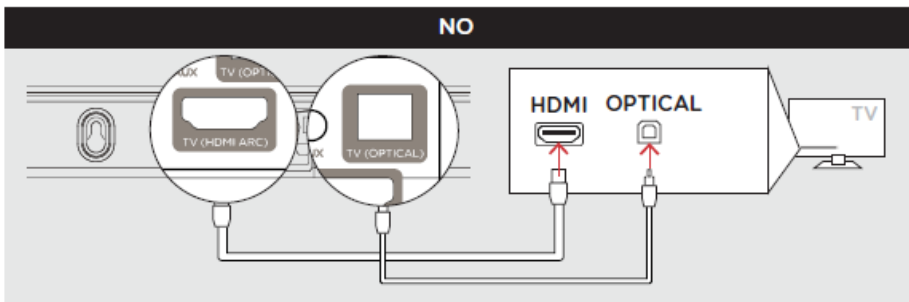


Connect the an Optical cable between the TV and sound bar.


Connect the included HDMI cable to any available HDMI port on the TV and to the “TV ARC” port on the sound bar.

NOTE: HDMI (ARC) and optical supports Dolby 5.1 decoding

 
2. Remote battery installation: Insert the provided AAA battery.

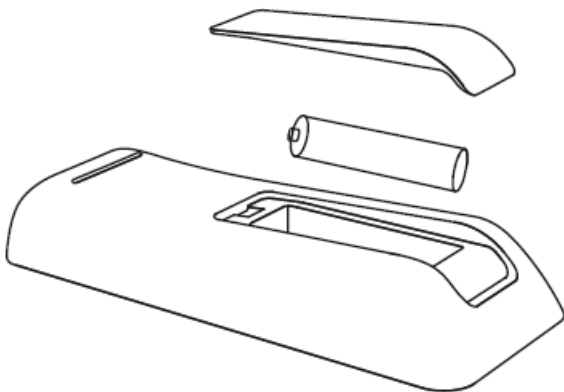

 3. Connect the sound bar power cord to an AC outlet

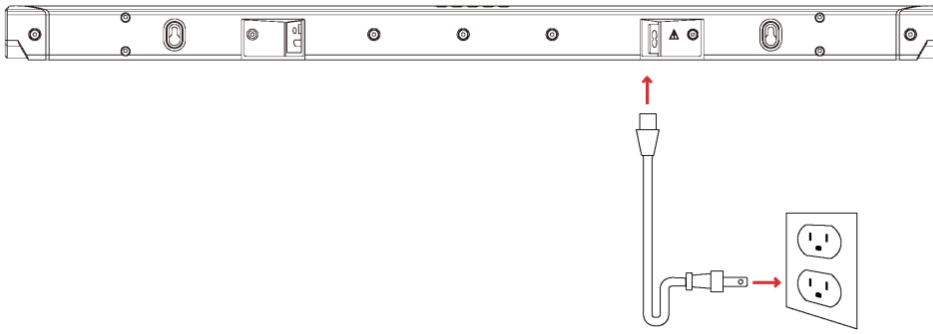

 4. Position subwoofer and connect to an AC outlet (for best performance place on the same wall as the TV)

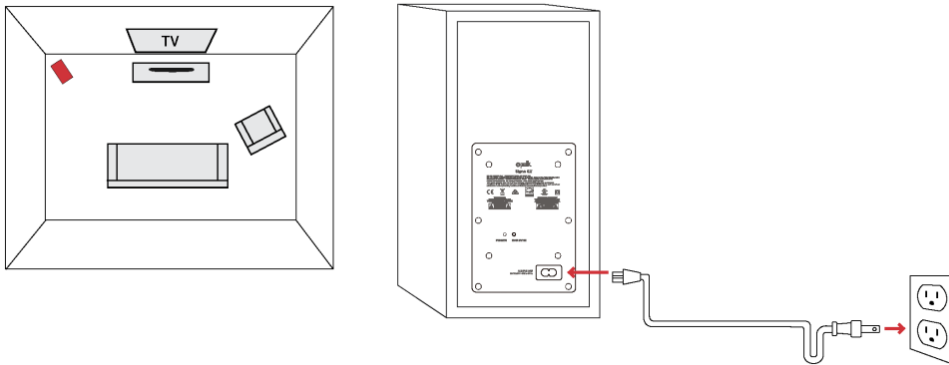

NOTE: The Signa S2 sound bar and wireless subwoofer are preset at the factory to work together. Should your wireless subwoofer stop receiving an audio signal, follow these instructions to re-establish the connection:

 
1. Turn on your sound bar.
2. Press and hold the BAR SYNC button on the back of the subwoofer for 3 seconds.
3. Simultaneously press and hold Bluetooth and VOL + buttons on the sound bar for 5 seconds.

The sound bar will search for a connection while the first and second LEDs on the sound bar will flash intermittently. The lights will stop flashing when the sound bar and subwoofer connect. If the sound bar and subwoofer fail to connect, the first and second LEDs will flash together 5 times. Repeat steps above to establish a connection.


5. Turn on your sound bar
Press the Power button **POWER** on the sound bar or remote.

NOTE: Make sure TV internal speakers are **OFF**


Remote Control

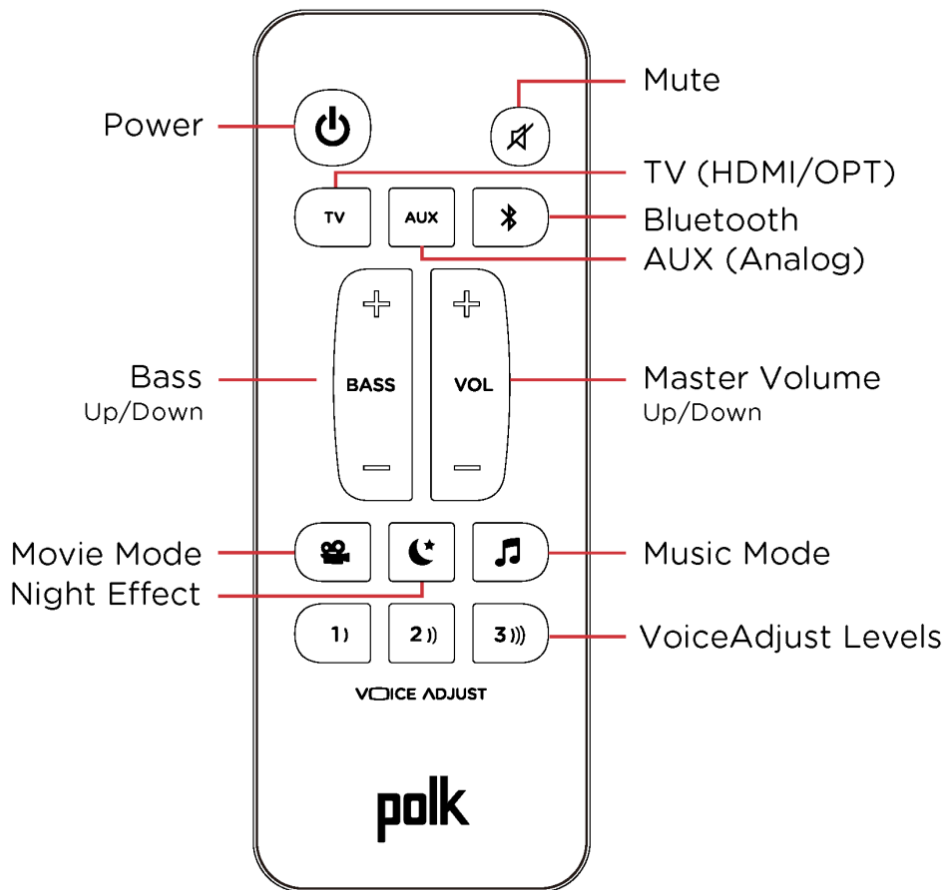

Sound Bar Top Panel

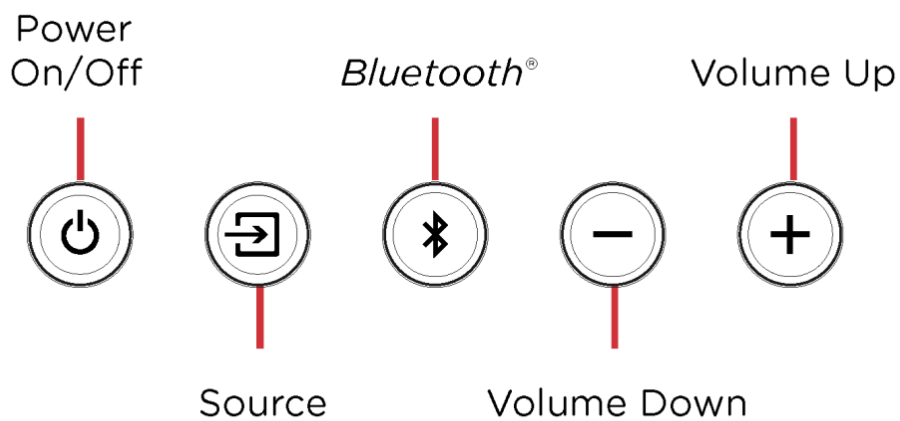 


Sound Bar Back Panel

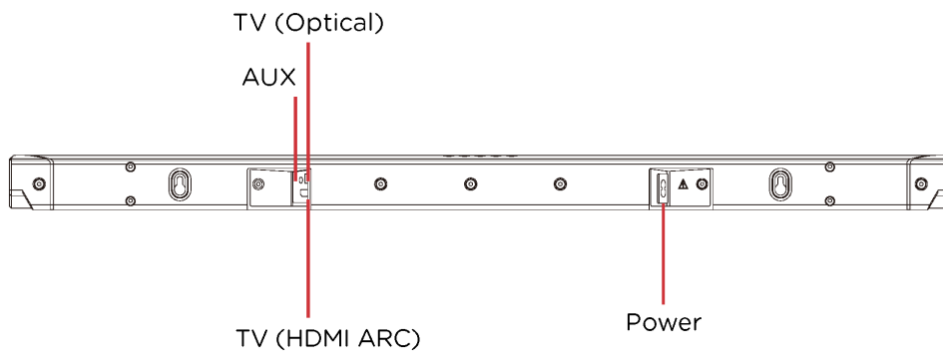 

Sound Bar LEDs

 The Signa S2 has a horizontal row of LED lights that provide status indications, like source, volume and listening modes.

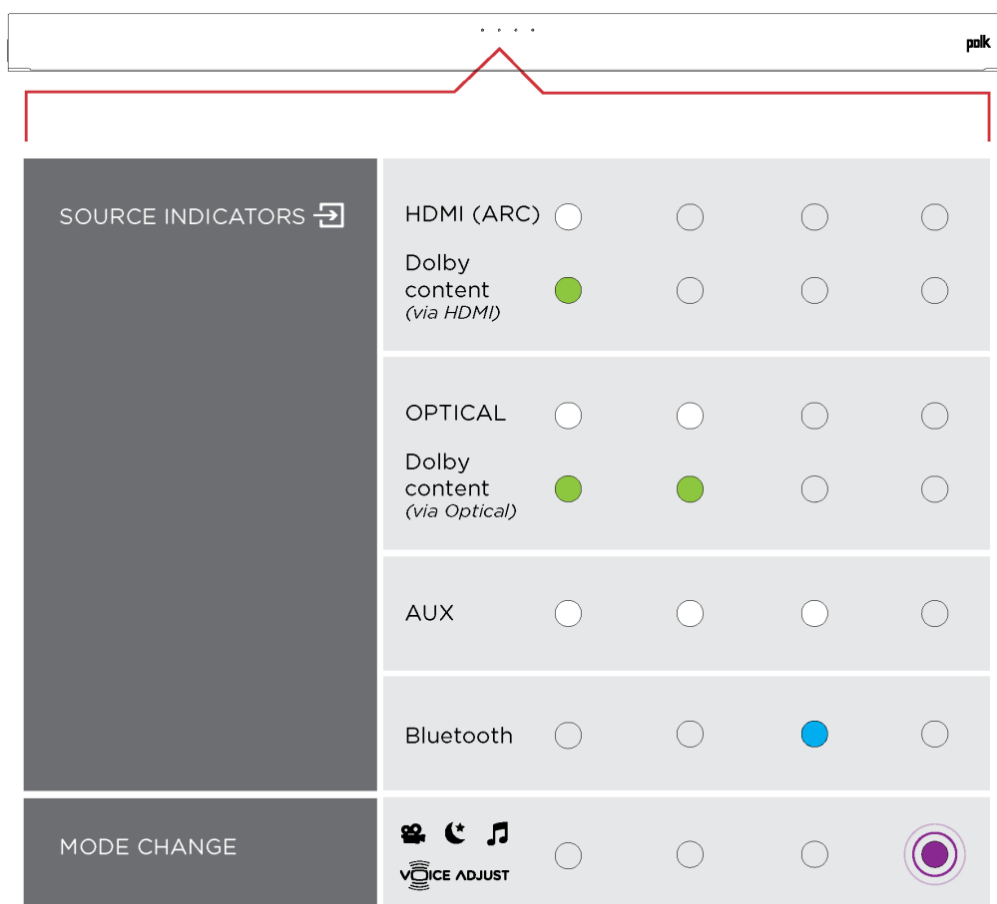

Optimizing Your Listening Experience

Bass Control

 
Control Bass Volume Levels

Easily adjust bass volume for more or less impact.



Movie Mode

Enhances audio reproduction in TV and movies.

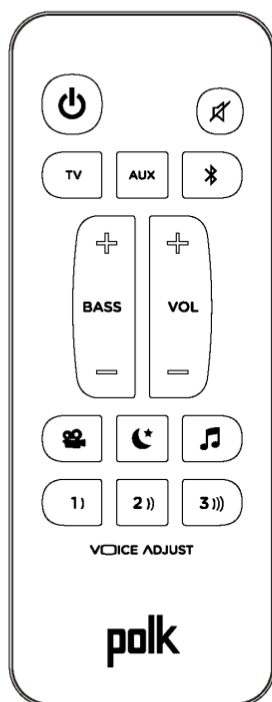

Music Mode

Enhances audio whenever you're listening to music, or watching TV or movies that have music playing in them.



Night Effect

Reduces bass and volume dynamics while improving voice intelligibility for low-volume listening.



Control Dialogue Volume Levels

Isolate and adjust the voice channel level to reproduce clear, crisp dialogue.

Music Listening

How to Set Up Bluetooth

1. To enable Bluetooth, press the Bluetooth button on the sound bar or remote control. A blue LED will pulse on the sound bar.



2. Go to the Bluetooth devices section on your phone, tablet or computer and select Polk Signa S2. The LED is solid blue when Bluetooth is connected.

NOTE: To take control when another device is connected, press

Bluetooth button.

How to hear your TV again: When you are finished using Bluetooth, press the source button on the sound bar or remote (TV, AUX).

Auto Standby

When there is no input signal and operation for 15 minutes, this unit automatically enters the standby mode.

Bluetooth standby

When Bluetooth connection is made from a registered Bluetooth device, this unit turns on automatically.

1. Press and hold the [TV] button for approximately 5 seconds.
(The default setting is "O_I").

Specifications

Sound bar

Power supply: AC 100 – 230 V, 50/60Hz

Operating temperature: 5 C – 35 C ° °

Power consumption: 40 W

Power consumption in standby mode: 0.3

Power consumption in Bluetooth standby: W 1.6 W

Subwoofer

Power supply: AC 100 – 230 V, 50/60Hz

Operating temperature: 5 C – 35 C ° °

Power consumption: 40 W

Power consumption in standby mode: 0.26 W

Power consumption in Bluetooth standby: 1.1 W

Specifications:

- Brand: Polk
- Model: Signa S2
- Power Output: Sound bar – X watts, Subwoofer – Y watts
- Audio Decoding: Dolby 5.1
- Connectivity: Bluetooth, HDMI ARC, Optical

Manufactured Under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



The Bluetooth .. word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Polk Audio is under license. Other trademarks and trade names are those of their respective owners.




FAQ:

Q: How do I re-establish the connection between the sound bar and wireless subwoofer?



A: Follow these steps if the wireless subwoofer stops receiving an audio signal:

1. Turn on your sound bar.
2. Press and hold the BAR SYNC button on the back of the subwoofer for 3 seconds.
3. Simultaneously press and hold Bluetooth and VOL + buttons on the sound bar for 5 seconds. The sound bar will search for a connection while the first and second LEDs on the sound bar will flash intermittently. The lights will stop flashing when the sound bar and subwoofer connect. If they fail to connect, the LEDs will flash together 5 times. Repeat above steps to establish a connection.

Documents / Resources

 Signa S2™ <small>WIRELESS SUBWOOFER</small>	Polk S2 Sound Bar with Wireless Subwoofer [pdf] User Guide S2 Sound Bar with Wireless Subwoofer, S2, Sound Bar with Wireless Subwoofer, Wireless Subwoofer, Subwoofer
---	--

References

-  [Your Ultimate Resource for Millions of User Manuals](#)
-  [Polk Audio® | Great Sound for All](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.