


[Skip to content](#)

Manuals+

User Manuals Simplified.

polk SR2 React Sub Wireless Subwoofer User Guide

[Home](#) » [polk](#) » polk SR2 React Sub Wireless
Subwoofer User Guide 

polk SR2 React Sub Wireless Subwoofer



Contents

[1 Thank You For Your Polk® Purchase!](#)

[2 What's In The Box](#)

[3 Position Your Subwoofer](#)

[4 Connect Your Subwoofer](#)

[5 I Do Not Hear Sound From My Subwoofer](#)

[6 Updating Your Subwoofer](#)

[7 Customer Support](#)

[8 Documents / Resources](#)

[8.1 References](#)

Thank You For Your Polk® Purchase!

If you have a question or comment, please feel free to contact us.

Technical Assistance

North America: 800-377-POLK (7655)

United Kingdom and Ireland: +44 2890279830

Netherlands: +31 402507800

Other countries: +1-[410-358-3600](tel:410-358-3600)

Email: polkcs@polkaudio.com

 
Polk FAQs: polk.custhelp.com

In all other countries, refer to polk-eu@mailmw.custhelp.com for support contact details.

Polk Audio is a DEI Holdings, Inc. company. Polk Audio and Polk are registered trademarks of Polk Audio, LLC. All other trademarks, product names, logos, and brands referenced herein are the property of their respective owners.

What's In The Box

- Subwoofer

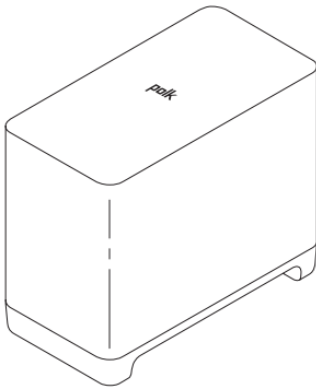

- Power cable

 


- Product literature




Position Your Subwoofer

1. Unpack the subwoofer and power cable.

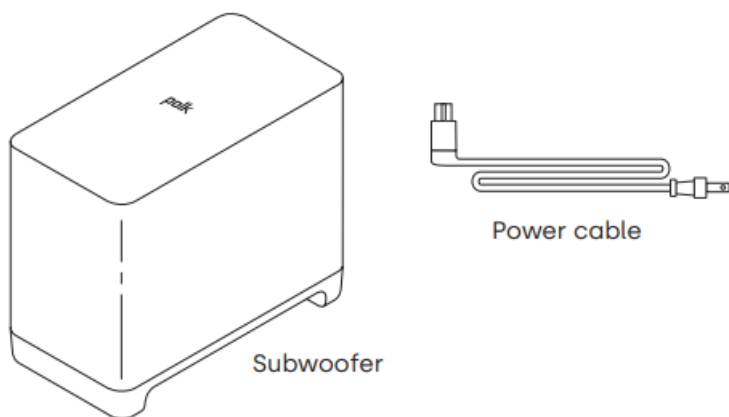

 
2. Place the subwoofer along the same wall as the TV, no more than 30 ft (10m) from the sound bar.
3. Connect the power cord to the back of the subwoofer.
4. Connect the other end of the power cord into an AC power outlet.

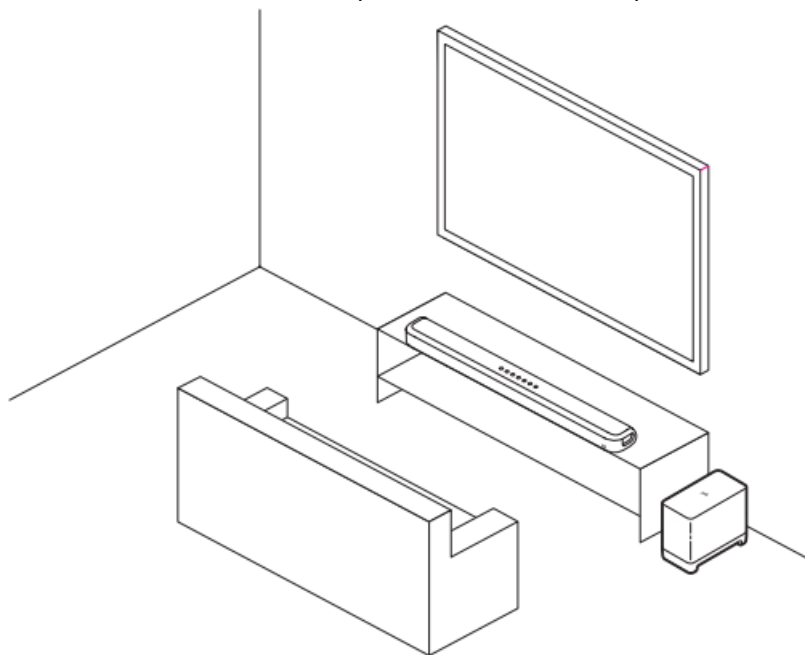

Connect Your Subwoofer


Enter pairing mode on the sound bar

 1. Press and hold the CONNECT button on the back of the sound bar for about four seconds.

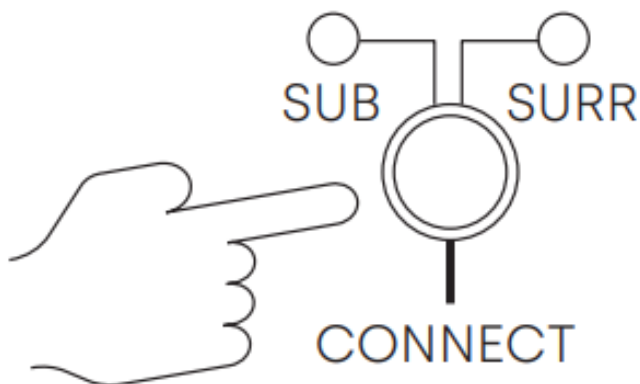

Connect the subwoofer

 2. Press and hold the CONNECT button on the back of the subwoofer for about four seconds.
3. Release the button when the light on the back of the subwoofer is solid green.

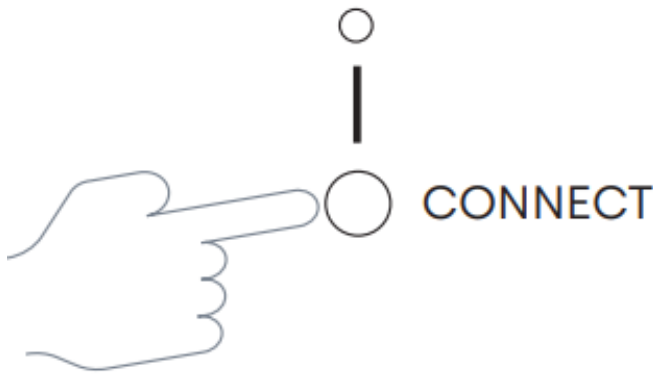

4. Press and release the CONNECT button on the back of the sound bar to complete pairing.

I Do Not Hear Sound From My Subwoofer

- Check that the sound bar is powered on and playing audio.
- Turn up the bass using the provided Polk remote.
- Check that the power cable is secure in the back of the subwoofer and wall outlet.
- Check that a solid green light is visible on the back of the subwoofer.
- Unplug power from the subwoofer for 30 seconds and then plug back in.
- If the light on the back of the subwoofer is flashing green, you will need to reconnect the subwoofer to the sound bar using the instructions in "Connect Your Subwoofer".

Updating Your Subwoofer

The subwoofer is automatically updated whenever your sound bar is connected to the Internet and receives an update. Refer to your sound bar's Quick Start Guide and make sure your sound bar is properly connected to your home network.

For more troubleshooting and information, please visit polkaudio.com/support.

Customer Support

5541 Fermi Court Carlsbad, CA 92008 U.S.A.

www.polkaudio.com

[800-377-7655](tel:800-377-7655) (POLK)



Documents / Resources



[polk SR2 React Sub Wireless Subwoofer](#) [pdf] User Guide

SR2 React Sub Wireless Subwoofer, SR2, React Sub Wireless Subwoofer, Sub Wireless Subwoofer, Wireless Subwoofer, Subwoofer

References

- [P Find Answers](#)
- [💖 One moment, please...](#)
- [P Polk Audio® | Great Sound for All](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.