



poly-planar FS1 Floating Bluetooth Speaker User Guide

[Home](#) » [poly-planar](#) » poly-planar FS1 Floating Bluetooth Speaker User Guide 

Contents

- 1 [poly-planar FS1 Floating Bluetooth Speaker](#)
- 2 [instruction](#)
- 3 [Documents / Resources](#)
- 4 [Related Posts](#)

poly-planar

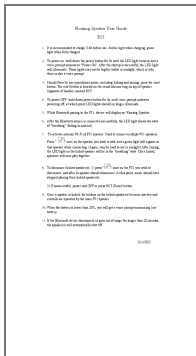
poly-planar FS1 Floating Bluetooth Speaker



instruction

1. It is recommended to charge 3-6h before use. Amber light when charging, green light when fully charged.
2. To power on: hold down the power button for 3s until the LED light turns on and a voice prompt announces "Power On". After the startup is successful, the LED light will illuminate. These lights may not be highly visible in sunlight, which is why there is also a voice prompt.
3. Should there be any operational issues, including linking and pairing, press the reset button. The reset button is located on the round silicone ring on top of speaker (opposite of handle) marked RST.
4. To power OFF: hold down power button for 3s, until voice prompt indicates powering off, at which point LED lights should no longer illuminate.
5. While Bluetooth pairing to the FS1, device will display as: Floating Speaker.
6. After the Bluetooth source is connected successfully, the LED light shows the state of "breathing" (fading in and out).
7. To activate internal Wi-Fi of FS1 speaker: Used to connect multiple FS1 speakers. Press " " once on the speaker you wish to add, and a green light will appear on that speaker while connecting. (Again, may be hard to see in sunlight) After linking, the LED light on the linked speaker will be in the "breathing" state. Once linked, speakers will now play together.
8. To disconnect linked speaker(s): 1) press " " once on the FS1 you wish to disconnect, and after 3s speaker should disconnect. At this point, music should have stopped playing from linked speaker(s). 2) If unsuccessful, power unit OFF or press RST (Reset) button.
9. Once a speaker is linked, the buttons on the linked speaker(s) become inactive and controls are operated by the main FS1 speaker.
10. When the battery is lower than 20%, you will get a voice prompt announcing low battery.
11. If the Bluetooth device disconnects or goes out of range for longer than 20 minutes, the speaker(s) will automatically shut off.

Documents / Resources

	<p>poly-planar FS1 Floating Bluetooth Speaker [pdf] User Guide FS1, Floating Bluetooth Speaker, FS1 Floating Bluetooth Speaker</p>
---	--