



Poly Sync 60 User Guide

[Home](#) » [Poly](#) » Poly Sync 60 User Guide 

Poly Sync 60 User Guide



Contents

1

POWER AND CONNECT




2

 
 
 
Documents / Resources

3


Related Posts

POWER AND CONNECT

- Computer 
- Video camera 
- Power 

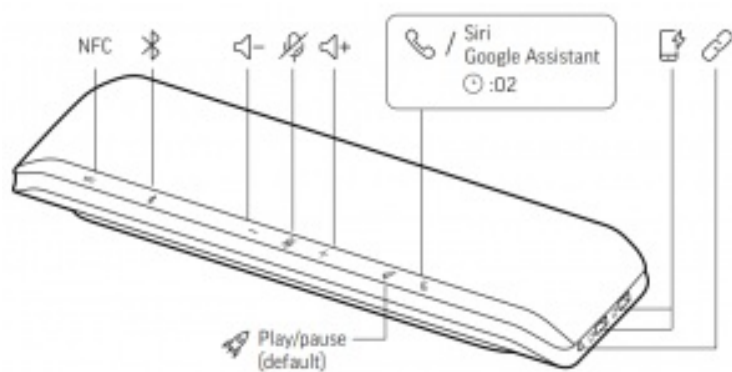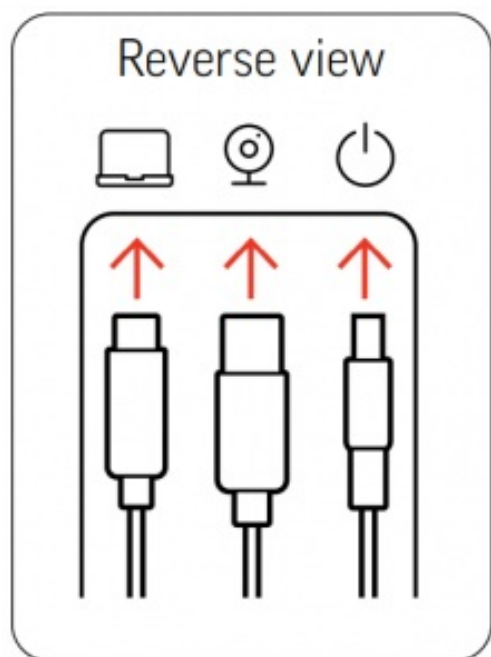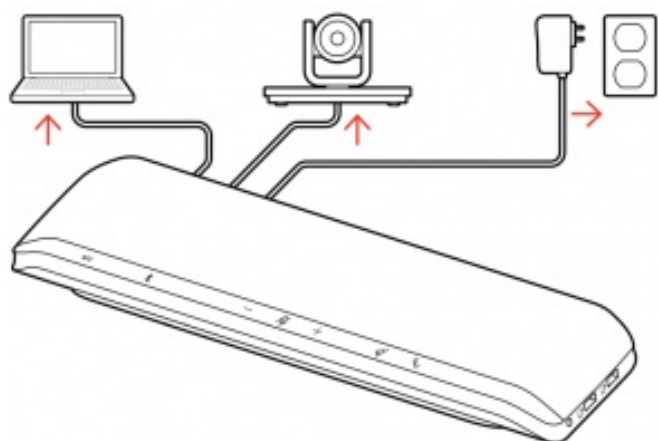

CORDED SETUP

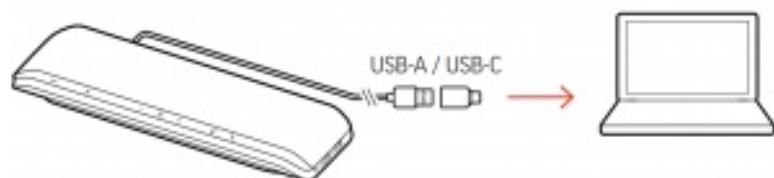 


MOBILE SETUP (PAIR)




CHARGE YOUR PHONE

 
With your speakerphone powered on, charge up to two phones. Connection provides power only.

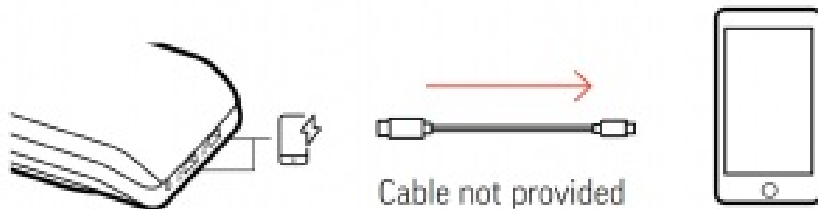

CUSTOMIZE YOUR SPEAKERPHONE

Configure your Rocket  button feature in Poly Lens desktop app. Choose from play/pause music (default), device status check and more.

 ↓ poly.com/lens

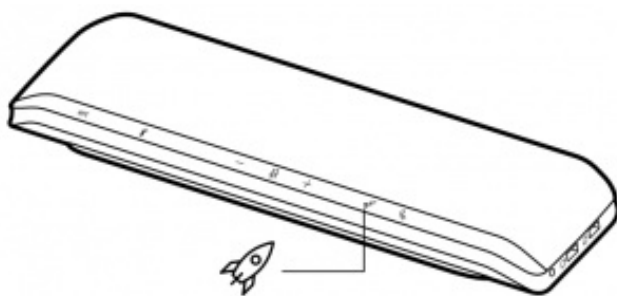


DOWNLOAD SOFTWARE

 
Download Poly Lens to get the most out of your speakerphone.

- Enable features
- Change settings
- Update software
- View user guides

LINK SPEAKERPHONES


To wirelessly connect two Sync 60, press Link  button on both speakerphones for 2 seconds. You hear “connection successful” when linked. Pair one speakerphone to your idle mobile device to make calls or play media.

Note: Ensure your speakerphone USB cable is not connected to a computer.

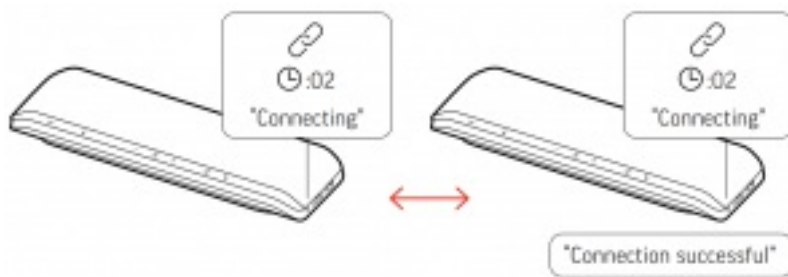

ACCESS VIDEO CAMERA PORT

 Your speakerphone ships with the video camera  port covered. Access the port by removing the cover with the provided tool.

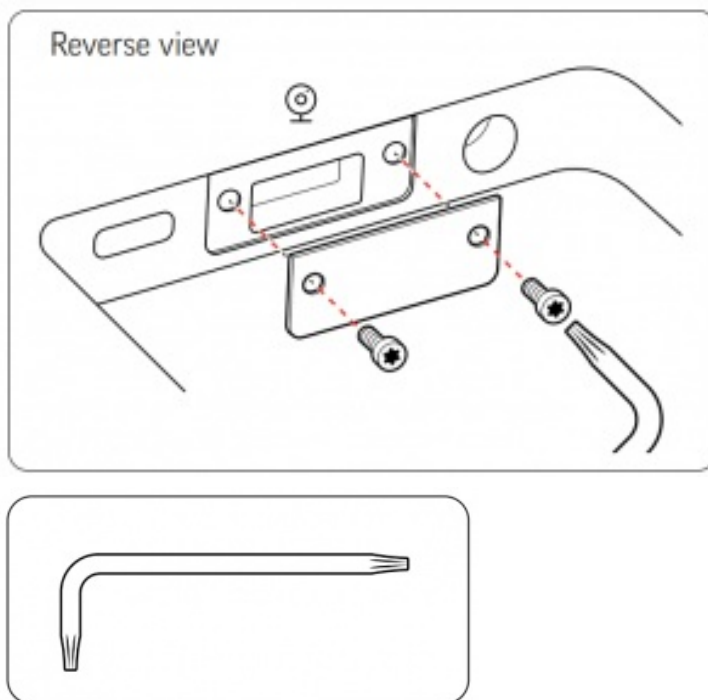

© 2021 Plantronics, Inc. All rights reserved. Poly, the propeller design, and the Poly logo are trademarks of Plantronics, Inc. Bluetooth is a registered trademark of Bluetooth SIG, Inc. and any use by Plantronics, Inc. is under license. All other trademarks are the property of their respective owners.
Manufactured by Plantronics, Inc. 215633-05 01.21 Model ID: SY60/SY60-M

 Recycle Where Facilities Exist





[poly Poly Sync 60](#) [pdf] User Guide
poly, Poly Sync 60

[Manuals+](#).