

poly Sync 20 Series 216867-01 Microsoft Teams USB-A & Bluetooth Smart Speakerphone User Guide

<u>Home</u> » <u>Poly</u> » poly Sync 20 Series 216867-01 Microsoft Teams USB-A & Bluetooth Smart Speakerphone User Guide [™]




Contents

- 1 FIRST-TIME USE
- **2 CHARGE YOUR PHONE**
- **3 CHARGE YOUR SPEAKERPHONE**
- **4 CUSTOMIZE YOUR**
- **SPEAKERPHONE**
- **5 Documents / Resources**
- **6 Related Posts**

FIRST-TIME USE

Activate by connecting the USB cable to the power source until LEDs light up

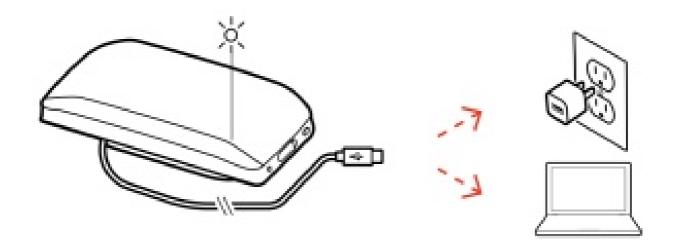

Choose from 3 different setups (1, 2, or 3)


1. MOBILE SETUP (PAIR)





3. USB ADAPTER SETUP

(Poly Sync 20+ only)

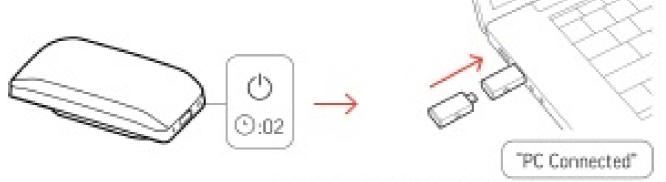


USB connection may vary but function is the same


CHARGE YOUR PHONE

With your speakerphone powered on, connect your phone.*

*Speakerphone battery level must be medium or higher. The connection provides power only.

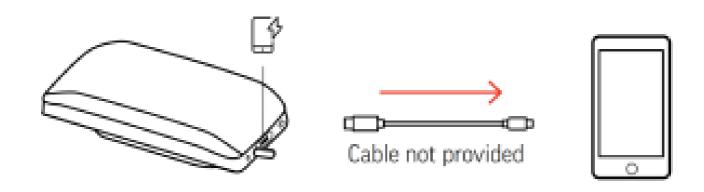


CHARGE YOUR SPEAKERPHONE

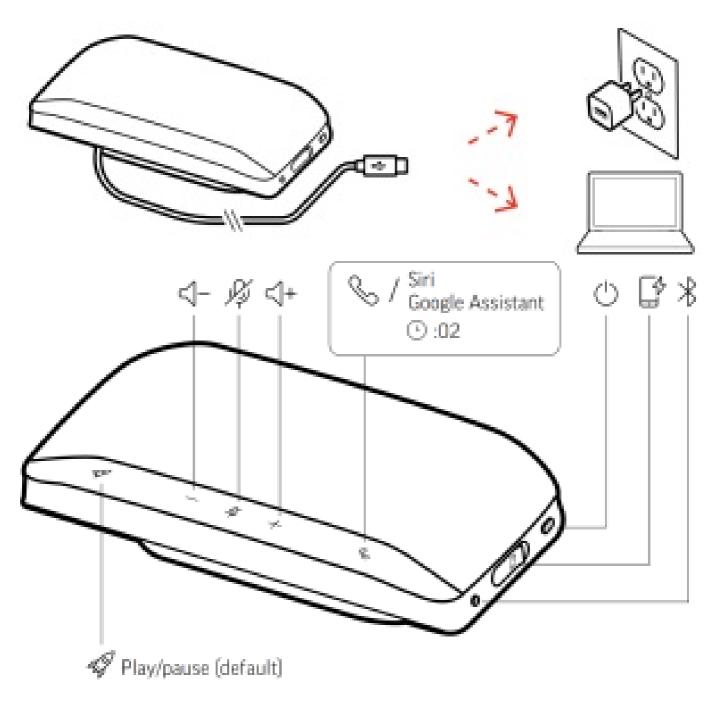



Configure your Rocket button feature in Poly Lens Desktop App.
Choose from play/pause music (default), device status check, and more.



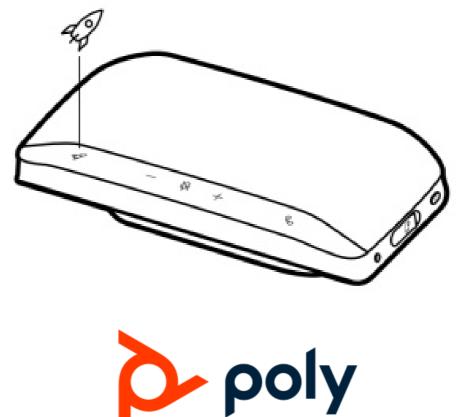

© 2021 Plantronics, Inc. All rights reserved.

Poly, the propeller design, and the Poly logo are trademarks of Plantronics, Inc. Bluetooth is a registered trademark of Bluetooth SIG, Inc. and any use by Plantronics, Inc. is under license All other trademarks are the property of their respective owners.

Manufactured by Plantronics, Inc.

215633-03 Rev C 02.21

Model ID: SY20/SY20-M USB-A/USB-C (may be followed by /BT600 or /BT600C)



Recyclable where facilities

Documents / Resources



poly Sync 20 Series 216867-01 Microsoft Teams USB-A & Bluetooth Smart Speakerphone [pdf] User Guide

Sync 20 Series, 216867-01, Microsoft Teams USB-A Bluetooth Smart Speakerphone

Manuals+,