



Polycom SoundPoint IP 560 VoIP Display Phone User Guide

[Home](#) » [Polycom](#) » Polycom SoundPoint IP 560 VoIP Display Phone User Guide

Contents [[hide](#)]

1 SoundPoint IP 560 VoIP Display Phone

1.1 Polycom SoundPoint IP 550/560

1.2 BASIC PHONE FEATURES

1.3 ANSWERING A CALL

1.4 ENDING A CALL

1.5 REDIAL

1.6 MICROPHONE MUTE

1.7 CALL HOLD AND RESUME

1.8 LOCAL CONFERENCE CALLS¹

1.9 Conference Behavior:

1.10 DO NOT DISTURB (DND)²

1.11 CALL TRANSFER

1.12 CALL FORWARDING³

1.13 CALL LISTS

1.14 VOICE MAIL⁴

1.15 PHONE LOCK

1.16 To lock the phone:

1.17 To unlock the phone:

1.18 SPEED DIALING

1.19 CUSTOMIZING YOUR PHONE

1.20 CONTACT DIRECTORY

1.21 To edit a contact:

1.22 VOLUME ADJUSTMENT

1.23 RING TYPE

1.24 AUDIBLE RINGER

1.25 DISTINCTIVE RINGING / CALL TREATMENT

1.26 HEADSET MEMORY MODE

1.27 To enable Headset Memory Mode:

2 Documents / Resources

2.1 References

3 Related Posts

Polycom SoundPoint IP 550/560

Quick User Guide



Basic Phone Features Customizing Your Phone

Applies to phones running Polycom UC Software 3.3.0 or later.

The content in this guide may vary depending on phone configuration. Particulars and menu options may vary. For detailed information, please consult the comprehensive SoundPoint IP 550/560 User Guide available at: www.polycom.com/support/voicedocumentation/

NAVIGATION

Scrolling: \triangle or ∇

Step in/out of menus, toggle

enabled/disabled: \triangleleft or \triangleright

Enter/Select: \checkmark

Back/Delete: x

BASIC PHONE FEATURES

PLACING A CALL
Using the Handset:

Pick up the handset, and then dial the number. Alternatively, dial the number first, and then pick up the handset.

Using the hands-free Speakerphone:

- With the handset on-hook, press , any assigned line key, or the New Call soft key. Then, enter the number.

or.

- Dial the number, and then press or the Send soft key.

Using the optional Headset:

- With the headset connected, press , any assigned line key, or the New Call soft key.

or

- Dial the number, and then press .

During a call, you can alternate between modes by pressing or or picking up the handset.

ANSWERING A CALL

Handset: Pick up the handset. Speakerphone: Press , the line key, or the Answer soft key.

Headset (optional): Press .

Incoming calls may be ignored by pressing the Reject soft key or during ringing.

ENDING A CALL

Press the End Call soft key or the line key corresponding to the line. Or, depending on the call mode, press , press , or hang up the handset.

REDIAL

Press to call the most recently dialed number.

MICROPHONE MUTE

During a call, press . Mute applies to all modes. You can still hear all other parties while Mute is enabled, but other parties cannot hear you.

To un-Mute, press again.

CALL HOLD AND RESUME

During a call, press or the Hold soft key.

Press again, the Resume soft key, or the line key to resume the call.

LOCAL CONFERENCE CALLS¹

To create a three-way local conference call:

1. Connect to the first party.
2. Press or the Confrnc soft key to create a new call (the active call is placed on hold).
3. Place a call to the second party.
4. When the second party answers, press or the Confrnc soft key again to join all parties in the conference.

Conference Behavior:

- Placing the conference call on hold will place the other conference parties on hold.

- Pressing the Split soft key will split the conference into two separate calls on hold.
- A conference may be created between an active call and a call on hold by pressing the Join soft key.

DO NOT DISTURB (DND)²

Press to prevent the phone from ringing for incoming calls. An icon appears for all lines to confirm that DND is enabled.

Press again to turn off Do Not Disturb.

CALL TRANSFER

1. During a call, press or the Trnsfer soft key (the active call is placed on hold).
2. Place a call to the party to whom you want to transfer the call.
3. After speaking with the second party, press or the Trnsfer soft key to complete the transfer.

Press the Blind soft key to transfer the call without speaking to the second party .

Transfer can be cancelled during establishment by pressing the Cancel soft key. The original call is resumed.

CALL FORWARDING³

To enable call forwarding:

1. Press the Forward soft key from the idle screen or press and select Features > Forward.
2. Select a Forwarding Type. Forward Always, on No Answer, or on Busy.
3. Enter the number of the desired call destination.
4. For No Answer, enter the number of rings before forwarding.
5. Press the Enable soft key. A moving arrow icon appears for that line to show the line is being forwarded.

To disable call forwarding:

Perform steps 1 and 2 above, but select Disable.

Call forwarding is not available on shared lines.

1. – Optional feature. Must be configured from the call server.
2. – Dependant on call server configuration.
3. – Behavior will vary if this feature is configured from the call server.

| 1.888.808.6111 | www.telesystem.us 7.14.22

CALL LISTS

From the idle screen, press for Speed Dial, for Missed Calls, for Received Calls, or for Placed

Calls. Alternatively, press directions followed by Call Lists and Missed, Received, or Placed Calls, as desired. Call information will be displayed.

From this screen, select:

- Edit to amend the contact number before dialing.
- Dial to place the call.

Press More if you would like to select Info, Save, or Clear.

VOICE MAIL⁴

A voice mail icon on the screen, a flashing line key, and a stutter dial tone indicate one or more new voice mail messages.

To listen to voice messages:

1. Press message, and then select Message Center.
2. Press the Connect soft key, and then follow the voice prompts.

PHONE LOCK

Lock your phone with a user password to prevent unauthorized access.

To lock the phone:

1. Press Menu, and then select Settings > Basic > Lock Phone.
2. Chose to Allow ringing when locked or enable DND when locked for incoming calls.
3. Press the Lock soft key to confirm.

To unlock the phone:

1. Press the Unlock soft key
2. Enter the user password and press enter.

SPEED DIALING

To assign a speed dial index, see the CONTACT DIRECTORY section. To dial a contact assigned to a line key, press the corresponding line key.

4 – This feature must be enabled from the call server.

CUSTOMIZING YOUR PHONE

CONTACT DIRECTORY

To add a contact in your local phone directory:

1. Press **Direction**, and then select Contact Directory.
2. Press the More soft key, and then the Add soft key.
3. Enter first and/or last name from the dial pad. Press the 1/A/a soft key to select between numeric and upper / lower case alphanumeric modes. Press the Encoding soft key to access special characters in other languages.
4. Enter a unique contact phone number (not already in the directory).
5. Change the other fields as desired.
6. Press Direction the Save soft key to confirm the changes, and then press to return to the idle screen.

Contacts can be easily added from Call Lists. For more information, see the **CALL LISTS** section.

To search for a contact:

1. Press Directions, and then select Contact Directory.
2. Press the More soft key, and then the Search soft key.
3. Using the dial pad, enter the first few characters of the First or Last name.
4. Press the Search soft key. Dial successful matches from the results.

To edit a contact:

1. Search for the contact (see above).
2. Press the Edit soft key and make the necessary changes.
3. Press the Save soft key to confirm the changes, and then press to return to the idle screen.

VOLUME ADJUSTMENT

Press the volume keys to adjust the call volume of the active mode. Pressing these keys in idle state adjusts the ringer volume.

To conform to regulatory requirements, handset and headset volume will return to a preset level after each call, but the configuration can be changed by your system administrator. Hands-free volume settings will be maintained across calls.

RING TYPE

You can select different rings to match your preferences and distinguish between calls on lines.

To change the incoming ring:

1. Press Menu, and then select Settings > Basic > Ring Type.
2. Scroll to highlight the desired ring type. Press the Play soft key to preview it.
3. Press the Select soft key to accept the highlighted ring type, and then press to return to the idle screen.

If you select Silent ring, press the Line key or Answer soft key to answer incoming calls.

AUDIBLE RINGER

You can select the default alerting destination for incoming calls.

To change the audible ringer:

1. Press Menu, and then select Settings > Basic > Preferences > Audible Ringer.
2. Scroll to highlight the desired alerting destination for incoming calls.
3. Press the Select soft key to accept the highlighted destination, and then press menu to return to the idle screen.

DISTINCTIVE RINGING / CALL TREATMENT

You can set distinctive incoming ringing tones for different contacts in your local directory.

To set a distinctive ring for a local contact :

1. Press Directions, and then select Contact Directory.
2. Search for the contact (see the CONTACT DIRECTORY section).
3. Press the Edit soft key and scroll down to Ring Type.
4. Using ◀ or ▶ , select the desired ring tone.
5. Press the Save soft key to accept the change, and then press to return to the idle screen.

HEADSET MEMORY MODE

For frequent or full-time headset users, there is an option to default all calls to the headset.

To enable Headset Memory Mode:

1. Press and select Settings followed by Basic, Preferences, Headset, and Headset Memory.
2. Scroll down to Enable and press the Select soft key.


To disable Headset Memory Mode:

Repeat steps 1 and 2, but select Disable.

To activate Headset Memory Mode (if enabled): Press twice.



Documents / Resources

	<p>Polycom SoundPoint IP 560 VoIP Display Phone [pdf] User Guide SoundPoint IP 560, VoIP Display Phone, SoundPoint IP 560 VoIP Display Phone, SoundPoint IP 550</p>
---	---

References

-  [Poly | Video Conferencing, Conference Phones & Headsets | Poly, formerly Plantronics & Polycom](#)
-  [Home](#)