



Polygroup 8542007745 Rotating Tree Stand Instruction Manual

[Home](#) » [Polygroup](#) » Polygroup 8542007745 Rotating Tree Stand Instruction Manual 

Polygroup 8542007745 Rotating Tree Stand Instruction Manual



 
Contents

- [1 ROTATING TREE STAND ASSEMBLY INSTRUCTIONS](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 USE AND CARE INSTRUCTIONS](#)
- [4 USER SERVICING INSTRUCTIONS](#)
- [5 SPARE PARTS](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)


ROTATING TREE STAND ASSEMBLY INSTRUCTIONS

Congratulations on purchasing your new rotating tree stand from Polygroup®! Carefully follow the instructions below on how to quickly and easily set up your new stand.

1. Before you start to assemble your tree with rotating tree stand, choose an appropriate location near a wall outlet.
2. Before using or reusing inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
3. Slide the four stand legs upward into slots at the base of the stand until secure. (**Fig. A**)

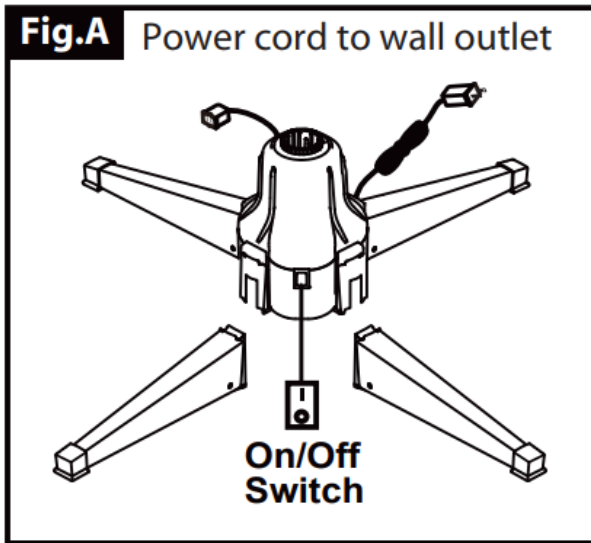


4. Place assembled rotating tree stand on a level surface.
5. Measure the tree pole of your tree. If the pole is less than 1.5" diameter, use the included pole adaptor. Select the small opening pole adaptor for 1" pole diameter and select the larger opening pole adaptor for a 1.25" diameter pole. Insert the pole adaptor into the top of the tree stand by lining up the tabs on the pole adaptor with the slots on the top of the tree stand. (**Fig. B**) Insert it fully and turn clockwise until the arrows on the pole adaptor line up with the arrow designated with the lock symbol on the tree stand. If your tree pole is 1.5" diameter, insert the tree pole directly into the tree stand without a pole adaptor.

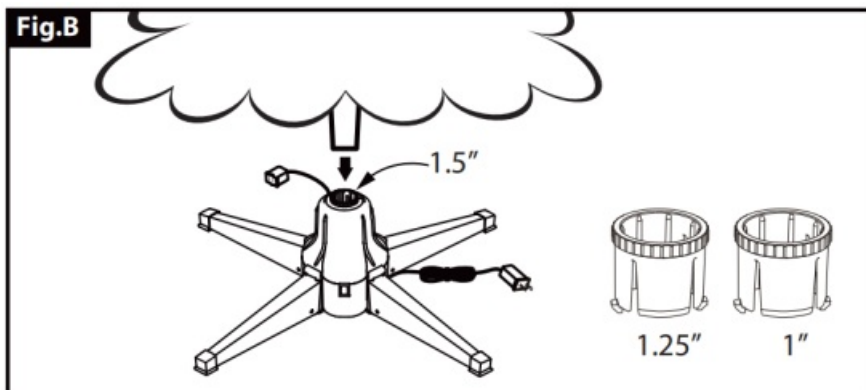 


NOTE: This tree stand only works with 1", 1.25" or 1.5" diameter artificial tree poles. If tree is loose or wobbly when inserted, do not use this tree stand. Other trunk sizes may cause the rotating stand to not function properly.

HINT: To minimize heavy lifting, only insert the bottom section of the Christmas tree into the rotating tree stand first. Once the bottom section is secured in the tree stand, continue putting up the remaining sections.

 
6. Plug in your Christmas tree lights into the yellow labeled outlet receiver on the rotating tree stand. (**Fig. C**)

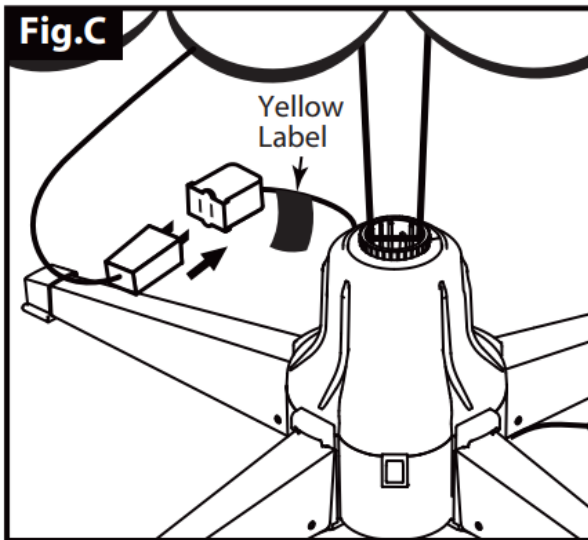

 7. Plug in the green labeled rotating tree stand plug into wall outlet. (**Fig. D**)

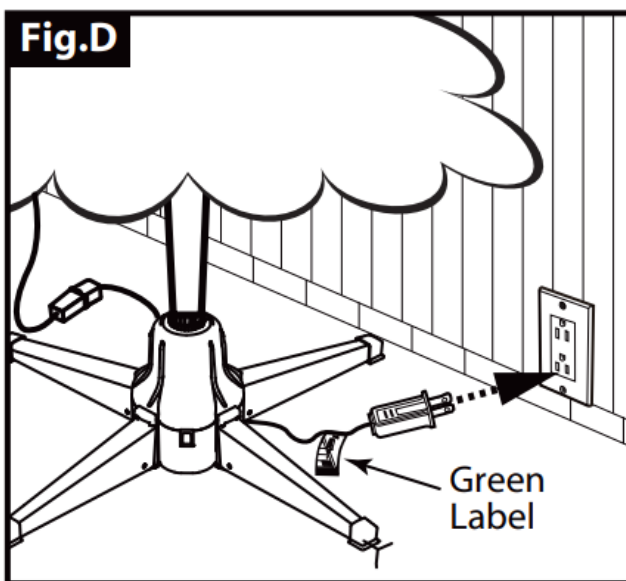

 8. Switch on the motor at the tree stand when you want the tree to revolve. To keep the tree stay still switch off the motor.
9. Turn on the power switch on the rotating tree stand. Your entire tree should now be lit and rotating. (**Fig. E**) If some bulbs do not light or flicker, please refer to your Christmas tree's instruction manual.

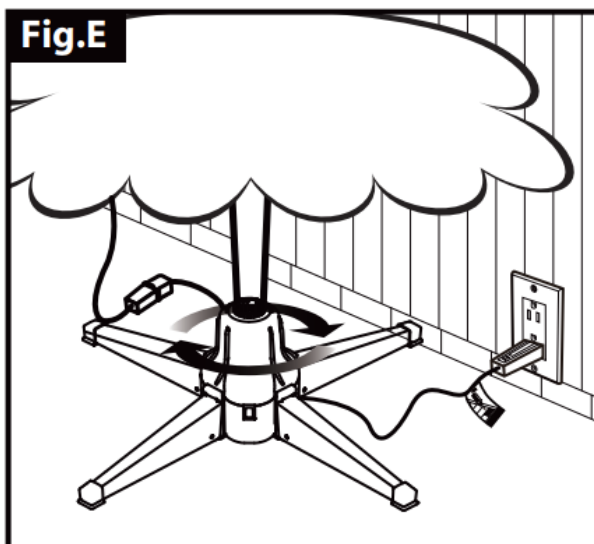

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

 
1. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
2. FOR INDOOR USE ONLY. USE ONLY WITH AN ARTIFICIAL TREE. THIS STAND DOES NOT CONTAIN A WELL FOR WATER.
3. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
4. This seasonal use product is not intended for permanent installation or use.
5. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
6. Do not secure the wiring of product with staples or nails, or place on sharp hooks or nails.
7. Do not let lamps rest on the supply cord or on any wire.
8. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
9. This is an electric product-not a TOY! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
10. Do not use this product for other than its intended use. The stand is to be used just for the Christmas tree.
11. Do not hang ornaments or other objects from cord, wire, or light string.
12. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
13. Do not cover the product with cloth, paper or any material not part of the product when in use.
14. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
15. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions. Follow product marking for proper fuse rating and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
16. Max loading current / power: 3.4 A / 408 W. Electrical Rating for the Stand: AC120V 60Hz Max 0.045A.
17. Load of tree: Max. 90 lbs. Height of Tree: Max. 9.0 feet.
18. Use only with artificial trees with center pole diameter of 1", 1.25" or 1.5".
19. Read and follow all instructions that are on the product or provided with the product.
20. **SAVE THESE INSTRUCTIONS.**

USE AND CARE INSTRUCTIONS

1. When storing the tree stand, carefully remove all other products including the Christmas tree, branches, or bushes, to avoid any undue strain or stress on the product's conductors, connections and wires.
2. When not in use, store neatly in a cool, dry location protected from sunlight.
3. Before using or reusing inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, loose connections, or exposed copper wire.

USER SERVICING INSTRUCTIONS

FUSE REPLACEMENT

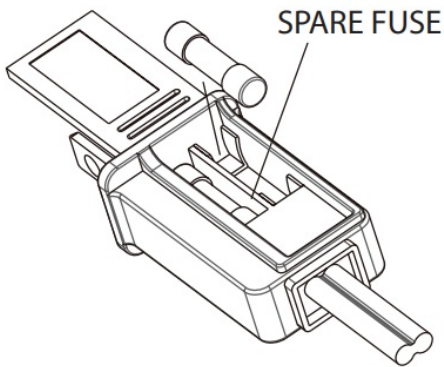

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover, slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully, turn fuseholder over and remove fuse.
4. Risk of fire. Replace fuse only with 5 or 8 Amp, 125 Volt fuse for the power cord set. Correct fuse current value is written on the plug housing.
5. Close fuse cover. Slide closed fuse access cover on top of attachment plug.
6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

SPARE PARTS

Each rotating tree stand includes the following:

- 1 x stand base
- 4 x stand legs
- 2 x tree pole adaptors (1.25" & 1")
- 1 x extra fuse located in the green labeled wall outlet plug

If extra parts are needed, please contact our customer service center.

Documents / Resources



Polygroup 8542007745 Rotating Tree Stand [pdf] Instruction Manual
8542007745 Rotating Tree Stand, 8542007745, Rotating Tree Stand