


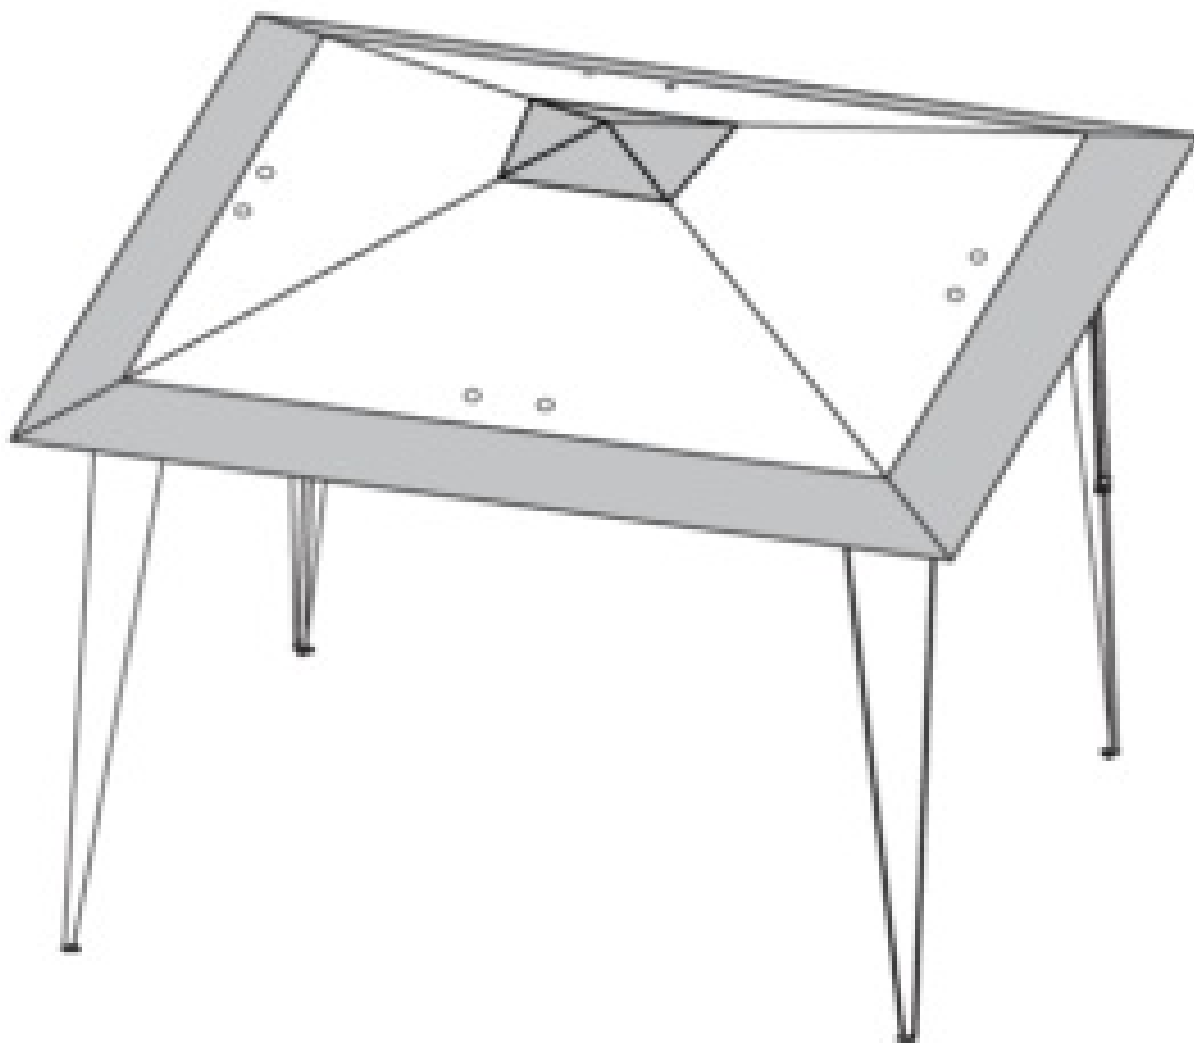
PopupShade 13ft. x 13ft. One Push Gazebo User Manual

[Home](#) » [PopupShade](#) » PopupShade 13ft. x 13ft. One Push Gazebo User Manual 

Contents

- [1 User Manual](#)
- [2 13 ft. x13 ft. One Push Gazebo](#)
 - [2.1 Taking Down the Canopy](#)
 - [2.2 Read More About This Manual & Download PDF:](#)
- [3 Related Posts](#)

User Manual




13 ft. x13 ft. One Push Gazebo

Setting Up the Canopy

1 OPENING THE CANOPY FRAME

- With two persons on the diagonal ends ,lift and partially pull the canopy frame apart.

Note: At this step do not press the center up yet.

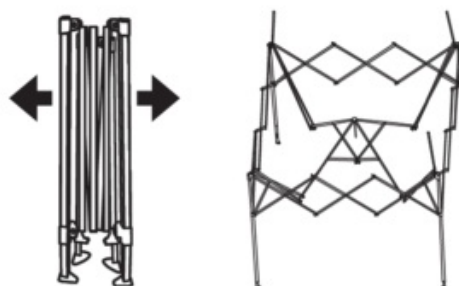


2 ATTACHING THE CANOPY

- Unfold the large canopy top and place it over the open frame.


Be sure the neckband of the large

- Unfold the small canopy top and place it over the open frame. Attach the four canopy corners to the frame top.
- canopy is totally under the small canopy top. Attach the four canopy corners to the awning poles,

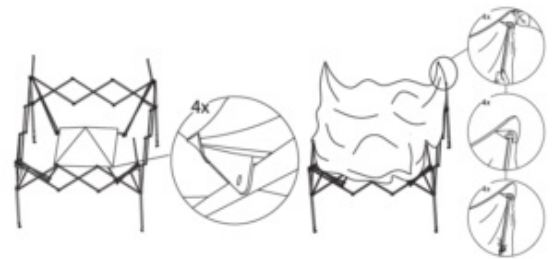


3 LOCKING THE FRAME

- Under the canopy, place one hand on the upper frame and use the other hand to push the central hub straight up until it clicks into the central pole.
- Finish attaching the canopy top inside the canopy frame using the Velcro loops.

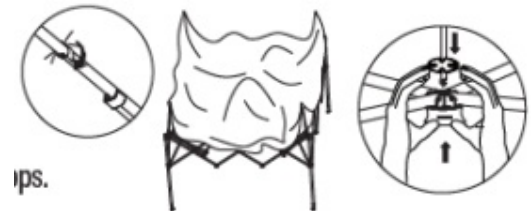


4 SECURING THE CANOPY IN PLACE

- Secure the ropes through the metal rings and have the proper tension by adjusting the plastic adjusters on the ropes.

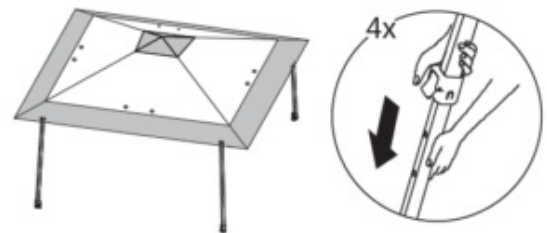

5 SECURING THE CANOPY IN PLACE

- Secure the ropes through the metal rings and have the proper tension by adjusting the plastic adjusters on the ropes.

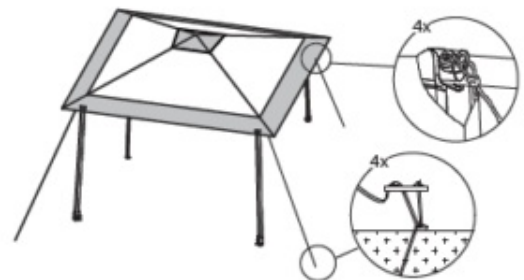

Taking Down the Canopy


1 REMOVING THE STAKES AND RETRACTING THE LEGS

- Pull up all stakes from the ground.
- Press the push button on each leg and retract the legs to their original height.




2 UNLOCKING THE CANOPY

- Go under the canopy, press the Red lock button. Pull down the central hub until it is separated from the central pole.

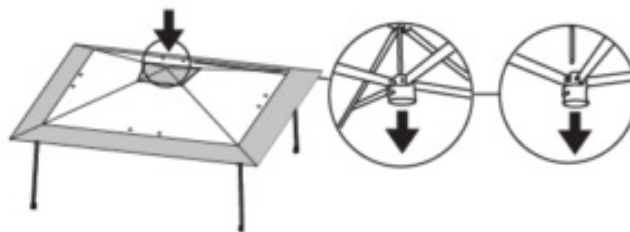


3 FOLDING THE FRAME

- Lift one leg of the frame until the two neighbouring legs are raised off the ground. Push inward until the frame is fully closed.

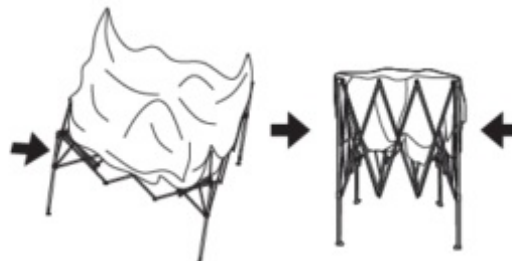



4 PACKING THE CANOPY IN THE STORAGE BAG

- With the canopy feet facing the rollers, slide the wheeled storage bag over the closed canopy frame.
- Close the zipper on the wheeled storage bag..

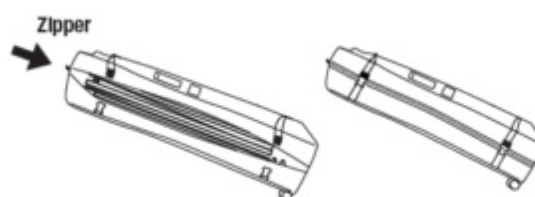

Spare Parts

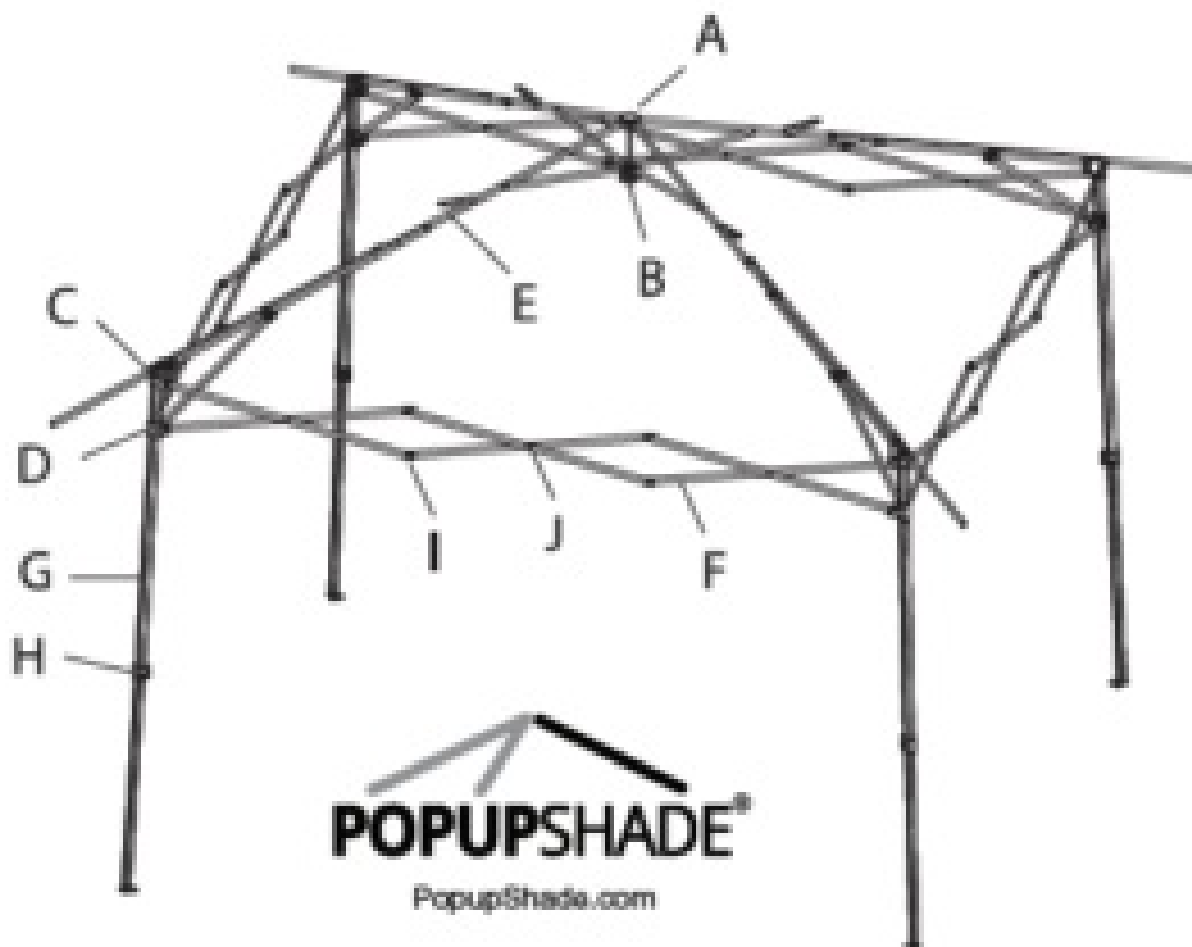

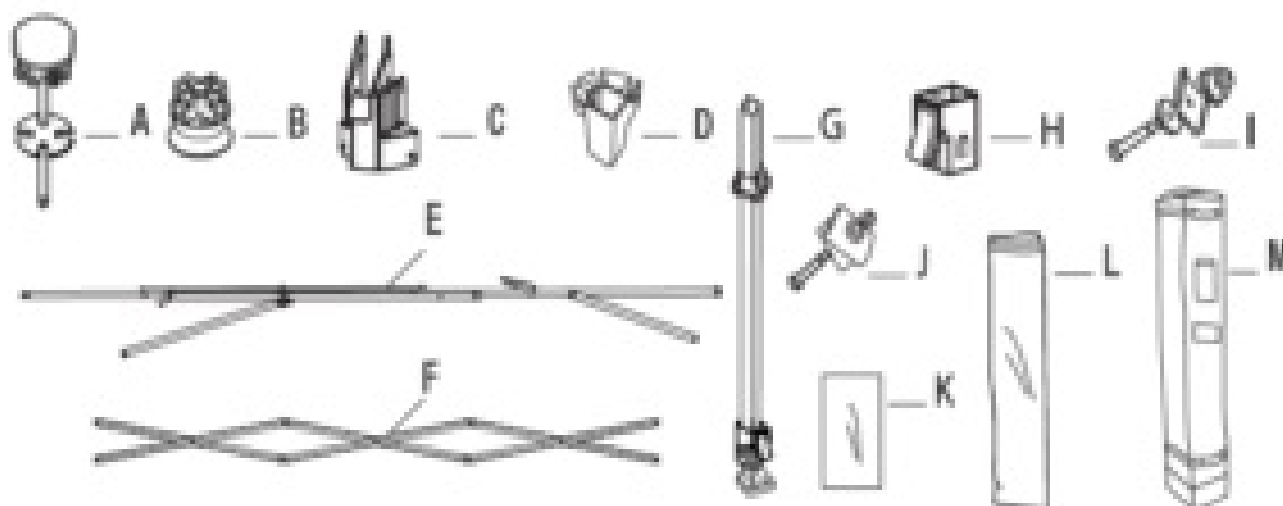

Note: Please refer to the Reference NO. and contact the aftersales service team if any part of your canopy needs to be replaced under warranty.

Part Pic	Description	Reference Number	Applicated mold
A	Central Pole	UNOP82GYMI	CA169 Grey/Royal Blue
B	Central Bottom Hub	UNCH00GYCL	CA169 Grey/Royal Blue
C	Leg Cap	MSLC11GYMI	CA169 Grey/Royal Blue
D	Leg Slider	MSLS11GYMI	CA169 Grey/Royal Blue
E	Ceiling Assembly	MSCA13GYMI	CA169 Grey/Royal Blue
F	Eave Assembly	MSEA13GYMI	CA169 Grey/Royal Blue
G	Leg Assembly	MSLA13GYMI	CA169 Grey/Royal Blue
H	Leg Extender	MSLE11GYBL	CA169 Grey/Royal Blue
I	M5 Bolt Kits	MSBK05GY4P	CA169 Grey/Royal Blue
J	M4 Bolt Kits	MSBK04GY3P	CA169 Grey/Royal Blue
K	Small Top	MSTS13BU00	CA169 Grey/Royal Blue
L	Top Fabric-Gray/Royal Blue	MSTL13GYBL	CA169 Grey/Royal Blue
M	Wheeled Bag	MSCB13BK3W	CA169 Grey/Royal Blue
AA	Stake Kit	UNSK02GA8P	CA169 Grey/Royal Blue
BB	Guy Rope	UNGR57WB08	CA169 Grey/Royal Blue

Read More About This Manual & Download PDF:

PopupShade 13ft. x 13ft. One Push Gazebo [Manual Optimized](#)

PopupShade 13ft. x 13ft. One Push Gazebo [Manual Original](#)

[Manuals+](#).