



PORTRONICS Ruffpad 15 LCD Writing Tablet Instruction Manual

Home » Portronics » PORTRONICS Ruffpad 15 LCD Writing Tablet Instruction Manual



Contents


- 1 PORTRONICS Ruffpad 15 LCD Writing
- **Tablet**
- **2 OVERVIEW**
- 3 Battery Replacement
- **4 Device Overview**
- **5 Specifications**
- 6 FAQ
- 7 Documents / Resources
- 7.1 References
- **8 Related Posts**



PORTRONICS Ruffpad 15 LCD Writing Tablet



OVERVIEW

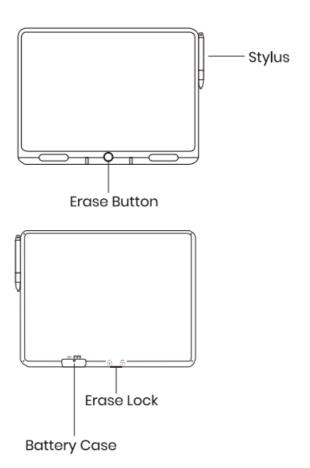

Attention:


The Erase Lock Is Off In Default.

• When Erase Lock is off, The Erase Button is Disabled.


• When Erase Lock is on, The Erase Button is Available.

Battery Replacement


1. Remove the Battery Case.

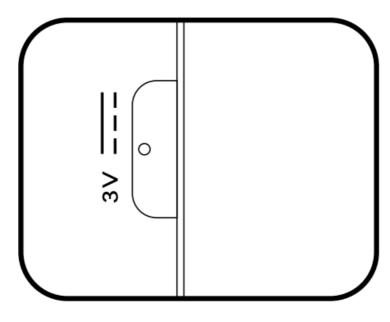


2. Pull Out Battery.

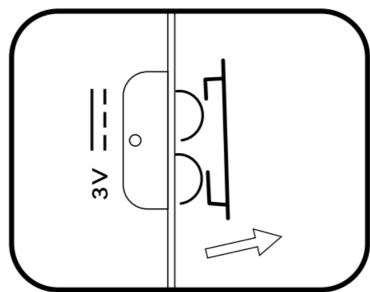

3. Replace the Battery. (Requires one CR2032 (3v) battery.)

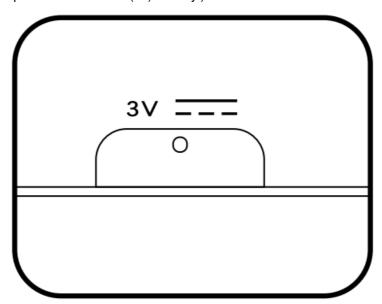

4. Insert Battery Case.

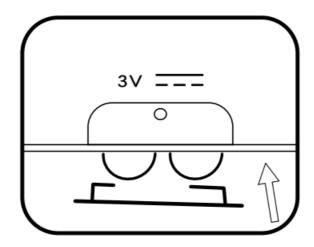

Please Note

- Minimize exposure to direct sunlight to prevent potential damage.
- Keep the product away from water; avoid any contact or submersion.
- The Ruffpad App for smartphones enables users to capture, organize and share photos of notes and drawings on the LCD writing pad. The LCD writing pad itself does not support data or image transfer with other devices.
- Refrain from applying excessive pressure or using sharp objects that may scratch or harm the screen.
- For optimal performance and screen protection, utilize the provided stylus for writing.
- Cleaning: Use a soft cloth for gentle cleaning. Recommended storage temperature: 10 60°C. Operating temperature: 10 40°C.
- Not suitable for children under 3 years of age due to small parts; risk of swallowing. Please supervise children during use.
- www.portronics.com

For Support

• Visit: www.portronics.com

E-mail : <u>help@portronics.com</u>
Contact No.: +91 9555245245

• Working Hours: Mon – Sat, 10 am – 6 pm

· E-Waste Management

• E: info@3rrecycler.com

• For E-Waste & ROHS compliance

• refer to www.portronics.com/ewaste

Device Overview

• Stylus: Used for writing on the pad.

• Erase Button: Clears the screen when pressed.

• Erase Lock: Prevents accidental erasing when enabled.

• Battery Case: Houses the battery for the device.

Specifications

Feature	Details
Battery Type	CR2032 (3V)
Screen Size	15 inches
Operating Temperature	10 – 40°C
Storage Temperature	10 – 60°C

FAQ

Q: How do I replace the battery?
A: Remove the battery case, pull out the old battery replace it with a new CR2032 (3V) battery and reinsert the battery case.
Q: What should I do if the screen is not clearing?
A: Ensure the Erase Lock is off. If the problem persists, check the battery and replace it if necessary.
Q: Can I use any stylus with the Ruffpad 15?
A: For optimal performance and screen protection it is recommended to use the provided stylus.

Q: How do I clean the screen?

A: Use a soft cloth for gentle cleaning. Avoid using any harsh chemicals or abrasive materials.

Q: Is the Ruffpad 15 suitable for young children?

A: The device is not suitable for children under 3 years of age due to small parts that may pose a choking hazard. Please supervise children during use.

Documents / Resources



<u>PORTRONICS Ruffpad 15 LCD Writing Tablet</u> [pdf] Instruction Manual Ruffpad 15 LCD Writing Tablet, Ruffpad, 15 LCD Writing Tablet, LCD Writing Tablet, Writing Tablet, Tablet

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.