

POWER ACOUSTIK CP-71W Wireless Android Auto User Manual

Home » POWER ACOUSTIK » POWER ACOUSTIK CP-71W Wireless Android Auto User Manual



Contents

- 1 POWER ACOUSTIK CP-71W Wireless Android
- **2 Product Usage Instructions**
- 3 USB Update Instructions
- 4 Documents / Resources
 - 4.1 References
- **5 Related Posts**

POWER ACOUSTIK

POWER ACOUSTIK CP-71W Wireless Android Auto



Product Specifications

• Model: Power Acous+k CP-71W

• Update Type: Wireless Android Auto Update

• Release Date: June 2024

• Minimum USB Flash Drive Capacity: 16GB

• USB Specification: USB 2.0 or 3.0

Product Usage Instructions

Warning and Precautions

Before proceeding with the update, ensure to read all instructions carefully and use a blank flash drive formatted in FAT32 from a reputable brand. Using an unreliable flash drive can lead to data corruption.

Download Update Files

Download the update files (71mb) from: **Update Files Download**

USB Update Instructions

- 1. Download the CP-71W Wireless Android Auto update files and save them to your computer.
- 2. Unzip the downloaded file to an empty USB flash drive.
- 3. Insert the USB flash drive into the back USB port of the device with the radio powered on.
- 4. Access the Settings menu, scroll down, and select Serial & Version.
- 5. Click the Update button and follow the on-screen instructions to complete the update.
- 6. Wait for approximately 2 minutes until the update process is complete.
- 7. After the update, verify its success by checking if the Android Auto icon appears on the home screen.

Frequently Asked Questions (FAQ):

- Q: Can I use any USB flash drive for this update?
 - A: It is recommended to use a minimum 16GB USB Type-A flash drive with USB 2.0 or 3.0 specifications from reliable brands like SanDisk or Samsung to ensure smooth data transfer and system compatibility.
- Q: How can I check if the update was successful?
 - A: After completing the update process, verify its success by checking if the Android Auto icon appears on the home screen of your CP-71W device.

Power Acoustik CP-71W – Wireless Android Auto Update (June 2024)

WARNING: Before attempting this update, please read these instructions carefully and don't skip any steps, and be sure to use a blank flash drive (FAT32 format) from a reputable brand (SanDisk, Samsung, etc). If the flash drive is not empty, be sure to format it. You can find instructions on how to format a flash drive HERE,


A minimum 16GB USB Type-A flash drive with USB 2.0 or 3.0 is required. Using a flash drive with unknown USB specification will diminish data transfer and can corrupt the system processors. Use reliable name-brand USB flash drives. We use and recommend SanDisk Crozer, available at Walmart.

Download Update Files (71mb): https://poweracoustik.com/downloads/CP-Z1W_WirelessAndroidAuto_Update.zip

Video Walk Through: https://www.youtube.com/watch?v=BdTMBzv53E

USB Update Instructions

- 1. Download the CP-71W Wireless Android Auto update files and save them to your computer.
- 2. Unzip the CP-71W_WirelessAndroidAuto_Update.zip file to an empty USB flash drive.
- 3. The files you extracted to your USB flash drive should look like this

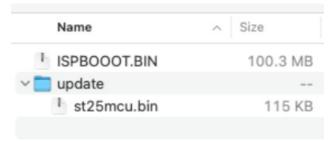

- 4. With the radio powered on, insert the USB flash drive into the back USB port.
- 5. You may get a "No data can be played" message, but ignore and go back to the Home screen.
- 6. Click on the Settings button and scroll down the menu and select Serial & Version.
- 7. Click the Update button, and you will see a window with New Firmware Version pop up and click Update to begin the updating process.
- 8. Please wait approximately 2 minutes, you will see multiple different screens until you finally see the initial setup screen.
- 9. Once you complete the quick setup, your CP-71W is now fully updated!
- 10. You can verify that the update was successful by going to the home screen and seeing if the Android Auto icon has now appeared.

Documents / Resources



References

- * Robot or human?
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.