



POWER-TO-GO WS108 LED Flame Speaker User Manual

[Home](#) » [Power-To-Go](#) » POWER-TO-GO WS108 LED Flame Speaker User Manual 

Contents

 
[1 POWER-TO-GO WS108 LED Flame Speaker User Manual](#)

- [1.1 Product Overview](#)
- [1.2 Specifications](#)
- [1.3 Charging Your Speaker](#)
- [1.4 Pairing the Speaker to Bluetooth Device](#)
- [1.5 Speaker Controls](#)
 - [1.5.1 Music](#)
 - [1.5.2 TF Card Mode](#)
 - [1.5.3 Play/Pause](#)
 - [1.5.4 TWS Mode](#)
 - [1.5.5 LED Flame](#)
- [1.6 Important Safeguards](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

POWER-TO-GO WS108 LED Flame Speaker User Manual




Product Overview

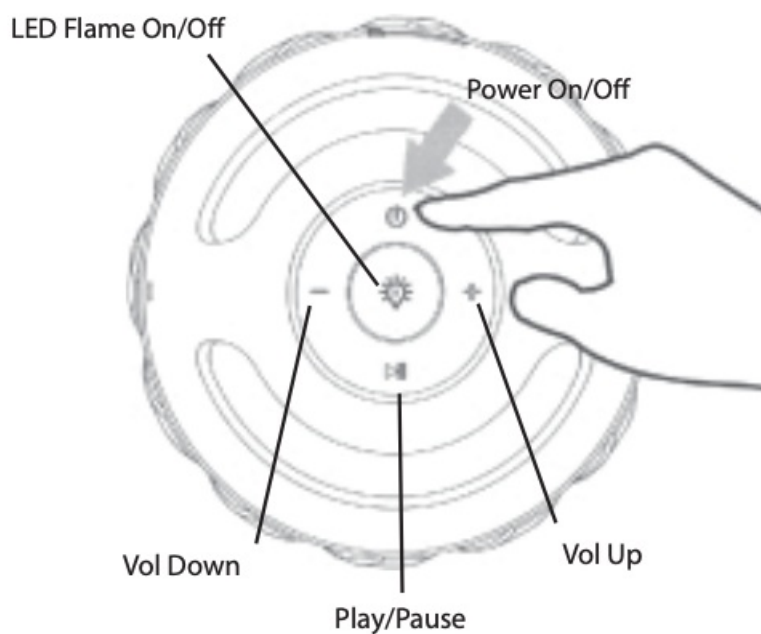

Micro USB Cable



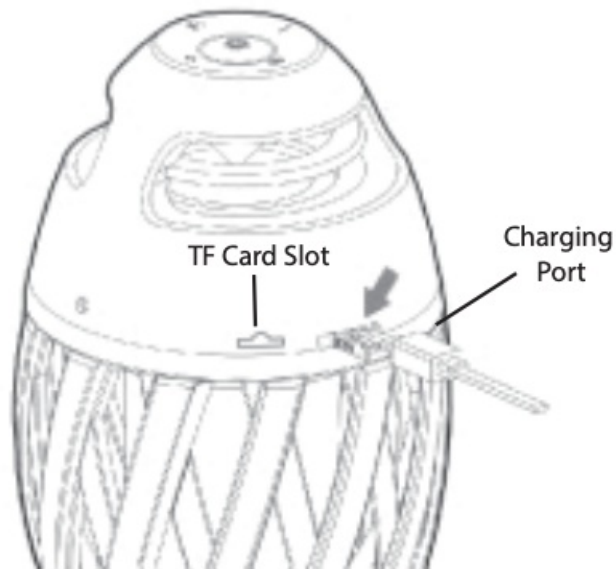 

Specifications

Frequency: 50 Hz-20KHZ

Battery: 1500 mAh Li-Ion

Distance: 33 ft (10m)

Charging time: 4 Hours

 
Playing time: 10 Hours

Charging Your Speaker

The battery must be fully charged prior to use. It takes approximately 4 hours to fully charge your Speaker (from depleted battery).


A. Via AC Adapter/Wall Charger:

Using the provided Micro USB cable, connect your Speaker (micro USB port) to the AC adapter (USB port).

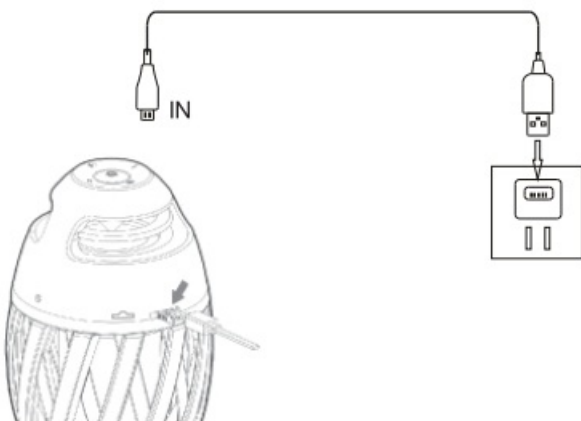

B. Via Computer

 Using the provided Micro USB cable, connect your Speaker (Micro USB port) to the computer/laptop (USB port).

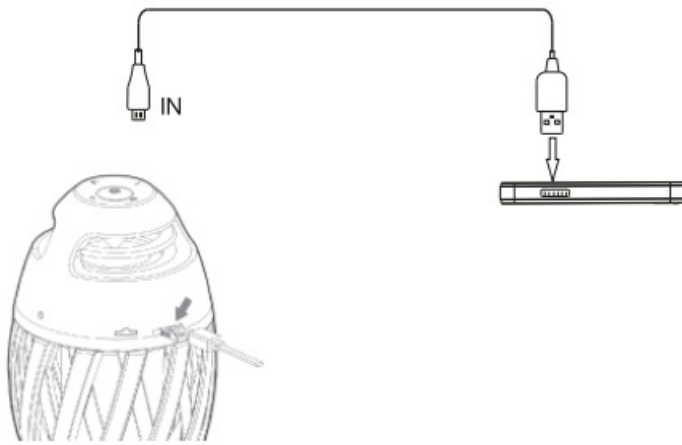

Pairing the Speaker to Bluetooth Device

- Make sure the Bluetooth® function is available on your cell phone. Specific pairing procedures will be different depending on different cell phones. For detailed information, please refer to your cell phone's User Guide.
- After successful pairing, devices will memorize each other. Therefore no pairing will be needed the next time you power up your Speakers.

1. Keep the distance between the cell phone and the speaker within 3 feet (for pairing only).
2. Turn on the speaker by pressing the “Power On/Off” button
3. The tone prompt will sound. The unit will automatically enter into pairing mode.
4. Activate the Bluetooth function of the cell phone to search for the Bluetooth devices. After finishing the search, select “A1+” in the device list displayed.
5. Your A1+ speaker is ready to use.

Speaker Controls

ON/OFF

Press and release the Power On/O button

VOLUME

During a call or when listening to music

Volume+

Press and hold + Button

Volume –

Press and hold – Button

Music

Go to next song

Long Press +

Go to previous song

Long Press –

TF Card Mode

(automatic after inserting TF card)

Go to next song

Press + Button

Go to previous song

Press – Button

Play/Pause

Press ► Button

Play/Pause

Press ► to play/pause the music.

TWS Mode

1. Turn on the Bluetooth mode on your mobile device.
2. Turn on the speakers by pressing the “Power On/O” button
3. On either speaker, press and hold the “LED Flame On/O” button for 3-5 seconds, and wait until you hear a “ding-dong” confirmation tone.

The speakers are now connected, and you can connect your Bluetooth device.

LED Flame

To use the LED flame function, press and release the LED Flame On/O button once. The lamp will turn on to the dimmest setting. There are 3 brightness levels; press and release to change the brightness.

Important Safeguards

- Keep Speaker away from any heat source
- Always adjust the Speaker volume to a suitable level to avoid hearing damage or damage to the unit.
- If not using the Speaker for a long period of time, keep the internal battery charged (charge once every 3 months). This will extend the life of your lithium battery.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by SKL Marketing Inc. is under license. Other trademarks and trade names are those of their respective owners.



Documents / Resources

	POWER-TO-GO WS108 LED Flame Speaker [pdf] User Manual WS108, LED Flame Speaker
--	---