



PowerA 1509756-01 CP5.A Plus Bluetooth Controller User Manual

[Home](#) » [PowerA](#) » PowerA 1509756-01 CP5.A Plus Bluetooth Controller User Manual 



XP5-A PLUS
BLUETOOTH CONTROLLER
USER MANUAL



Contents

1	SETUP
2	CHARGING CONTROLLER + POWER BANK
3	CHARGE LEVEL INDICATOR
4	WIRELESS MODE
5	POWERING OFF
6	WIRED MODE
7	GAMING CLIP
8	INTEGRATED POWER BANK
9	ASSIGNING THE ADVANCED GAMING BUTTONS
10	RESETTING THE ADVANCED GAMING BUTTONS
11	FAQS
12	MOTION WARNING
13	FCC STATEMENT
14	CAN ICES-003(B)/NMB-003(B)
15	MANUFACTURED BY
16	CONTACT/SUPPORT
17	WARRANTY
18	AUSTRALIAN WARRANTY STATEMENT
19	AU WHOLESALE DISTRIBUTOR
20	ADDITIONAL LEGAL
21	REGIONAL COMPLIANCE SYMBOLS
22	DECLARATION OF CONFORMITY
23	Documents / Resources
23.1	References
24	Related Posts


SETUP

For best results, fully charge the controller and power bank prior to first use.


CHARGING CONTROLLER + POWER BANK

- Using the included 6.5ft (2 m) USB Cable, connect the Micro-USB end to the lower port at top of the controller, and connect the Standard USB end to any powered USB source.
- When charging, four LEDs will display the charging level from 25-50-75-100%.


CHARGE LEVEL INDICATOR

Check the battery charge level by pressing the battery status button  on the front lower left of the controller. The LEDs will indicate the current charge level from 25-100% even when the controller is off.

WIRELESS MODE


Move the Wireless/Wired switch on the front center of the controller to BT  which indicates Bluetooth wireless mode.

- If the controller is off, press the MENU button  to turn it on (LED will illuminate).

- Press and hold the Bluetooth sync button  on the back of the controller for 2 seconds to enter pairing mode (LED will flash rapidly).
- Enter the Bluetooth settings on your device and choose the MOGA controller. The pairing LED will turn solid when connected.

NOTE: A previously paired device will automatically pair to the controller when powered on.

POWERING OFF

Hold the menu button  for 5 seconds to turn the controller off and save battery capacity.

WIRED MODE

Move Wireless/Wired switch on the front center of controller to USB  which indicates the wired mode.

- Connect the Micro-USB end of the 11.8" (30 cm) or 6.5ft (2 m) cable to the lower port at top of the controller, and connect another end to your gaming device.
- Gaming device input ports (Standard USB, Micro-USB, USB-C) will determine whether you use a shorter or longer micro-USB cable for wired gaming.
- This MOGA controller supports DirectInput by default but also supports XInput mode. If the initial wired connection is unsuccessful, switch modes by pressing Start + Select for three seconds. Three LED flashes to indicate mode was changed and retained in memory. Repeat process to switch back.

GAMING CLIP

A detachable gaming clip is included for use with gaming on your phone. You can use USB cables with a clip attached for charging or wired mode.

1. Slide MOGA Controller into gaming clip by tipping top edge in first.
2. Push the controller's bottom edge down into the clip until it locks into a notch on the front edge of the controller.
3. To insert the phone, push the top edge of the phone against the top of the phone grip to expand upward.
4. Push the bottom of the phone down flat into place as you reach the top limit of the phone grip.
5. Adjust the phone horizontally to center alignment over the controller, and adjust the viewing angle forward or back.
6. Open the kickstand on the clip when setting the controller down between sessions to prevent tipping.
7. Remove clip by pulling front edge forward to release from the notch.

INTEGRATED POWER BANK

A Power Bank built into the controller allows you to charge your phone during gameplay or while the controller is off.

- Connect the standard USB end of the 11.8" (30 cm) cable to the upper port at top of the controller, and connect another end to your mobile device.

- During gameplay, move the Power Bank switch below the right thumbstick to the right (on) to start charging. If you prefer to use battery power to extend controller usage time rather than charge the phone, move the switch to the left (off).
- To charge a mobile device when the controller is not in use, simply connect a cable between the controller and device to begin charging (Power Bank Switch must be ON).
- Your mobile device will display charge status once connected. If charging does not begin, the power bank battery may be too low: recharge controller.
- The amount of charge available for your phone depends on how much battery capacity remains on the controller when charging begins.

ASSIGNING THE ADVANCED GAMING BUTTONS

1. Press the Orange Program Button on the bottom of the controller for 2 seconds. The LED Connection Indicator will flash, signaling the controller is in assign mode.
2. Press 1 of the following buttons (A/B/X/Y/LB/RB/LT/RT/Left Stick Press/Right Stick Press/D-pad) to re-assign. Then press the Advanced Gaming Button (AGR or AGL) that you wish to assign. The LED connection indicator will stop flashing, signaling that the Advanced Gaming Button has been set.
3. Repeat for the remaining Advanced Gaming Button.

NOTE: Advanced Gaming Button assignments will remain in memory even after being disconnected.


RESETTING THE ADVANCED GAMING BUTTONS

1. Hold the Program Button down for 2 seconds. The LED Connection Indicator will slowly flash, signaling the controller is in assign mode.
2. Press the previously assigned button for 5 seconds, and the function will be cleared.

FAQS

For the latest FAQs, visit [PowerA.com/Support](https://www.powera.com/support)

PROBLEM: My controller will not power on?

SOLUTION: Confirm the controller is fully charged by pressing the battery status button  on the front lower left of the controller. Plug into recharge as needed.

PROBLEM: I do not see the MOGA controller listed in mobile devices' Bluetooth settings?

SOLUTION: Press and hold the Bluetooth sync button  on the back of the controller for 2 seconds to enter pairing mode (LED will flash rapidly).

PROBLEM: The integrated power bank is not functioning?

SOLUTION: Confirm the controller has more than 25% charge and the Power Bank button is switched on.

MOTION WARNING

Playing video games can make your muscles, joints, skin, or eyes hurt. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation, or eyestrain:

- Avoid excessive play. Take a 10 to 15-minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.

- If your hands, wrists, arms, or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomforts during or after play, stop playing and see a doctor.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

CAN ICES-003(B)/NMB-003(B)

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science, and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference;
2. This device must accept any interference, including interference that may cause undesired operation of the device

MANUFACTURED BY

ACCO Brands USA LLC, 4 Corporate Way, Lake Zurich, IL 60047 ACCOBRANDS.COM | POWERA.COM |
MADE IN CHINA

CONTACT/SUPPORT

For support with your authentic PowerA accessories, please visit PowerA.com/Support.

WARRANTY

2-Year Limited Warranty: Visit PowerA.com/Support for details.

AUSTRALIAN WARRANTY STATEMENT

This product comes with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If purchased within Australia or New Zealand, this product comes with a one-year warranty from the date of purchase. Defects in the product must have appeared within one year from the date of purchase, in order to claim the warranty. All warranty claims must be facilitated back through the retailer of purchase in accordance with the retailer's return policies and procedures. Any expenses incurred, as a result of returning the product to the retailer of purchase are the full responsibility of the consumer.

AU WHOLESALE DISTRIBUTOR

Level 2, 2 Darling Street South Yarra, Australia VIC 3141 bluemouth.com.au Email: support@bluemouth.com.au +61 (3) 9867 2666

ADDITIONAL LEGAL

© 2021 ACCO Brands USA LLC. MOGA, the PowerA logo, and the MOGA by PowerA logo are trademarks of ACCO Brands Corporation. All other trademarks are the property of their respective owners.

REGIONAL COMPLIANCE SYMBOLS

More information is available via web-search of each symbol name.



The **WEEE** (Waste of electrical and electronic equipment) symbol requires battery disposal outside of other household waste per local regulations. Contact your city office, waste disposal service, or retailer for guidance.



The **CE** (Conformité Européenne aka European Conformity) mark is a declaration from the manufacturer that the product meets applicable European Directives and Regulations for health, safety, and environmental protection.



The **UKCA** (UK Conformity Assessment) mark is a declaration from the manufacturer that the product meets applicable UK Regulations for health, safety, and environmental protection.



The **Regulatory Compliance Mark** is a visible indication of a product's compliance with all applicable ACMA (Australian Communications and Media Authority) regulatory arrangements, including all technical and record-keeping requirements regarding electrical safety and/or electromagnetic compatibility (EMC).

DECLARATION OF CONFORMITY

Hereby, ACCO Brands USA LLC at 4 Corporate Way, Lake Zurich, IL 60047 USA, declares that this wireless controller is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address: PowerA.com/compliance



[POWERA.COM/SUPPORT](https://www.powera.com/support)

Service client

ACCO BRANDS USA LLC, 4 CORPORATE WAY, LAKE ZURICH, IL 60047
2-YEAR LIMITED WARRANTY. VISIT POWERA.COM FOR DETAILS.









Documents / Resources



[PowerA 1509756-01 CP5.A Plus Bluetooth Controller](#) [pdf] User Manual
1509756-01, CP5.A Plus Bluetooth Controller

References

-  [ACCO Brands](#)
-  bluemouth.com.au
-  [PowerA | PowerA](#)
-  [PowerA | PowerA](#)
-  [Declaration of Conformity | PowerA](#)
-  [Support | PowerA](#)